



Bose SoundLink Mini II Battery Replacement

This guide will help users replace/disassemble the battery of the Bose Soundlink Mini II.

Written By: Devon



INTRODUCTION

Speaker not turning on? This guide will help you replace the battery of the Bose Soundlink Mini II.

Note: Removing and reinstalling the battery requires the use of a soldering iron and a lot of careful disassembly.



TOOLS:

- [T9 Torx Screwdriver](#) (1)
- [64 Bit Driver Kit](#) (1)
- [Soldering Iron](#) (1)
- [Desoldering Braid](#) (1)
- [Solder](#) (1)



PARTS:

- [Bose SoundLink Mini II Replacement Battery](#) (1)

Step 1 — Battery



- Flip the speaker over onto its back.

Step 2



- Gently remove the rubber base from speaker by pulling around the edges.

Step 3



- Remove the four 6mm T9 Torx bit screws from the corners of the battery.

Step 4



- Carefully lift the battery from the side nearest the four gold contact pins, but don't try to fully remove it yet.
 - ⓘ At this point, the battery remains connected via four wires to the power supply board.
- Carefully desolder the four wires from the power supply board in order to completely detach the battery. There is very little room for the soldering iron without damaging the case or the board; you may want to remove the board first.
 - For help with soldering, see the [soldering guide](#).
 - ⓘ Alternatively, you may remove the battery and power supply board together, without any soldering, but access requires some [additional disassembly](#) while carefully leaving the battery connected via the wires the entire time.

To reassemble your device, follow these instructions in reverse order.