



Asus ROG GL551J RAM Replacement

Asus ROG GL551J guide on how to remove and replace the RAM

Written By: Jason Nguyen



INTRODUCTION

Use this guide to replace the RAM on your Asus ROG GL551J. Make sure that any new RAM has a DDR3 connection type to correctly fit into this device.

TOOLS:

- [Mako Driver Kit - 64 Precision Bits](#) (1)
-

Step 1 — Battery



- Lay device on a flat surface with battery facing up.
- ⓘ Be sure to wear ESD or Rubber gloves to protect the computer components

Step 2



- Push right on the latch found below the battery

Step 3



- Battery should release upwards. Pull battery out.

Step 4 — RAM





- Remove the two screws securing the access panel to the laptop.

Step 5



- Slide access panel out and remove.

Step 6

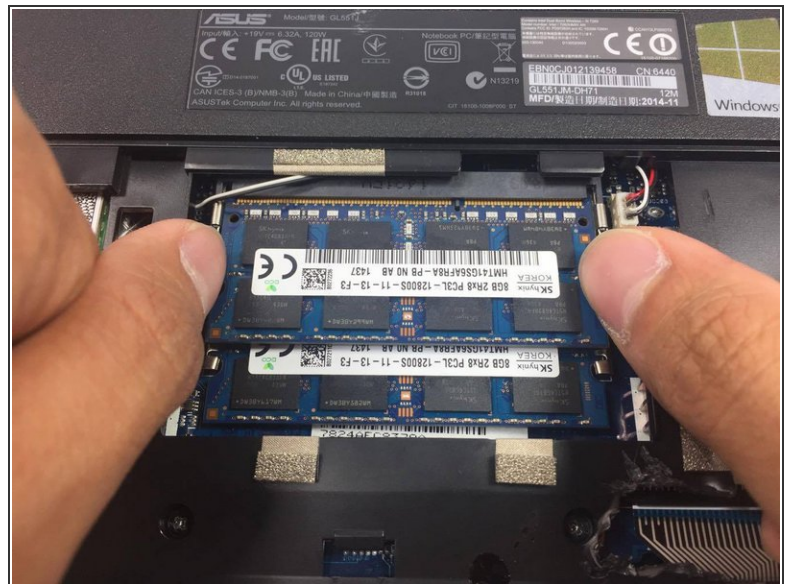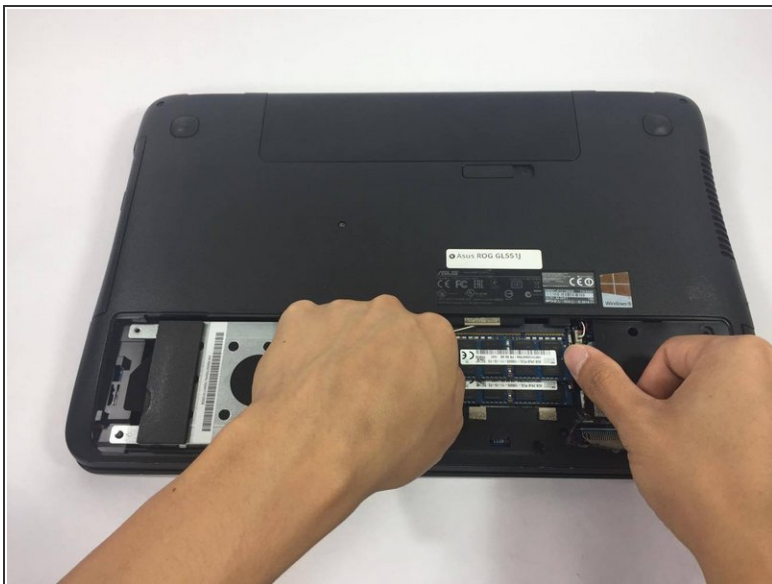

- Place thumbs on the locking tabs of both sides of the RAM stick and push outwards to unlock.

Step 7



- RAM should pop up at about 45 degrees. Pull outwards with fingers on the side of the RAM to remove.

To reassemble your device, follow these instructions in reverse order.