


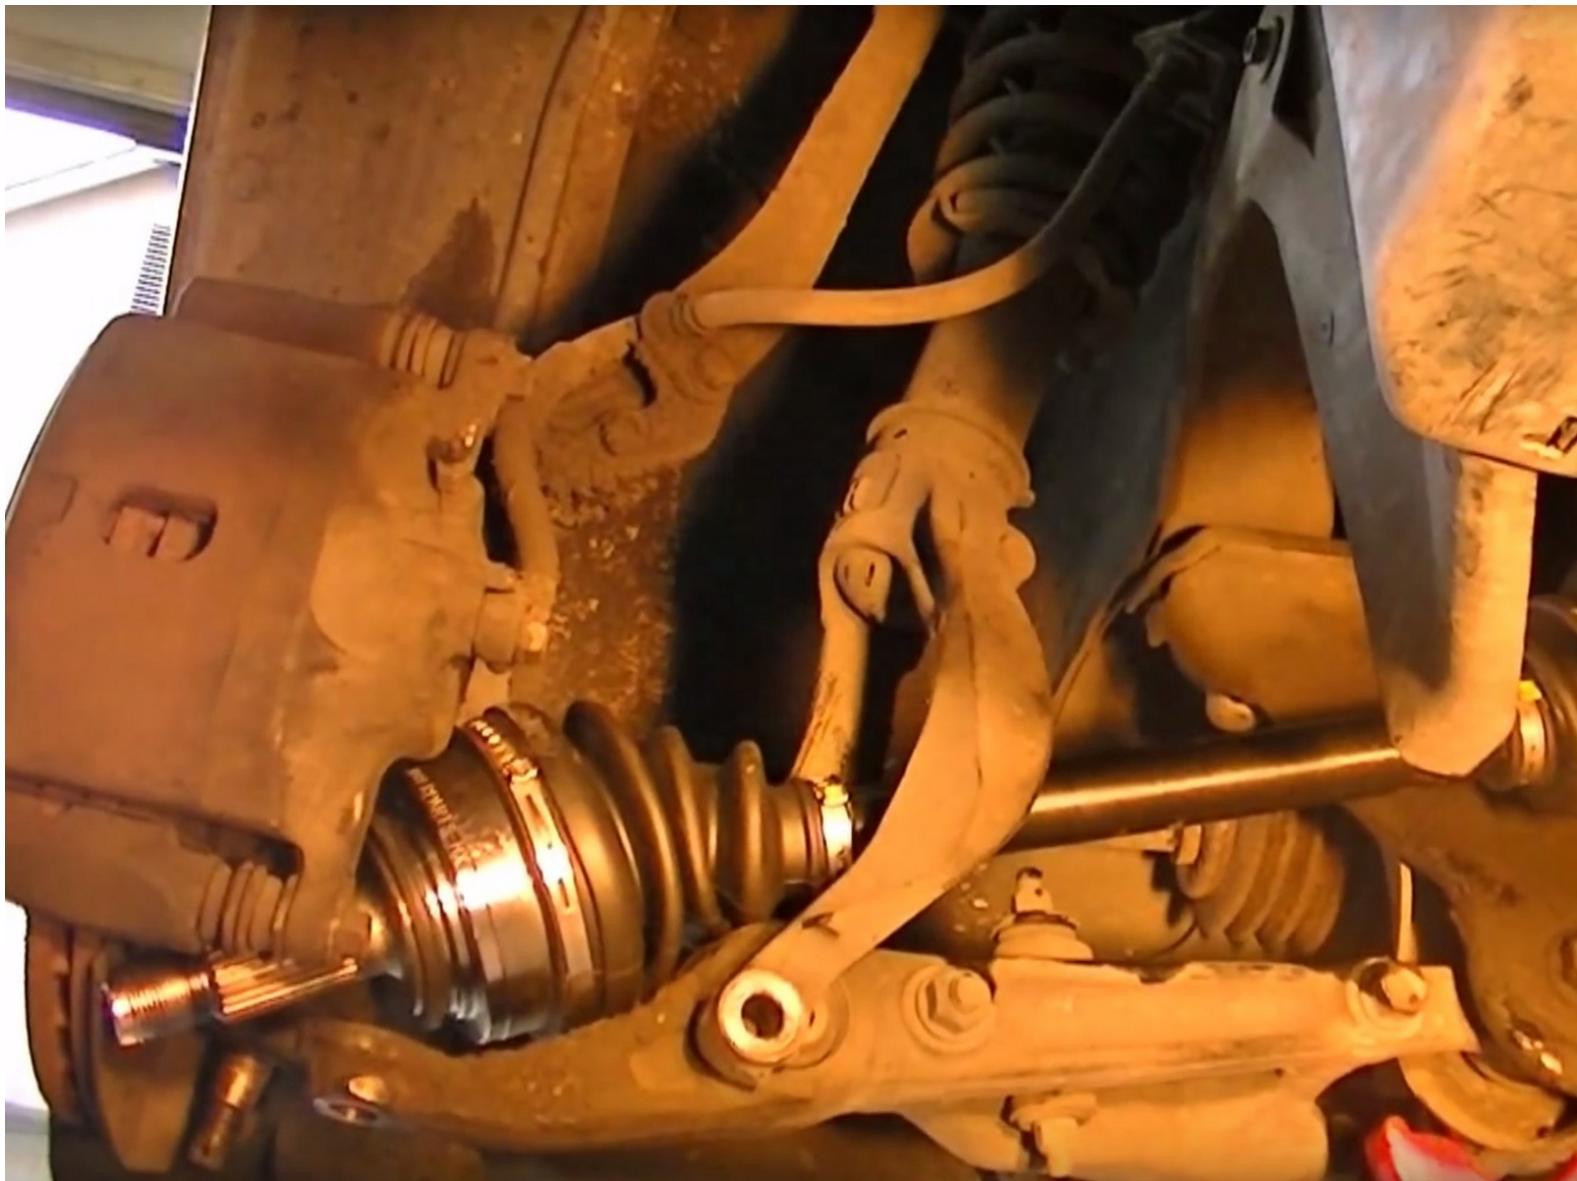

1996-2000 Honda Civic Drive Axle Replacement

A video tutorial on how to change an axle on a 1996-2000 Honda Civic.

Written By: eCuration



INTRODUCTION

If you are experiencing excessive vibrations and or a noise when turning, then it may be time to replace a drive axle.

Follow this video tutorial by YouTuber [Paul Wyndham](#) to complete the replacement yourself.

Safety

If this is your first time working on a vehicle read our [safety tips](#) before proceeding.



TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stand](#) (1)
- [Oil Drain Pan](#) (1)
- [Torque Wrench](#) (1)
- [1/2" Drive Ratchet](#) (1)
- [17 mm Socket](#) (1)
- [17 mm Box End Wrench](#) (1)
- [Hammer](#) (1)
- [Pin Punch](#) (1)
- [Pry Bar](#) (1)
- [Large Needle Nose Pliers](#) (1)
- [Phillips #2 Screwdriver](#) (1)
- [Safety Glasses](#) (1)
- [Latex or nitrile gloves](#) (1)
- [Paper Towels](#) (1)



PARTS:

- [CV Drive Axle Honda Civic 1996-2000](#) (1)

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-08 01:49:46 AM.