



How to remove Afterglow Wireless PS3 Controller Back Cover

This guide will show the steps in removing the back cover of a Afterglow Wireless PS3 Controller.

Written By: Aj Coello




INTRODUCTION

Removing the back cover from the Afterglow Wireless PS3 Controller requires the removal of seven screws.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Cover

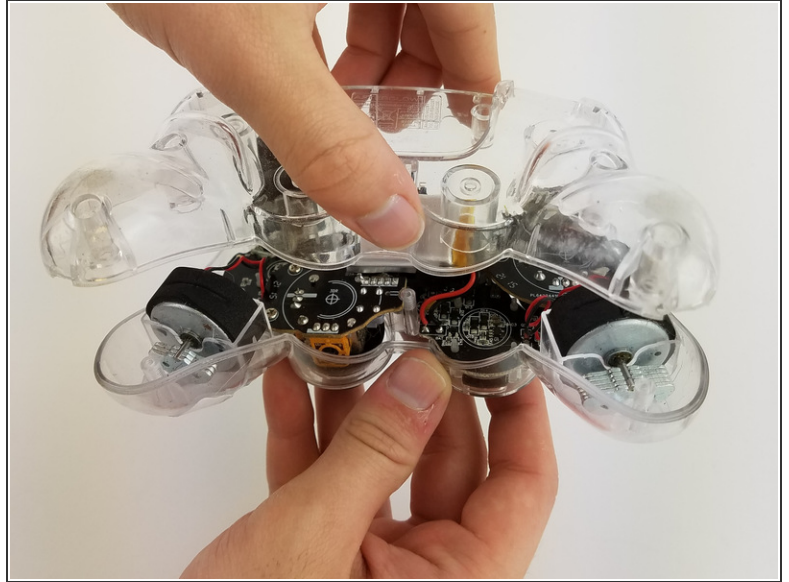

- Lay the controller face down on a flat surface and remove the seven 9mm Phillips #0 screws on the back of the controller.
- Lift up and remove the controller back plate.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 08:32:18 AM.