



# LeapFrog LeapTV Battery Replacement

Follow this guide to replace your battery in your LeapFrog Leap TV.

Written By: Matt Mote



## INTRODUCTION

This guide will show you how to replace the controller batteries.

---

### TOOLS:

- [Metal Spudger](#) (1)
-

## Step 1 — Battery



- Use the Metal Spudger to push the release clip on the battery cover.

## Step 2



- Lift the cover off.

### Step 3



- The battery holder is now visible with the removal of the cover.

---

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 03:32:17 PM.