



# Sony Handycam HDR-CX580V Battery Replacement

This guide will help you to remove the battery in your Sony Handycam HDR-CX580V.

Written By: Joyelle Woodson



## INTRODUCTION

Removing the battery is something that can be done by hand and should only take a few seconds to complete. Be sure to exercise caution when removing the battery as to avoid damaging the camera or harming yourself.

## Step 1 — Battery



- Locate the slider labeled "BATT" and pull it back from the battery with your thumb.

## Step 2



- At this point, you should be able to remove the battery by simply lifting it from the camera.
- ⓘ The camera provided for guide-creation did not include a battery. However, the battery position should be the same.

To replace a new battery, simply snap the battery into the slot from which you removed it from.