



Canon EOS Rebel G Front Panel Replacement

How to remove front panel in order to access other components of the device.

Written By: Kyle Reis



INTRODUCTION

This guide shows you how to install the front panel of your camera.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Front Panel



- Using a #00 Phillips screw driver, remove three 4.4 mm Phillips screws as indicated by the red circles.

Step 2



- Using your finger, peel back the textured grip so the components are separated.

Step 3



- Using the flat end of a spudger, loosen the connection between the front panel and the device.
- Remove the front panel using your hands.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-12 09:49:04 PM.