



Neato Botvac 65 Filter Replacement

Neato Botvac65 filter replacement.


Written By: Sebastien Daub



INTRODUCTION

Step by Step instructions to replace Neato Botvac65 used/faulty filter.

Step 1 — Filter

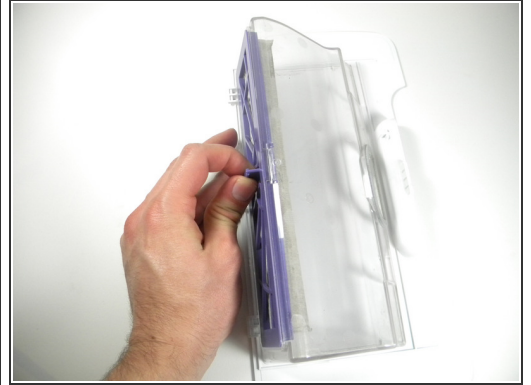

- Carefully grasp the back latch and open to reveal filter compartment.

Step 2



- Pull out the used filter slowly.

Make sure latch is closed properly in order for Botvac to function.

This document was last generated on 2017-07-10 04:18:59 AM.