



# Lenovo G780 RAM Replacement

This guide demonstrates RAM replacement and removal for the Lenovo G780.

Written By: Robert Bishop



---

## INTRODUCTION


If you wish to upgrade or replace RAM on the Lenovo G780, follow this guide.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery

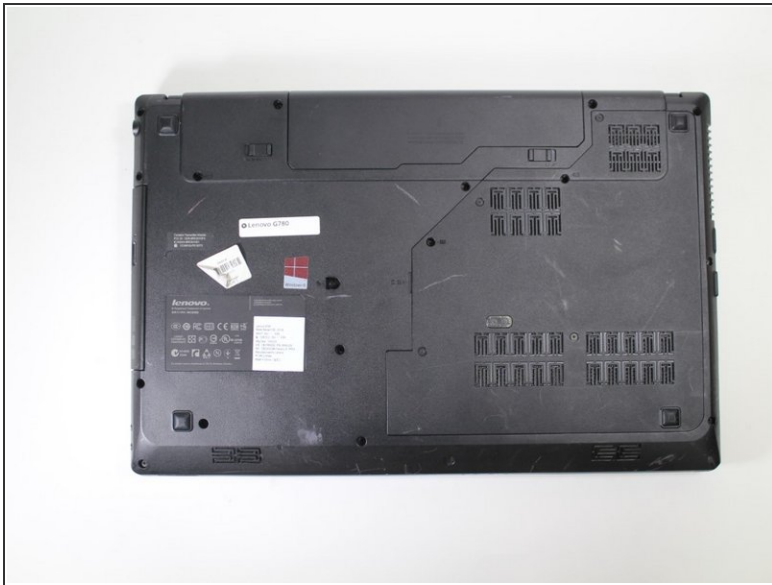


- Turn off the computer.
- Slide the battery-lock switch on the bottom of the laptop to the unlocked position.

## Step 2



- Hold the battery release switch in the unlocked position and remove the battery.

### Step 3 — Back Panel

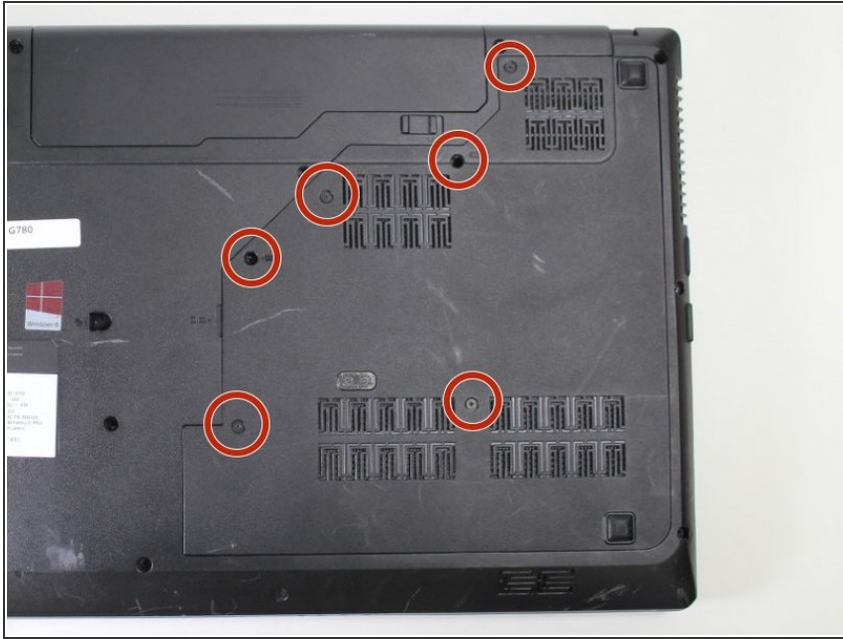

- Using a #0 Phillips screwdriver, remove the six 9mm panel screws from the bottom of the device.


### Step 4



- Remove the back panel.



## Step 5 — RAM

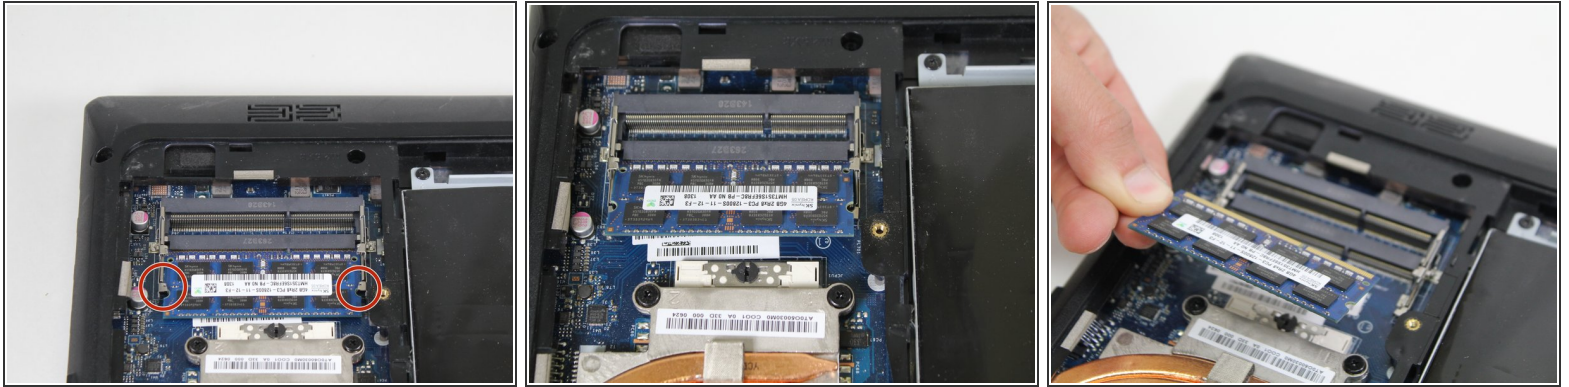

- Push the two locks outwards to release the RAM.
- Carefully pull the RAM module from its socket.

To reassemble your device, follow these instructions in reverse order.