



# HP iPAQ HW6515 SIM Card Replacement

This guide will instruct you on how to install a SIM card into the iPAQ.

Written By: Ashley Schaefer



## Step 1 — Battery



- Flip the HP iPAQ HW6515 over with the screen facing down.
- Take the back cover off by pressing on the small silver button while pulling back then up on the case.
- Place the back of the case aside for now.

## Step 2



- Remove the battery by pulling up on the black tab.

## Step 3 — SIM Card



- Place finger on top of SIM card and slide it to the left.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-19 09:11:10 PM.