



Sony Vaio PCG-4K1L RAM Replacement

Accessing the RAM in this computer is straightforward and requires minimal disassembly. One RAM slot allows up to 1.5 GB of PC2-4200 RAM.

Written By: Derek Nollsch




**TOOLS:**

- [Phillips #00 Screwdriver \(1\)](#)

**PARTS:**

- [PC2-4200 512 MB RAM Chip \(1\)](#)

Step 1 — RAM

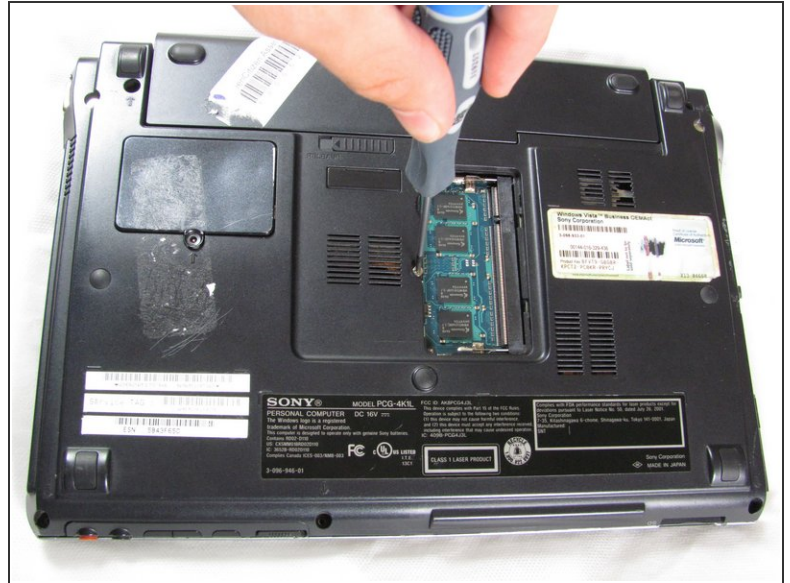

- Locate the indicated cover on the back of the laptop (cover not shown in picture)
- Unscrew the small screw shown using a #00 Phillips Head Screwdriver, and remove the cover.

Step 2



- Remove the installed RAM by grabbing the end and forcefully removing from the slot shown (RAM not shown in picture)
- Insert new PC2-4200 RAM making sure to line up notch and inserting RAM until you hear an audible 'click'

To reassemble your device, follow these instructions in reverse order.