




# PE254 Nose Pad Replacement

This guide will walk you through replacing your eyewear nose pads.

Written By: Julianna Lewis

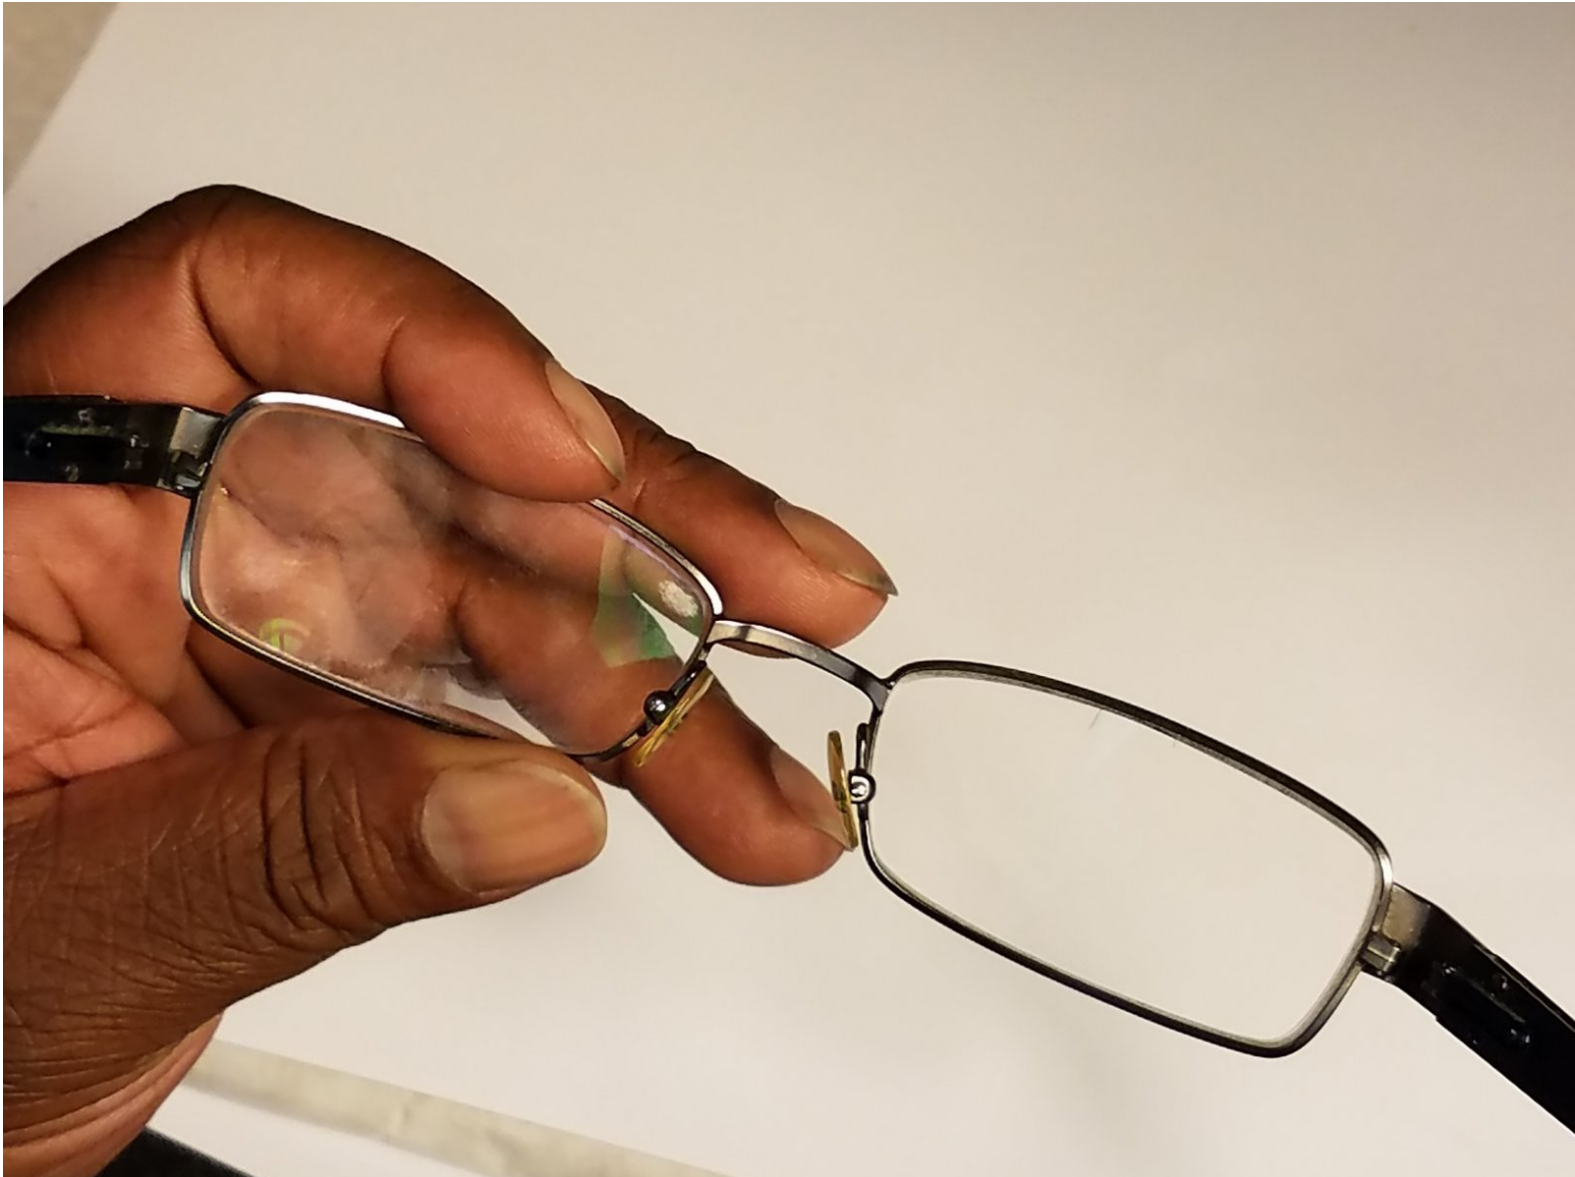

---

## INTRODUCTION


This guide will walk you through replacing your eyewear nose pads.

---

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [Scotch tape](#) (1)
  - [eyeglass screws](#) (1)
  - [Eyeglass Nose Pads](#) (1)
-

## Step 1 — Nose Pad

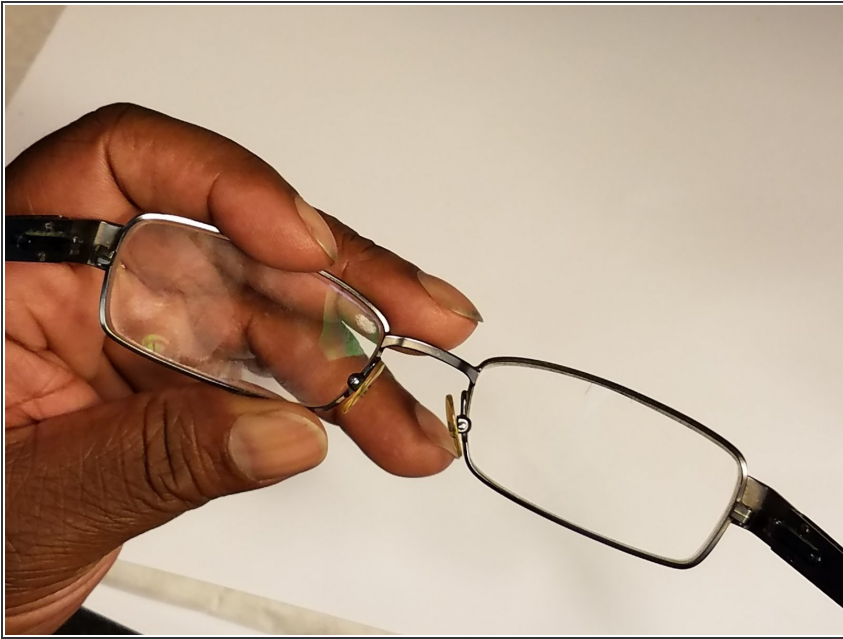


- Assess the eyewear for nose pad damage or cracks.

## Step 2

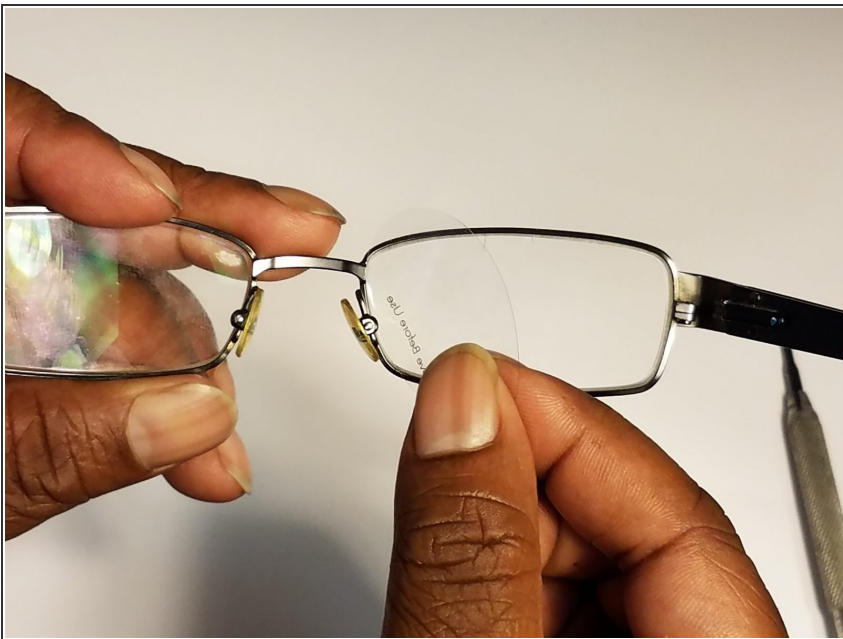



- Place a 3-inch strip of tape on the lenses to protect them from being scratched.

### Step 3

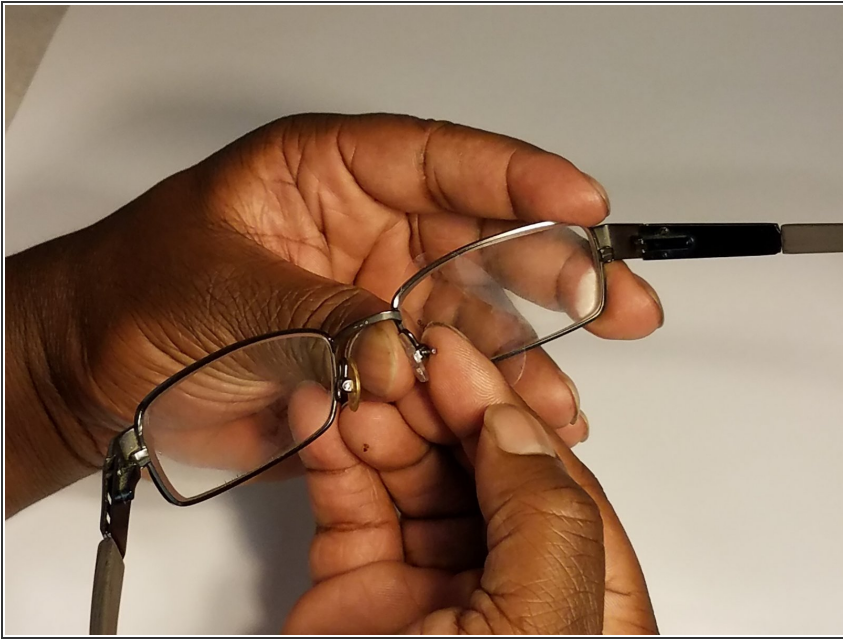

- Unscrew the nose pad screw using a Phillips-head screw driver. Turn the screw counter-clockwise until the screw can be removed

### Step 4

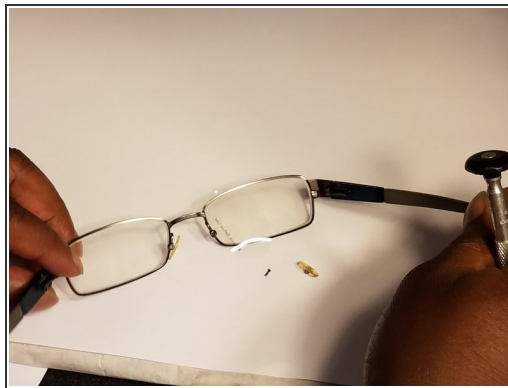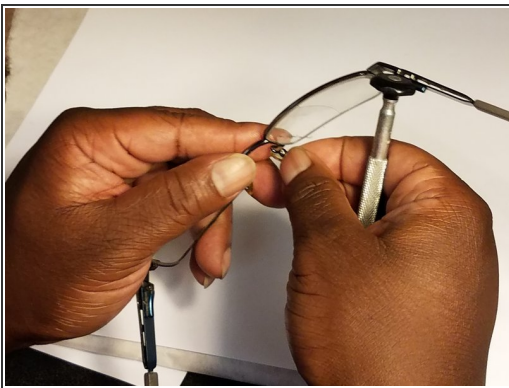

- Remove the old nose pad and replace with a new one.

## Step 5



- Place the screw back inside of the nose pad and turn clockwise until the screw is tight. Do not overtighten.

## Step 6



- Repeat steps on other side. cuidado al cerrar recuerdo