



Batteries

This guide shows you how to replace the batteries of your HP Photosmart 935 camera.

Written By: Clay Young



INTRODUCTION


This guide will teach the reader to open the battery case and then install new batteries.

Step 1 — Batteries



- Flip the camera over so the bottom is facing you.

Step 2

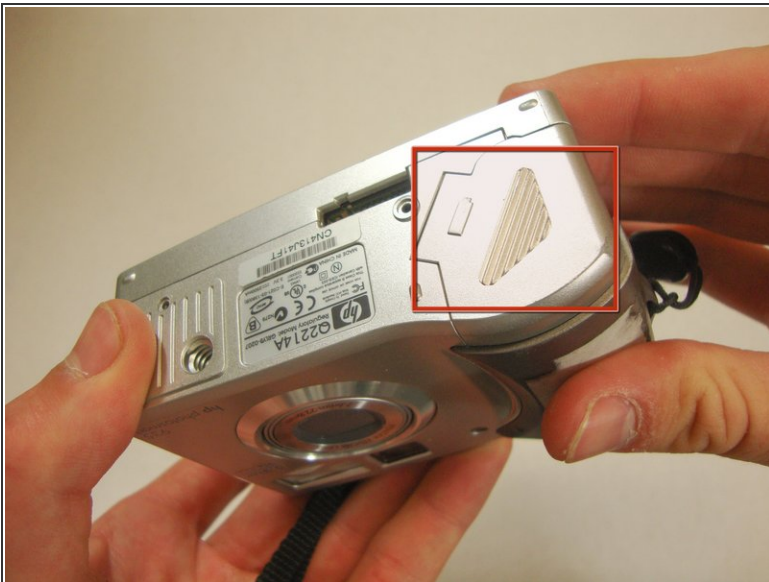

- Open the cover on the bottom by sliding it in the direction of the arrow.

Step 3



- Remove the batteries by pulling up on the top with your fingers.

Your camera should be ready to turn on now.

This document was last generated on 2019-07-21 08:31:51 PM.