



Dell Inspiron 910 RAM Replacement

This guide will teach you how to remove and replace the RAM from your Dell Inspiron 910 Laptop.

Written By: Kyle Beekman



INTRODUCTION

In this guide it will be demonstrated how to replace the memory on a Dell Inspiron 910 laptop.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove Battery



- Locate the release tabs located on either side of the battery, on the bottom of the laptop
- Push the release tabs toward the center of the device.
- Remove the battery.

Step 2 — Preparation



- ★ Remember to power off the device before starting!
- Disconnect any cables or external devices from the laptop, then flip it and remove the battery by pressing the battery tabs inward.

Step 3



- Locate the large black panel with two screws holding it in place. (This is the panel with ventilation holes)
- Unscrew both of the screws using a Philips Screwdriver.

Step 4



- Remove the panel by pulling upward.
- ⚠ Removal may require some force!

Step 5



- After removing the panel, locate the memory modules.
- Look for the silver tabs on either side of the white plastic holding the RAM in place. Then gently remove the RAM.

Step 6 — For Reinstallation



- Depress the RAM until it locks into place; there should be an audible clicking noise when it does so and the gold contacts should be barely visible.
- ⓘ Congratulations! You have completed the guide.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-12-23 11:31:43 PM.