



2006-2011 Honda Civic Cabin Air Filter Replacement

A video tutorial on how to change the old worn out cabin air filter on a 2006-2011 Honda civic.

Written By: Huy Le



INTRODUCTION

Replacing the cabin air filter is an important part of the maintenance required when taking care of a vehicle. The filter's job is to filter the outside air of pollutants and pollen before it enters the vehicle cabin.

Follow this easy video guide and replace the air filter every 15,000 to 25,000 miles.



PARTS:

- [Cabin Air Filter](#) (1)
-

To reassemble your device, follow these instructions in reverse order.