


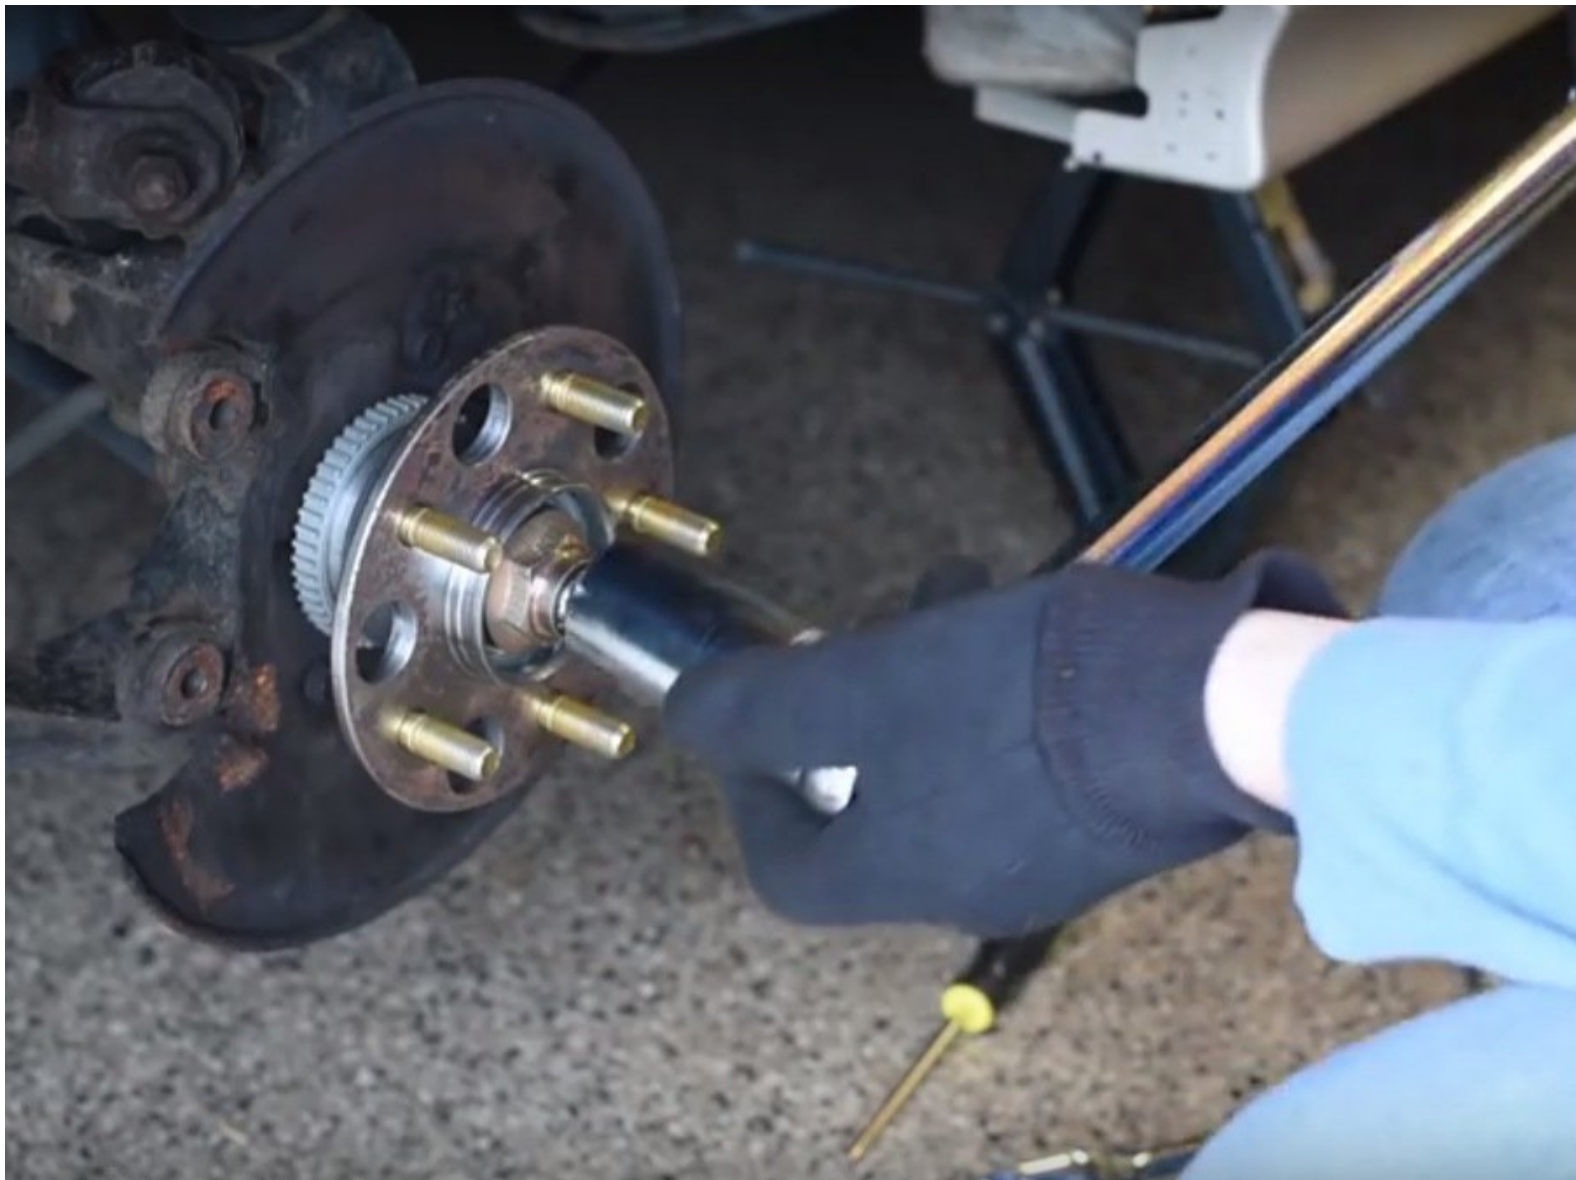

1998-2002 Honda Accord Rear Wheel Bearing Hub Replacement

A video tutorial on how to change the rear wheel bearing hub assembly on a 1998-2002 Honda Accord.

Written By: eCuration



This document was generated on 2020-11-19 03:02:19 PM (MST).

INTRODUCTION

If your vehicle is making a loud grinding sound when in motion and or any unusual noises such as knocking, humming, growling, etc, then it may be time to change out the wheel hub bearings.

Follow this video tutorial by YouTuber [Igor Kadulenkov](#) to complete the replacement yourself.

Safety

If this is your first time working on a vehicle read our [safety tips](#) before proceeding.

TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stand](#) (1)
- [Wheel Chocks](#) (1)
- [3/8" Drive Ratchet](#) (1)
- [10" Ratchet Extension](#) (1)
- [Impact Driver](#) (1)
- [Torque Wrench](#) (1)
- [Hammer](#) (1)
- [Chisel](#) (1)
- [Pin Punch](#) (1)
- [32mm Socket](#) (1)
- [400 Grit Sandpaper](#) (1)
- [Moly Grease](#) (1)
- [Anti-Seize Lubricant](#) (1)
- [Flathead Screwdriver](#) (1)
- [12mm Socket](#) (1)

PARTS:

- [Wheel Bearing and Hub Assembly](#) (1)

To reassemble your device, follow these instructions in reverse order.