




Asus U50F-RBBAG05 Battery Replacement

This is a guide for the replacement of the battery of the Asus U50F-RBBAG05.


Written By: Kelly Greeling

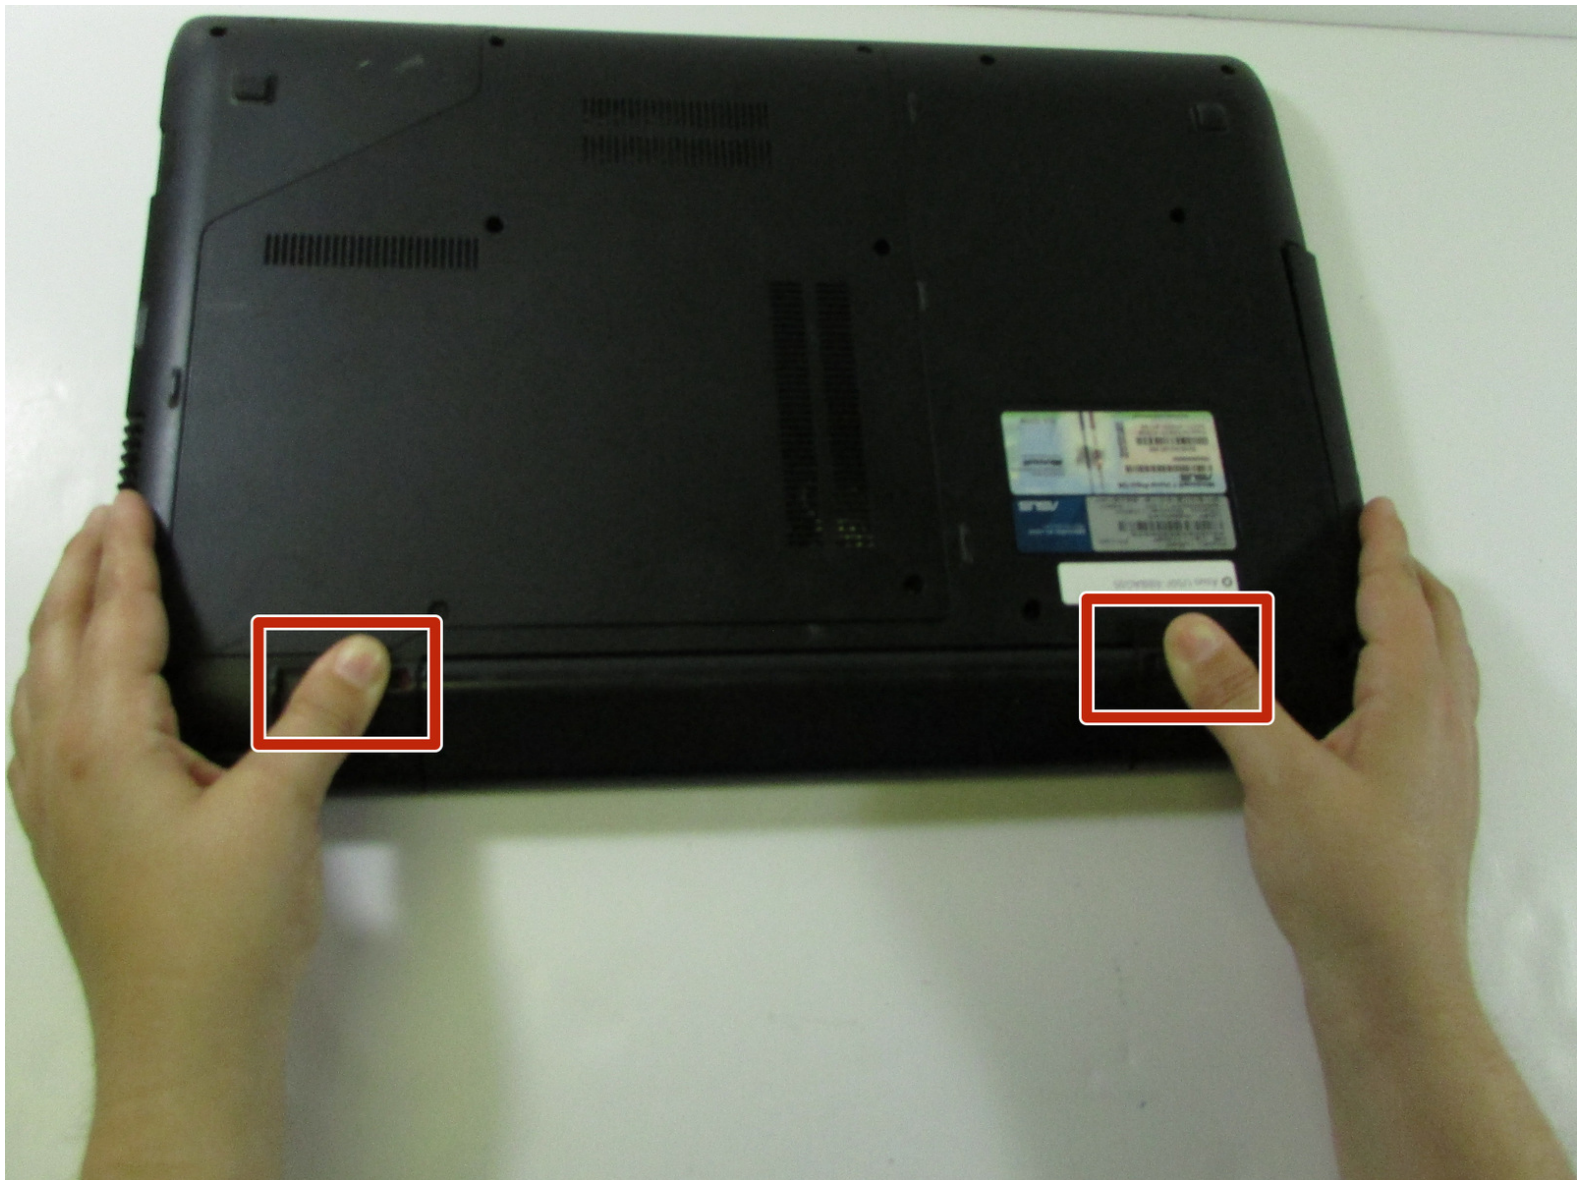

INTRODUCTION


This guide shows how to remove/replace the battery of an Asus U50F-RBBAG05.

Step 1 — Battery

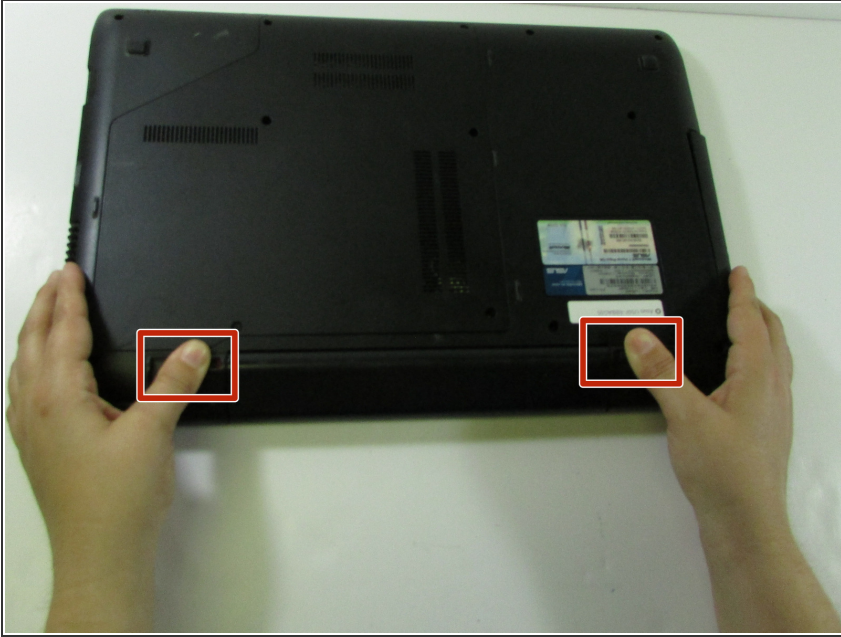

- Turn the laptop over so the bottom is facing up.
- Slide the tabs on either side of the battery away from the battery, toward the edges of the laptop.
- Slide the left tab to the left to lock it into the unlocked position. Red showing next to the tab signifies that it's unlocked.
- ⓘ You will have to hold the right tab to the right to keep it unlocked while removing the battery.

Step 2

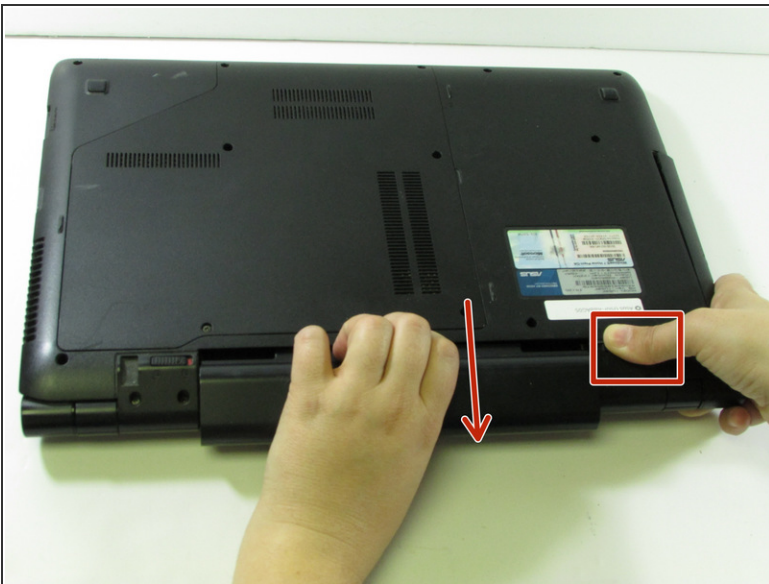

- Hold down the tab on the right while sliding the battery out.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-19 06:47:27 PM.