


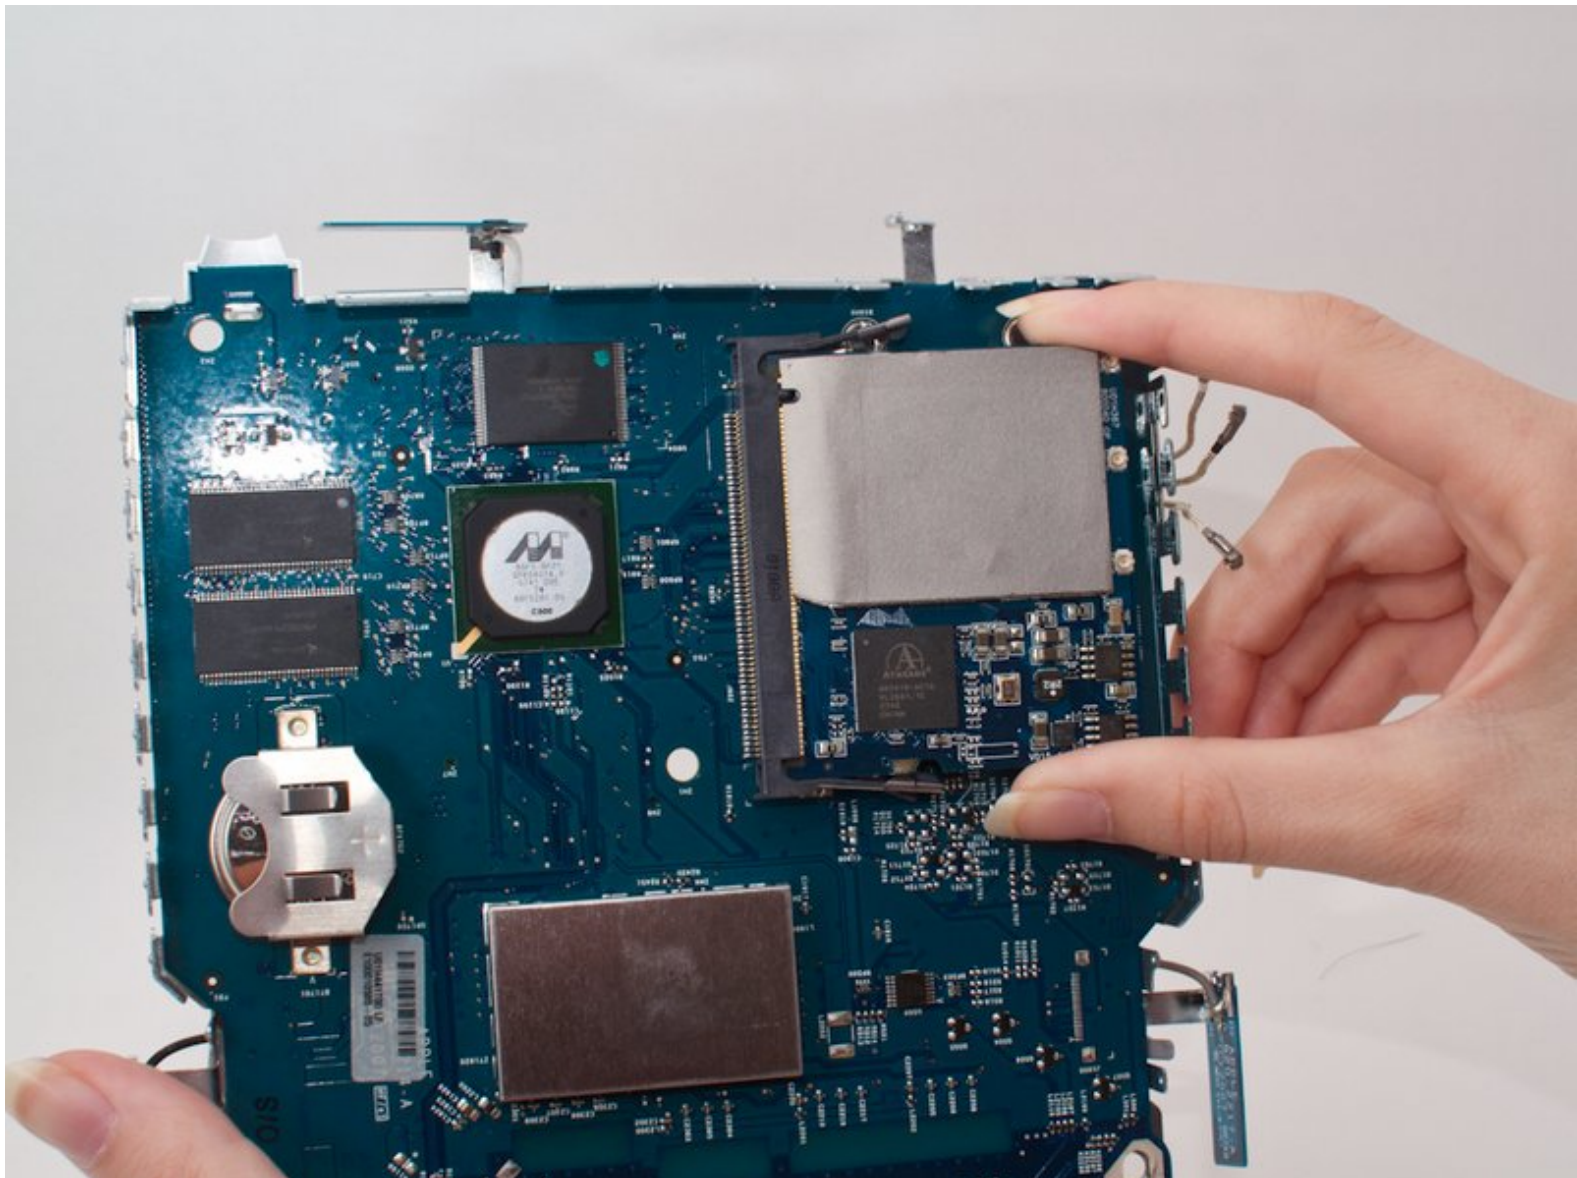

Apple AirPort Extreme Model A1354 WiFi Card Replacement

This guide shows how to replace the Wi-Fi card.

Written By: Daniel Wagstaffe



INTRODUCTION

If the base station is not sending out a signal, the Wi-Fi card may need to be replaced.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-


Step 1 — Outer Case



- First start by peeling off the outer rubbery covering on the bottom of the device.


⚠ CAUTION: This part is very fragile, so it is recommended that a blow dryer is used on the covering to heat it up. Simply blow dry the covering while slowly peeling it away, and the covering will not tear.

Step 2

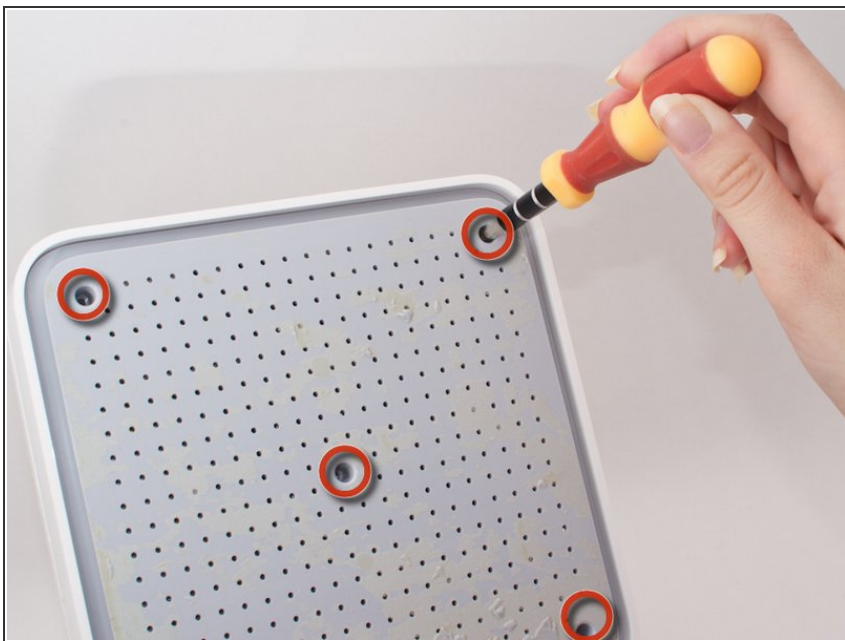


- After removing the rubber covering, unscrew the five 4.9mm Phillips screws in the holes of the plastic casing.

Step 3

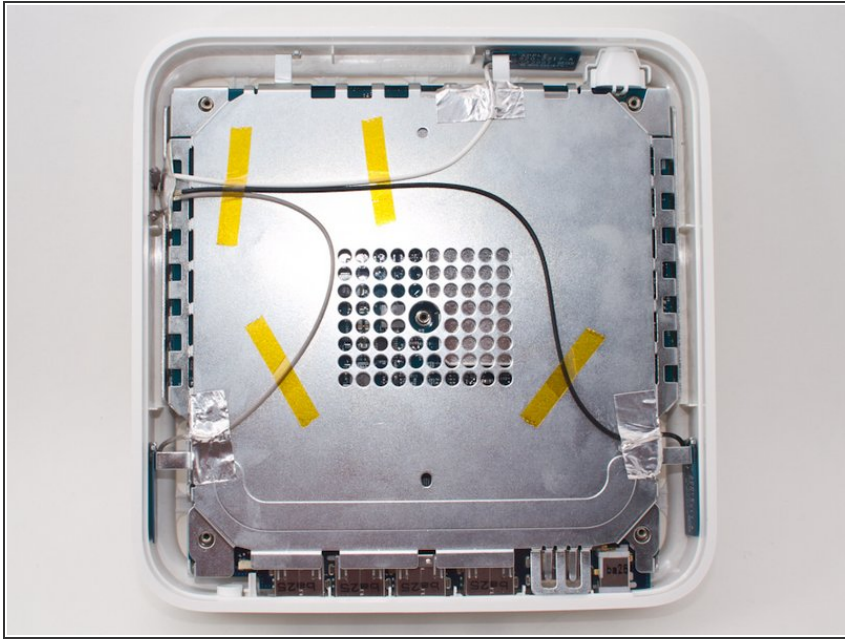


- After unscrewing all five screws, remove the plastic casing. The back should now look like the picture shown.

Step 4

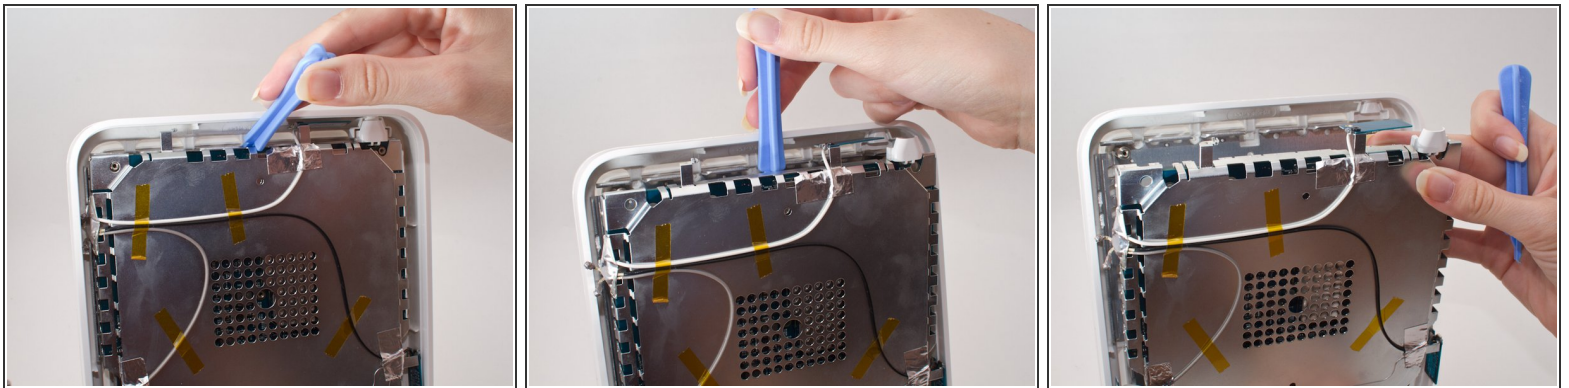


- The inner metal casing is latched inside the outer white plastic shell, so insert a pry tool underneath the metal casing and pry it apart from the shell.
- It should make a click when it comes apart.

Step 5

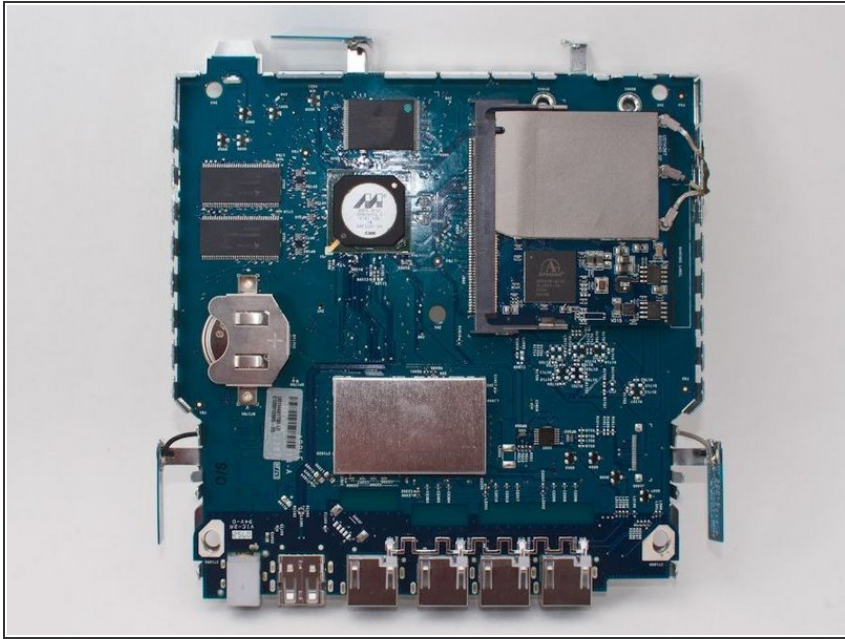


- Remove the outer casing.
- The exposed logic board should look like this.

Step 6 — WiFi Card

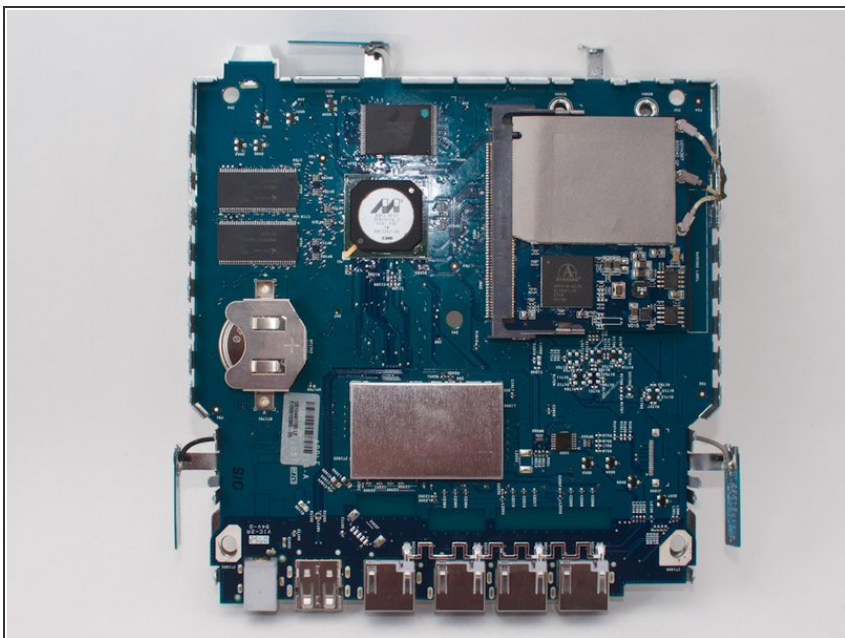


- Take the device out of the casing and orient it so that you can see the WiFi card.

Step 7

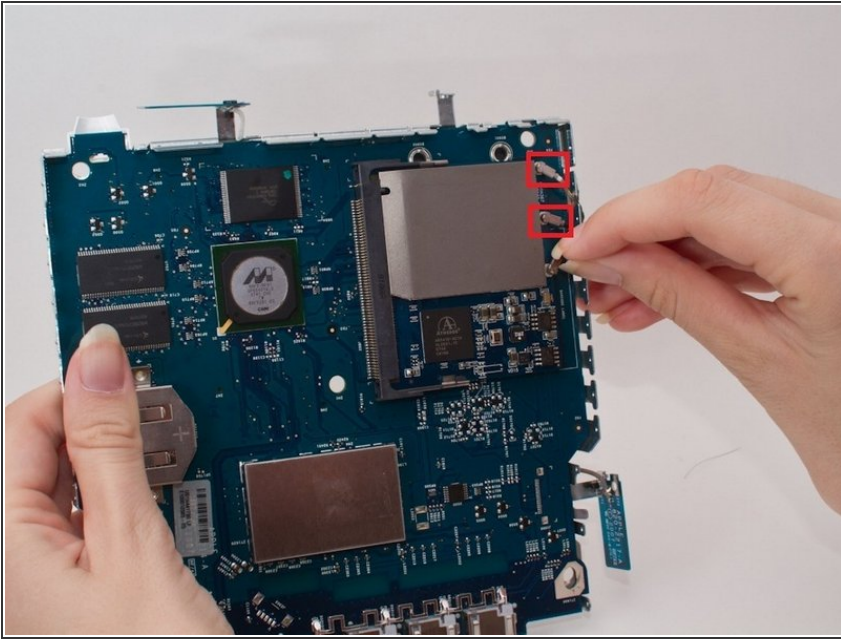


- Wires come from the three antennas and connect on the outer edge of the WiFi card.
- Carefully pull up on the end of one of the wires to disconnect it from the motherboard.
- Do this for the remaining two wires.

Step 8

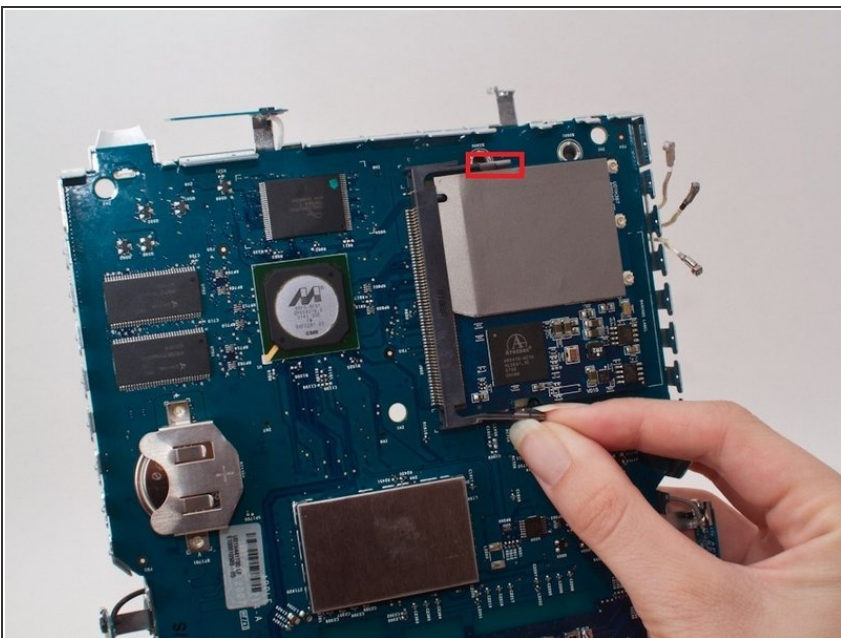

- There are two clips attached to the upper and lower ends of the WiFi card
- ⚠ CAUTION: For the following step, do not pull the clip after you have detached it. The clip is fragile and too much force may cause the clip to break.
- Grab the end of one of the clips and pull away from the WiFi card. This should make the clip visibly detached from the WiFi card.
- Do the same for the other clip.

Step 9

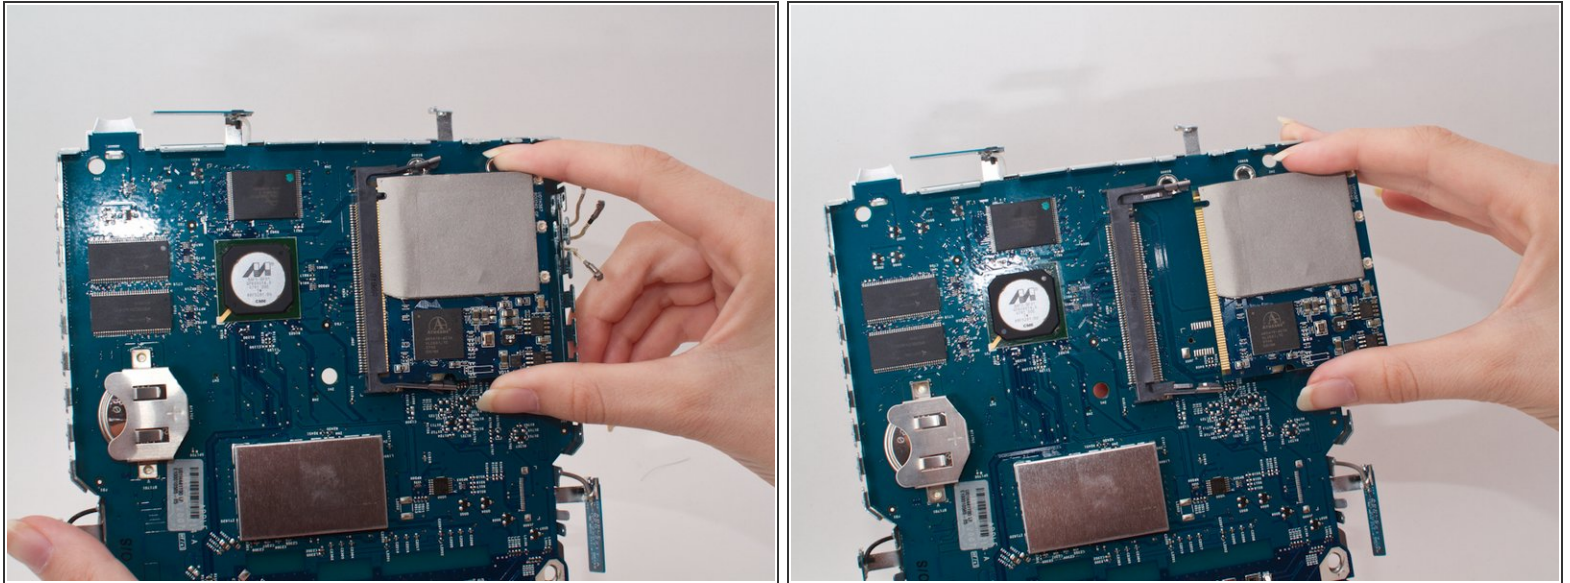

- Grasp the upper and lower ends of the WiFi card.
- Carefully pull the WiFi card to the right.

⚠ CAUTION: Do not pull UP (towards yourself) on the WiFi card when removing. The card is on a track that only allows it to move left and right. Forcing the card to move in other directions may result in breaking the track.

- Completely remove the WiFi card.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-15 07:21:48 PM.