



Dyson DC39 Origin Bin Replacement

Use this guide to replace the bin of your Dyson DC39 Origin.

Written By: Luke Matusiak



INTRODUCTION

Use this guide to replace the bin of your Dyson DC39 Origin.

Step 1 — Bin



- Push down on the gray button located next to the power button to release the bin from the ball housing.
 - Pull the bin away, then up from the ball housing to remove it.
- If the bin won't fit back into place during re-assembly, you may need to push the grey button again.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-17 04:18:48 PM.