



Acer Chromebook C740 LCD Screen Replacement

Replace the LCD Screen on a Acer Chromebook C740.

Written By: Grace Bassett



INTRODUCTION

The LCD screen replacement for the Acer Chromebook C740 requires removing the screen frame, removing several screws, and unplugging the the LCD screen.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Heavy-Duty Spudger](#) (1)

PARTS:


- [11.6" Chromebook LCD N116BGE-EA2REV.C1](#) (1)
- [Acer Chromebook C740 LCD Bezel](#) (1)

Step 1 — LCD Screen



- Power down the Chromebook and disconnect the power adapter.

Step 2

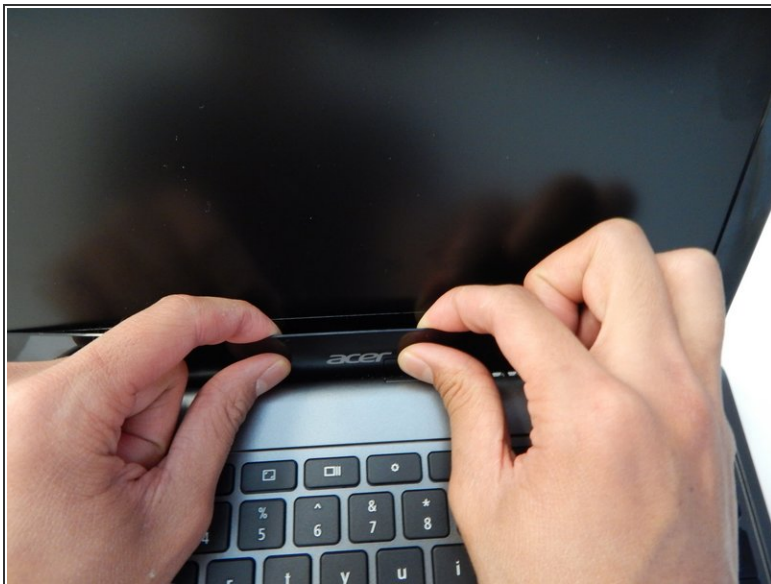

- With the Chromebook open and face up, pry the black screen frame with your fingers.
- Move slowly around the display to evenly remove it.
- ⓘ Clicking sounds indicate the panel is separating from the overall display.

Step 3




- Once the frame is separated from the display, angle the display assembly back .
- Lift up the portions of the frame covering the front two hinges with the spudger.

Step 4




- Remove the frame from the screen assembly by pulling the frame towards you.
- ⓘ Some adjustment of the display assembly may be needed so that the frame is not stuck near the hinges.

Step 5

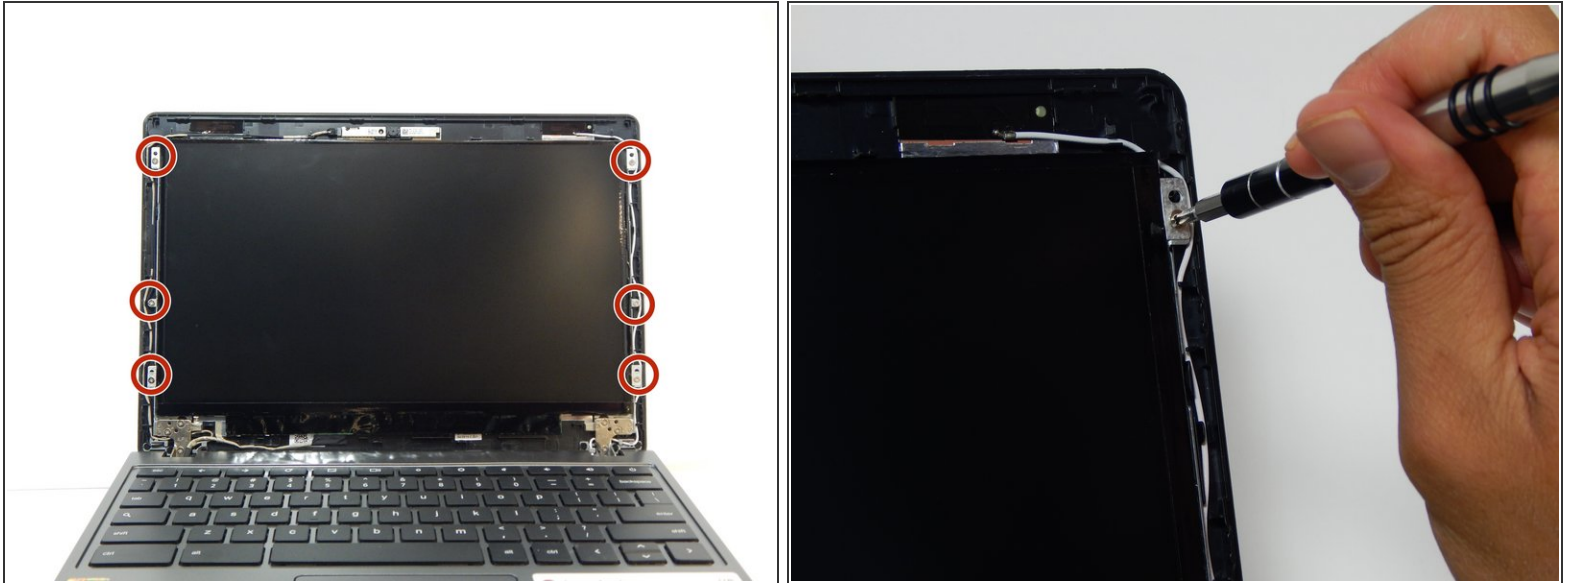

- Remove the six 3.35mm screws with a Phillips #0 Screwdriver.

Step 6

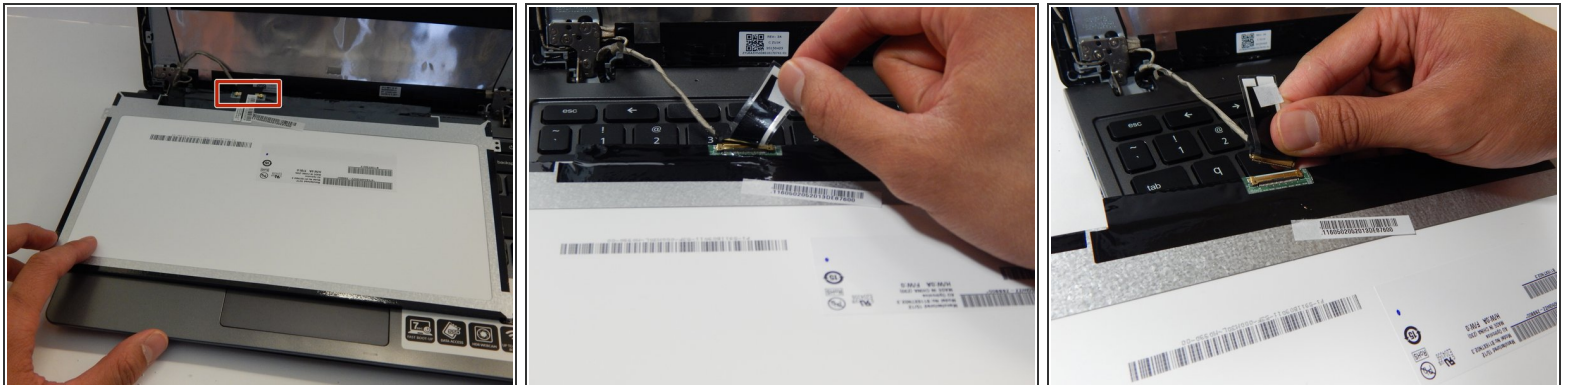

- Place the LCD screen face down on the keyboard.
- Remove the tape holding the black connector in place.
- Unplug the connector with your hands.

To reassemble your device, follow these instructions in reverse order.