



Kodak EasyShare C195 Memory Card Replacement

How to take out and insert the memory card

Written By: Alyssa



INTRODUCTION

This guide will show you how to remove and replace the memory card.



PARTS:

- [Memory Card](#) (1)
-

Step 1 — Memory Card



- First, access the slide door on the bottom left corner of the camera. To open, push down and to the left.

Step 2



- The memory card slot is located just below the batteries.
- To insert the memory card, make sure the writing is facing the batteries, and the cut off corner is at the top right. Put the card into the slot and push until you hear a click.
- You do not need to remove the batteries to insert the memory card.

Step 3



- This is what the memory card should look like when finished.

To remove, push the memory card until you feel a click. The card should pop out.

This document was last generated on 2019-07-16 11:10:48 PM.