



Panasonic D-snap SV-AV50 SD Card Replacement

This guide gives instructions for installing an SD card in the Panasonic D-snap SV-AV50.

Written By: Zoe Hinck



INTRODUCTION

The SD card stores videos and images that you record on your camera. You should remove the battery and SD card before opening the camera to access the screen, motherboard, flash, lens, or any other internal part of the camera.

Step 1 — SD Card



- Slide the bottom panel in the direction of the arrow on the panel.

Step 2



- Pull/lift open the battery cover in the direction directly away from the camera.

Step 3



- Push down on the SD card next to the battery in order to release the SD card.
- Pull the SD memory card out of the camera in the same way that you would pull out the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 07:16:29 PM.