



iMac Intel 20" EMC 2266 Access Door Replacement

Written By: Walter Galan



INTRODUCTION

Remove your access door to replace RAM chips or to open the case of your iMac.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Access Door



- Lay your iMac front side down on a table with the lower edge facing yourself.
- Loosen the single Phillips screw in the center of the access door.
- ⓘ This screw is captive in the access door.
- Remove the access door from your iMac.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 10:04:24 PM.