



LG Voyager Micro SD Replacement

This guide will show how to safely remove the micro SD card from the phone.

Written By: Michelle



 **TOOLS:**

- [iFixit Opening Tools](#) (1)
-

Step 1 — Micro SD



- Turn the phone onto its side so the label micro SD is facing upside down.
- Once on its side, lift the micro SD cover up and swivel it away from the opening.

Step 2



- The Micro SD card will appear as a thin plastic piece sticking out of the phone
- Gently push down on the card, you should hear a click, and then it will "spring" back at you.
- The card should be sticking out of the phone slightly once this is done.
- Remove the card from the slot

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 07:10:31 PM.