



# Canon PowerShot S50 Battery Replacement

In this guide you will find out how to remove the battery from the device.

Written By: Karim



---

## INTRODUCTION

Use this guide to remove the battery and replace it if you need to. Do this before doing any other work on the camera.

---

### **TOOLS:**

- [Fingers](#) (1)
-

## Step 1 — Battery



- Place camera LCD side up and press up on the battery door.
- Let it swing open until you can see the battery inside.

## Step 2



- Press down on the orange plastic.
- This will gently eject the battery from its compartment.

## Step 3



- Holding the edges, slide out the battery.

To reassemble your device, follow these instructions in reverse order.