




2003-2007 Honda Accord Serpentine Belt Replacement

A video tutorial on how to change the serpentine drive belt on a 2003-2007 Honda Accord.

Written By: eCuration

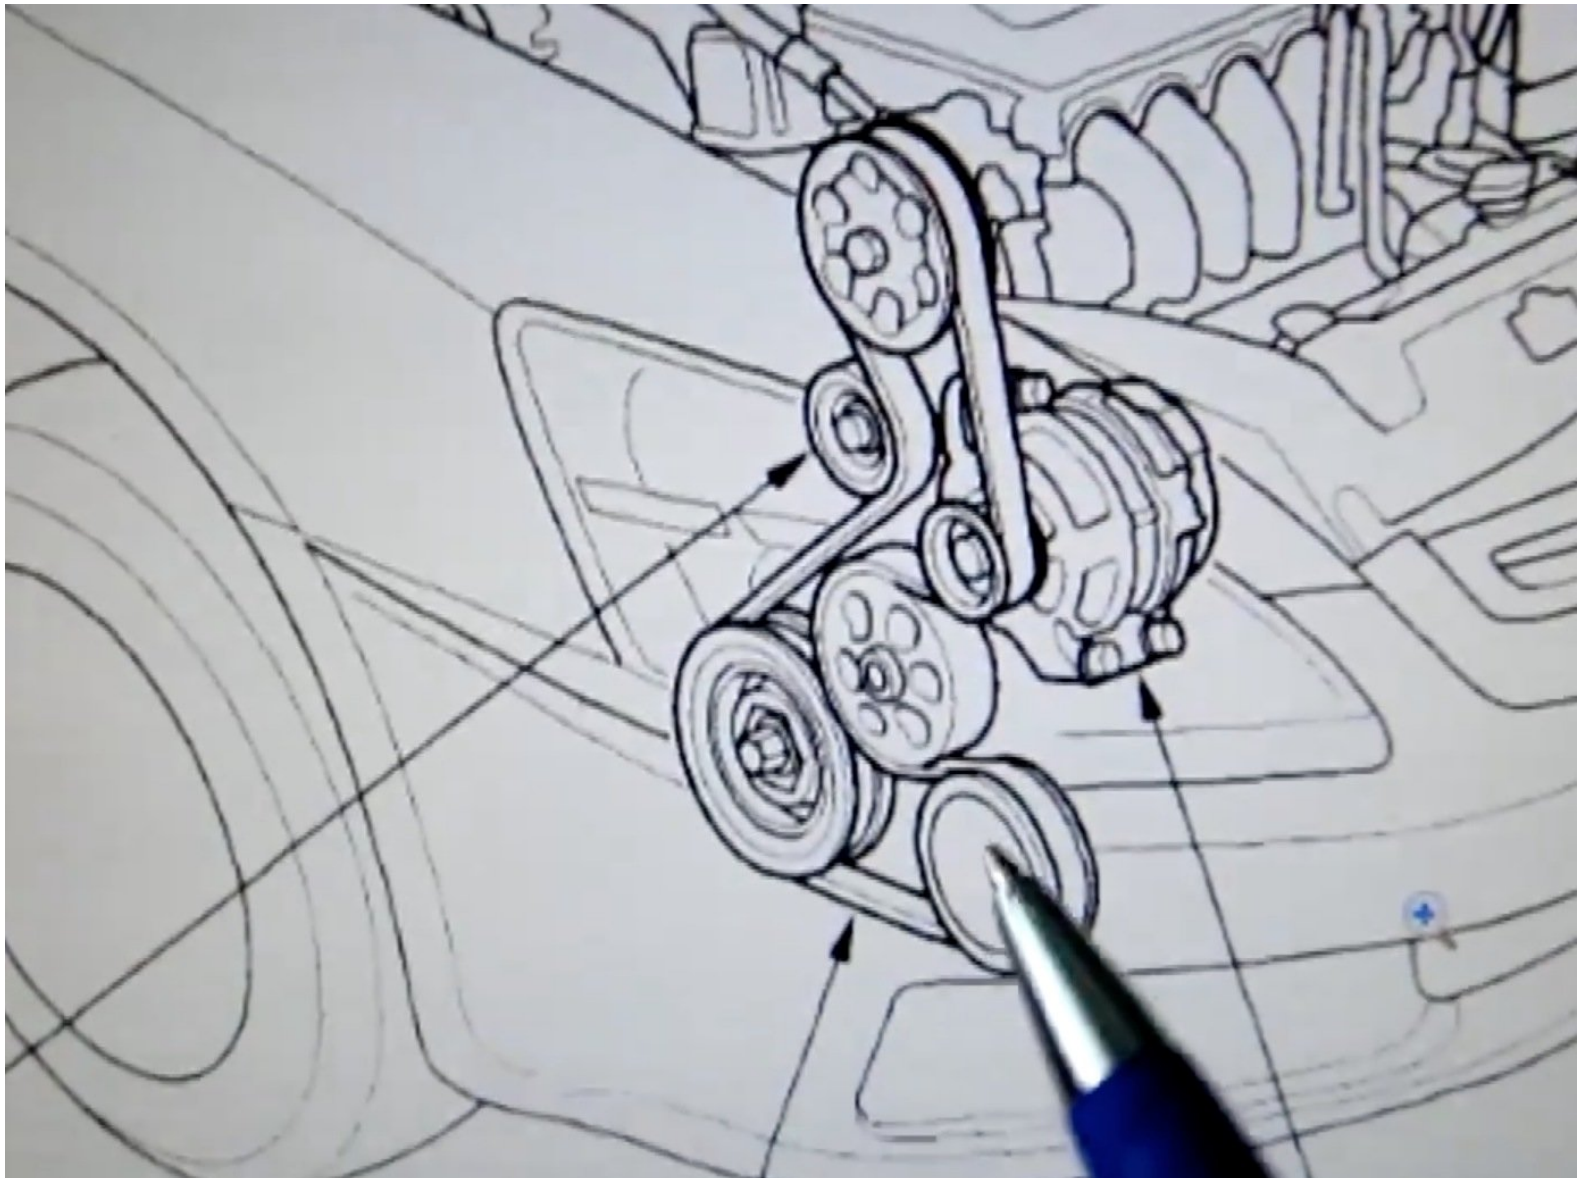

INTRODUCTION

The serpentine drive belt should be replaced every 65,000-105,000 miles.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to replace the belt yourself.



TOOLS:

- [17 mm Box End Wrench](#) (1)
- [14mm Wrench](#) (1)
- [Serpentine Belt Tool](#) (1)



PARTS:

- [Serpentine Belt](#) (1)

To reassemble your device, follow these instructions in reverse order.