



# 1998-2002 Honda Accord Timing Belt and Water Pump Replacement

A video tutorial on how to change the water pump and timing belt on a 1998-2002 Honda Accord.

Written By: eCuration



## INTRODUCTION

The timing belt and water pump should be replaced together every 60,000-75,000 miles.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the replacement yourself.

---

### TOOLS:

- [Impact Wrench](#) (1)
- [1/2" Drive Breaker Bar](#) (1)
- [3/8" Drive Ratchet](#) (1)
- [Socket 19mm](#) (1)
- [17 mm Socket](#) (1)
- [14 mm socket](#) (1)
- [12 mm Socket](#) (1)
- [10mm Socket](#) (1)
- [Pick Tool](#) (1)
- [White Out](#) (1)
- [Torque Wrench](#) (1)

### PARTS:

- [Engine Water Pump](#) (1)
  - [Timing Belt](#) (1)
-

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-14 12:24:50 AM.