



1994-2001 Acura Integra Engine Air Filter Replacement

A video tutorial on how to change the engine air filter on a 1994-2001 Acura Integra.

Written By: eCuration



INTRODUCTION

The engine air filter should be replaced every 10,000-15,000 miles or once a year.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the replacement yourself.



TOOLS:

- [1/4" Drive Ratchet](#) (1)
- [1/4" Ratchet Extension](#) (1)
- [8mm Deep Socket](#) (1)



PARTS:

- [Engine Air Filter](#) (1)
-

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-13 10:25:53 PM.