



2003-2007 Honda Accord Valve Gasket Replacement

A video tutorial on how to change the valve gasket on a 2003-2007 Honda Accord.

Written By: eCuration



INTRODUCTION

If you are experiencing an oil leak with a lot of debris around the oil cover, noticeable aroma of burning oil and or oil in the spark plug housing, then it may be time to replace the valve cover gasket.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the Replacement yourself.

Torque specs:

- 8.7 ft. lbs - Head cover bolts
- 8.7 ft. lbs - Power steering pressure hose
- 8.7 ft. lbs - Side bracket bolts
- 8.7 ft. lbs - Plastic head cover bolts

Safety

If this is your first time working on a vehicle read our [safety tips](#) before proceeding.



TOOLS:

- [3/8" Drive Ratchet](#) (1)
- [10mm Deep Socket](#) (1)
- [Large Needle Nose Pliers](#) (1)
- [Pry Bar](#) (1)
- [Black RTV Silicone](#) (1)
- [Torque Wrench](#) (1)



PARTS:

- [Valve Cover Gasket](#) (1)

To reassemble your device, follow these instructions in reverse order.