



# Samsung S730 lcd screen replacement

This repair is pretty much the same as for the Samsung S630. This repair was done on a camera with the LCD not functioning and the flash not working.

Written By: oldturkey03



## INTRODUCTION

This repair is for a camera that has a bad LCD, as well as no flash, and no picture.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [TR10 Torx Security Screwdriver](#) (1)

### PARTS:


- [LCD replacement part # Q0704013601A](#) (1)
-

## Step 1 — LCD



- Remove the batteries, memory card, and wrist strap if so equipped.
- Remove the four screws on the bottom.
- Remove the two screws on the right hand side

## Step 2

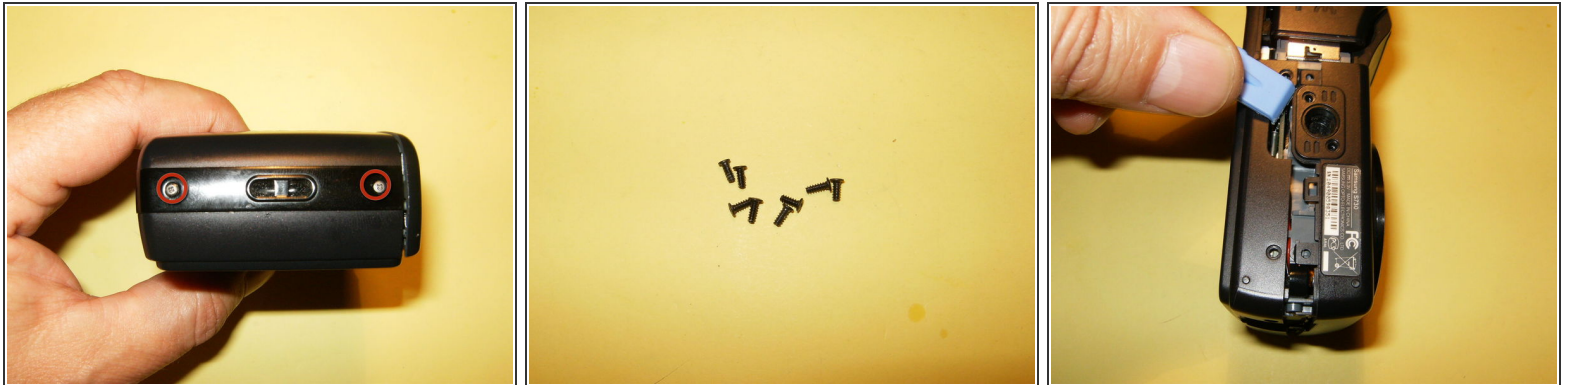

- Remove the two screws from the left hand side
- The screws are identical in length. No reason to keep them separate
- Split the case from the battery compartment down. You can use an opening tool or your fingernails to accomplish that.

