



HP 15 Series Battery Replacement

This guide teaches you how to replace the battery in an HP 15 Series laptop.


Written By: Joseph Sctbunio



INTRODUCTION

This guide teaches you how to replace the battery in an HP 15 Series laptop.

Step 1 — Remove the battery

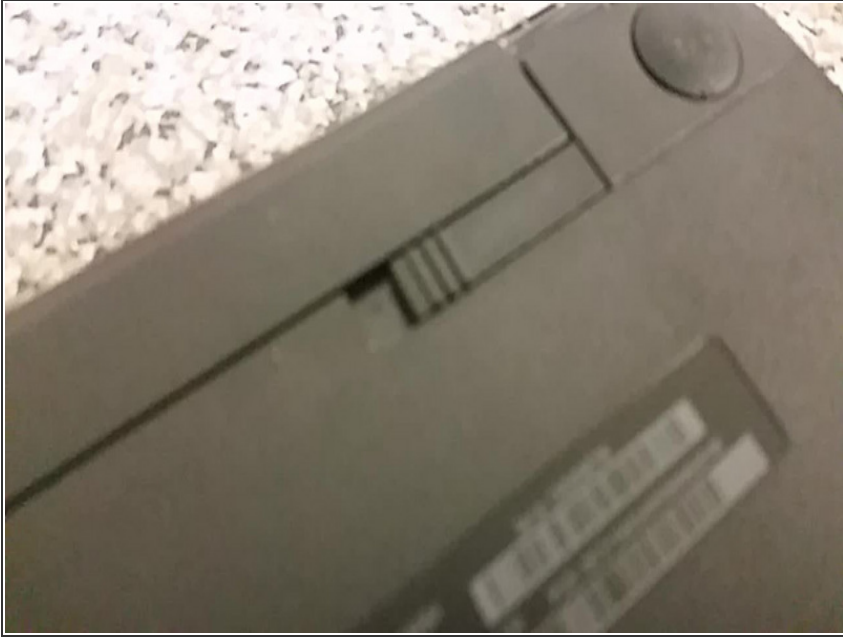

- Move both tabs towards the center of the laptop. The battery will come out.
- Putting in a new battery is as simple as sliding it back in the way the old one came out. You're done!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-12-01 10:20:02 AM.