



Handspring Visor Deluxe PDA Outside cover and stylus Replacement

This guide will describe how to install the outside covers and stylus for the Handspring Visor Deluxe PDA.

Written By: David Faltemier



INTRODUCTION


This guide will show you how to take off the front cover, stylus, and memory card cover.

Step 1 — Outside cover and stylus



- Remove the outer screen cover by releasing the top clip from the main body of the device.

Step 2

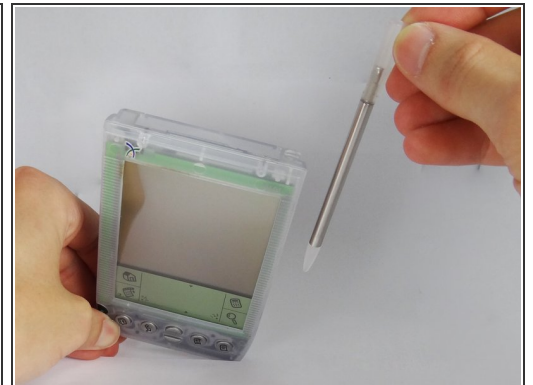

- Pull out the stylus from the top right corner of the device.

Step 3



- Slide the memory cartridge cover up and off the device.

To reassemble your device, follow these instructions in reverse order.