



# Logitech UE MegaBoom Battery Replacement

This guide offers step-by-step instructions on how to replace the battery in a Logitech UE MegaBoom device.

Written By: Oscar Ambriz



## INTRODUCTION

A dead battery can be an inexpensive fix for devices that will not charge, or have a short battery life. This guide will show you how this part can be replaced.

---

### TOOLS:

- [Jimmy](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

### PARTS:

- [Logitech UE MegaBoom Replacement Battery](#) (1)

## Step 1 — Outer Mesh



- Locate the ends of the speaker.
- Put a plastic opening tool in-between the rubber end and the mesh.
- Apply a upward force in order to pry open the end.
- Apply this procedure to the other side as well.

**i** Will take force.

**!** Using metal tools may permanently mar your device.

## Step 2



- Take the Jimmy and pry up the rubber strip that has the volume buttons on it.


**i** You will hear clicks as it pries up, don't worry.

- Remove all the rubber you pried off.

### Step 3



- Use tweezers to lift end of plastic retainer on edge of mesh out of its channel.
- Work the plastic retainer out of the channel all the way around the speaker.

 Be gentle, it is easy to damage the fabric.

- Repeat for other side.

## Step 4 — Battery



- Pull on white strip to remove battery.

## Step 5



- - Remove inner plastic gasket on circuit board.
- - Remove 2nd plastic gasket around outer circuit board edge, under rubber gasket.

## Step 6



- - Gently pry circuit board up out of recess.

To reassemble your device, follow these instructions in reverse order.