



# HP 15-af013cl Battery Replacement

Replace the battery in your HP laptop to restore normal usage life.

Written By: Stephen Perreira



## INTRODUCTION

The battery located within your laptop is its main power supply. A battery typically degrades over time and will require replacement every 3 to 4 years. There are times, however, when batteries fail, rendering it useless without the charger being plugged in. This guide will show you how to easily replace the battery of your HP laptop.

---



### TOOLS:

- [Can be done by hand no tools needed.](#) (1)
-

## Step 1 — Battery



- Start off by flipping the laptop on its back.

## Step 2



- Push the two spring-loaded tabs inward.
- Once unlatched, pull the battery out of its compartment.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-01-04 06:24:12 AM.