



Acer Chromebook C720-2848 SSD Replacement

Replacing the internal storage SSD in an Acer C720-2848 Chromebook.

Written By: Robert Escobio





INTRODUCTION

Use this guide to replace the SSD of your device.

TOOLS:




- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Cover

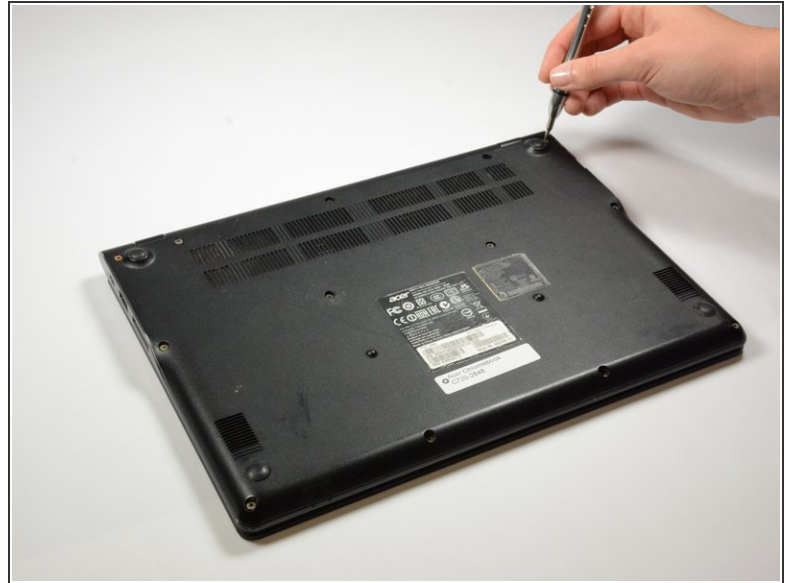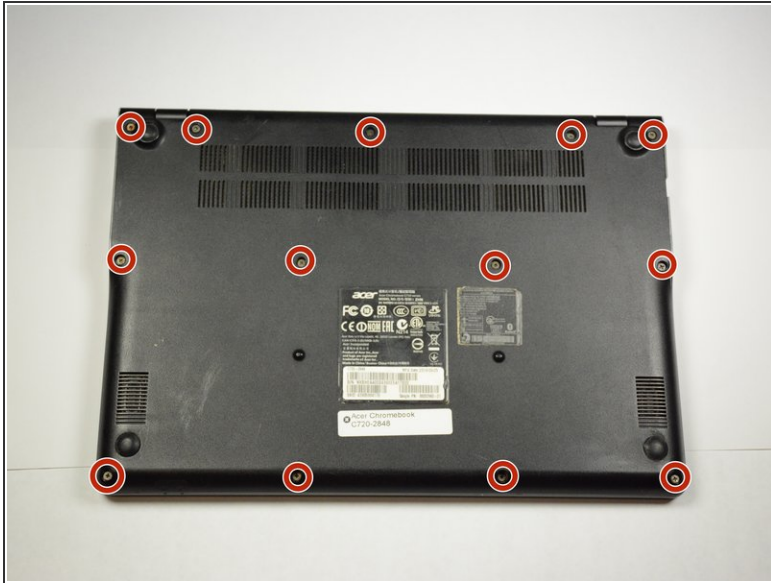

- Use a Phillips head screw driver to remove the 13 screws in these locations.


Step 2

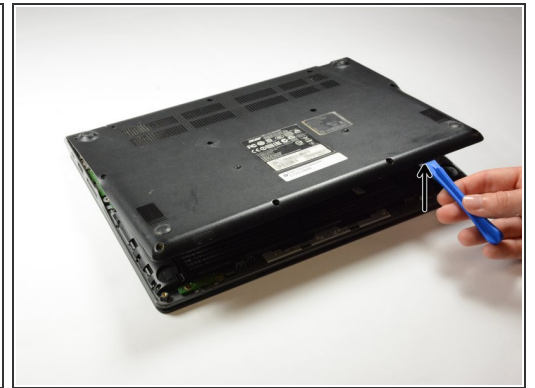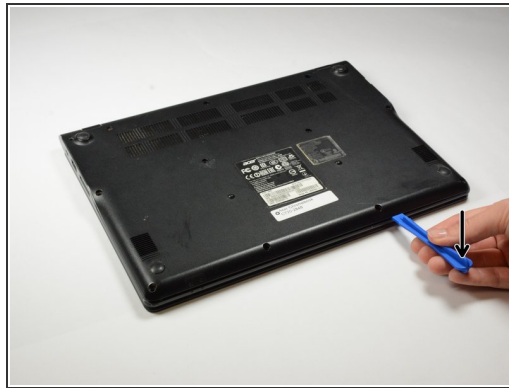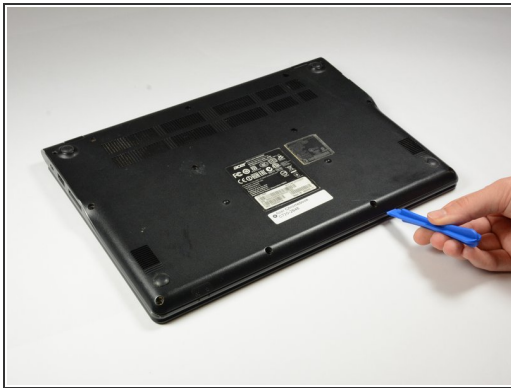

- Use a plastic spudger to pry up the bottom cover and remove it.

⚠ Be sure to pry along other edges if necessary to avoid damaging the back cover.

Step 3 — SSD

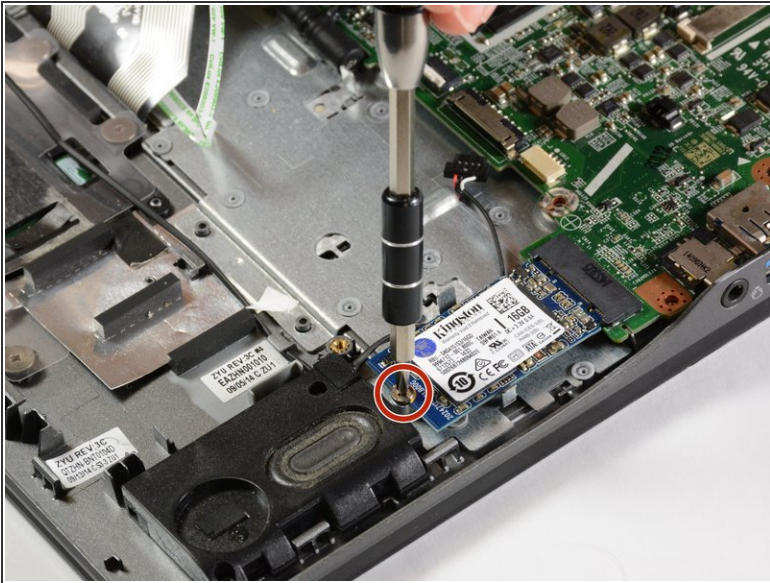

- Unscrew screw holding SSD card in place.
- Slide out the SSD card towards you to remove it.
- ⓘ The SSD card is the blue chip on the right connected to the motherboard.
- ☑ Be sure to store this screw apart from the others as it is a different length.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-09 05:07:32 PM.