



GE A1050 LCD Replacement

LCD Replacement for the GE A1050.

Written By: oldturkey03



INTRODUCTION

The repair of the LCD is straight forward. No special skills or knowledge are required.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)



PARTS:


- [Replacement LCD](#) (1)
-

Step 1 — LCD



- Remove the batteries, hand strap, and memory card if so equipped.
- Remove the two Phillips screws from the bottom.
- Remove the two Phillips screws from the left side.

Step 2

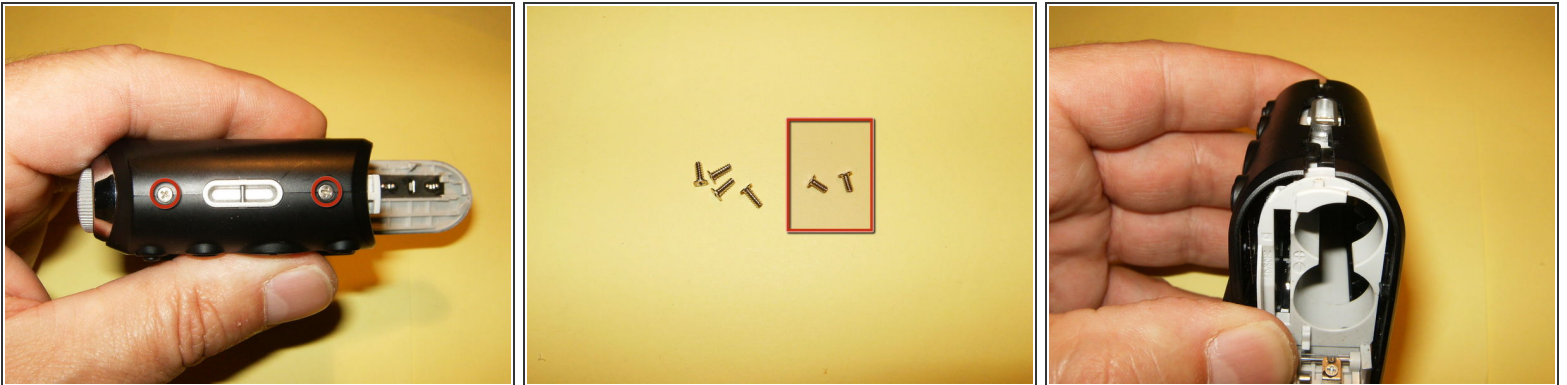

- Remove the two screws from the right side.

⚠ The two screws from the left side are shorter than the ones from the right. Keep those separated.

- Start splitting the case from the battery compartment to the sides. No special tool is needed to split the case.

Step 3



- Do not remove the back side of the case, just flip it over. The speaker is connected by wires to the main body, but positioned in the back case.
 - Flip the LCD to the bottom. You can not yet remove it, because it is still attached to the board.
 - The LCD cable is held into the connector via some compression clips. Move both ends carefully away from the connector, toward the LCD.
- ⚠ The clips only move about an 1/8 of an inch. Be careful not to use too much force.

Step 4



- After exchanging the LCD for a new one, and after reassembling your camera, you should have a working LCD.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 01:59:25 PM.