



Dell Inspiron 15-3558 Battery Replacement

This guide teaches you how to replace the battery in a Dell Inspiron 15-3558 laptop.

Written By: Joseph Sctbunio



Step 1 — Remove battery



- Flip the laptop over. With the battery side facing you, push the latch to the right.
- Lift the battery. You're done!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-04-22 06:04:39 AM.