




Acer Aspire E1-532-2616 RAM Replacement

This guide will help users remove and replace the RAM of the Acer Aspire E1-532-2616.

Written By: John Alberts

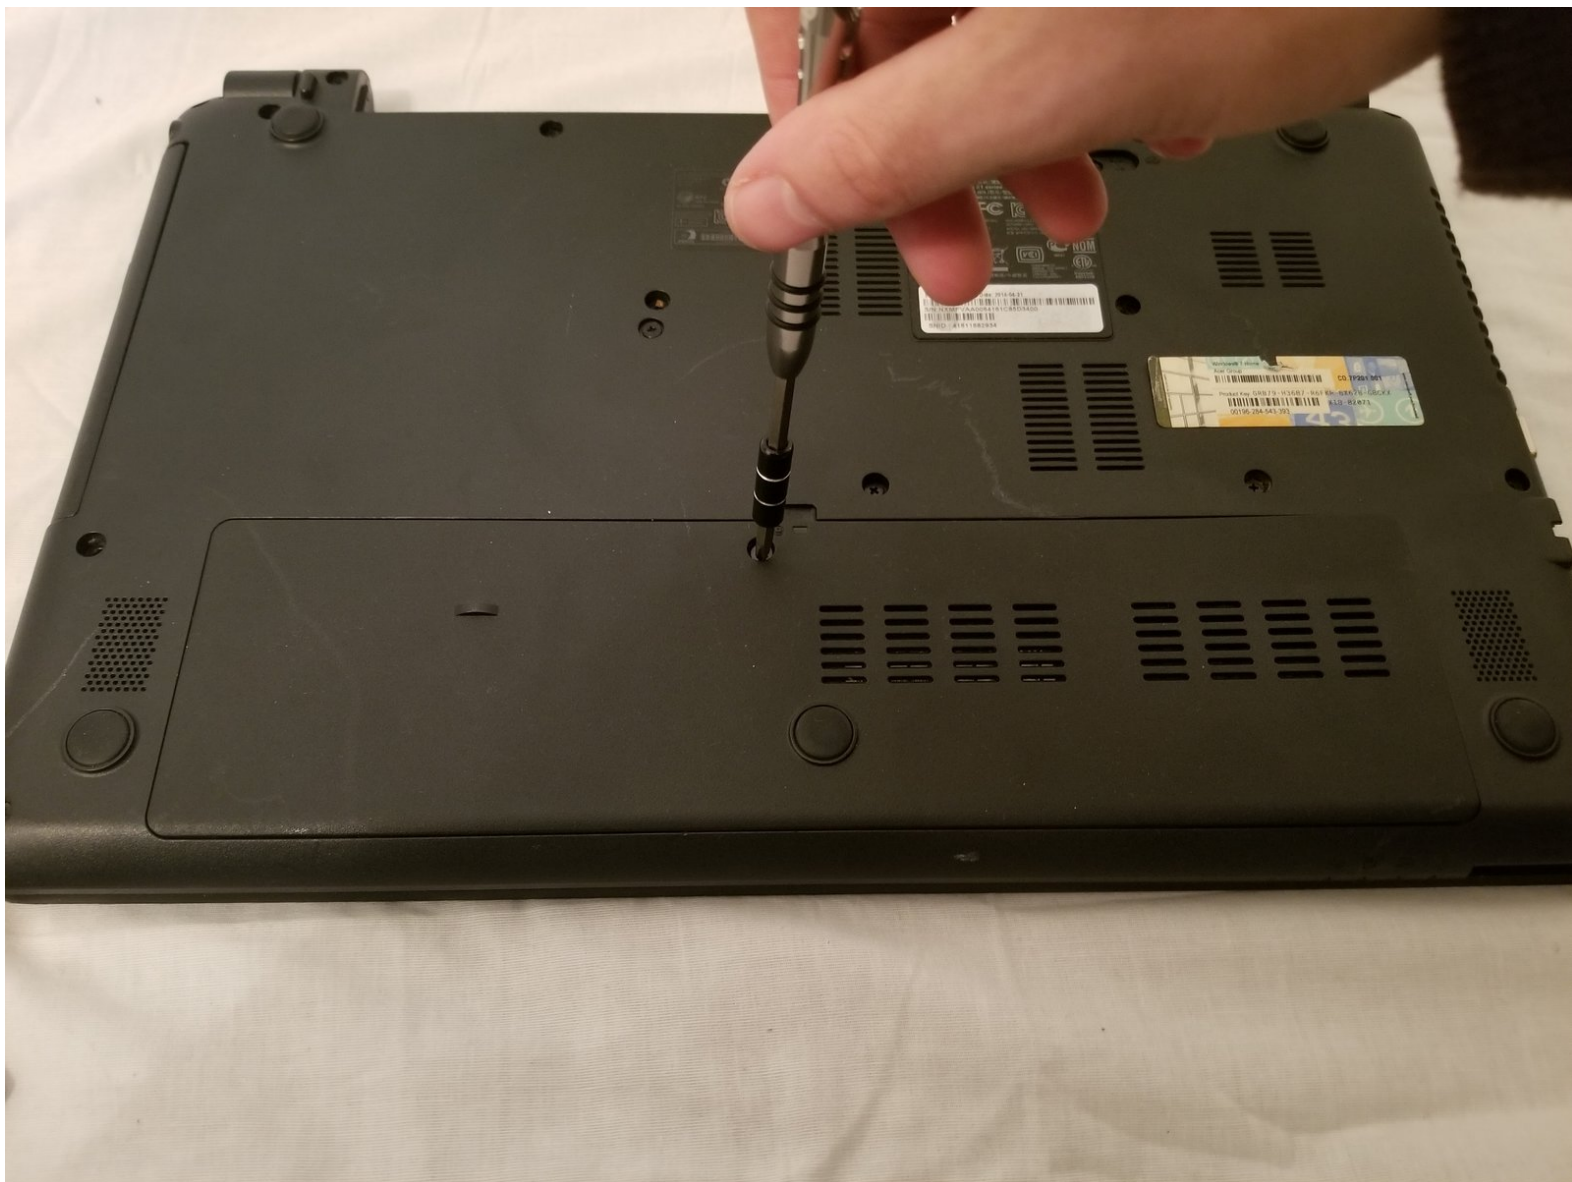


INTRODUCTION

This guide will help users remove and replace the RAM of the Acer Aspire E1-532-2616.

TOOLS:

- [64 Bit Driver Kit](#) (1)
-

Step 1 — RAM

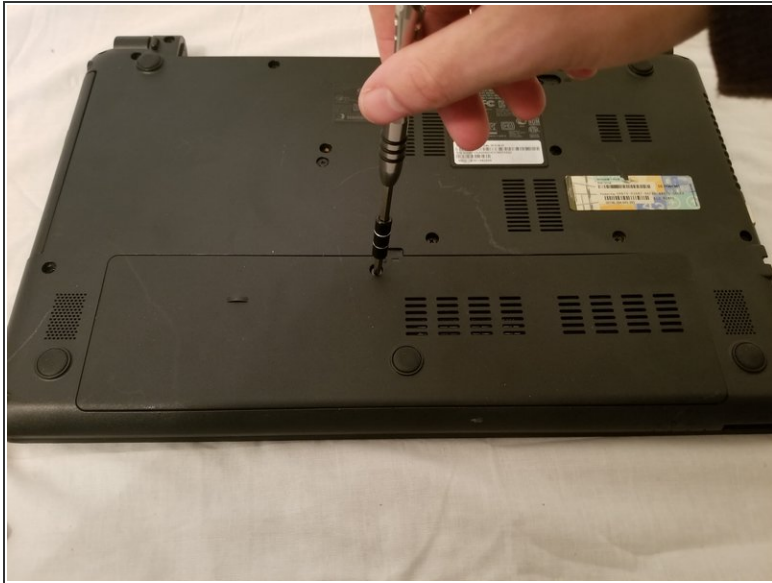

- Use a Phillips screwdriver to remove the CM2.5*3 screw on the shown cover.
- Lift and remove the cover from the end that had the holding screw.
- ⓘ Lifting the plastic cover will require some pressure.

Step 2



- Push out the tabs on the other side of the RAM stick.
- ⓘ The RAM stick should raise up when the tabs are depressed.
- Pull the RAM stick out
- ✦ When replacing, make sure to line up the inserts.

To reassemble your device, follow these instructions in reverse order.