



Shark Ultimate Professional Power Cord Replacement

This guide will aid in the replacement of the power cord part of the Shark Ultimate Professional clothes iron.

Written By: Drew Carff



INTRODUCTION

Before beginning this guide, ensure that the device is both unplugged and cool; failure to do so may result in electrocution or burns.


TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Power Cord



- Use the Philips head #0 screwdriver to remove the two 11.49mm screws at the back of the iron.
- Remove the back cover piece.


 Make sure iron is unplugged and cooled off.

Step 2

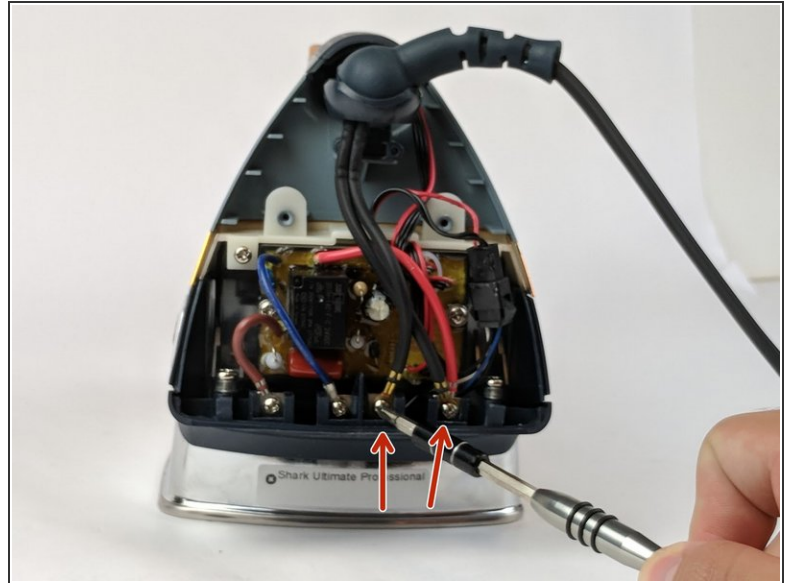

- Use the Philips head #0 screwdriver to remove the two 11.77mm screws holding the white clamp to the iron.
- Use the Philips head #0 screwdriver to remove the two 6.58mm screws holding the black wires to the body of the iron.
- ⓘ Removing the left black wire will also free the red wire, attached by the same screw.

Step 3

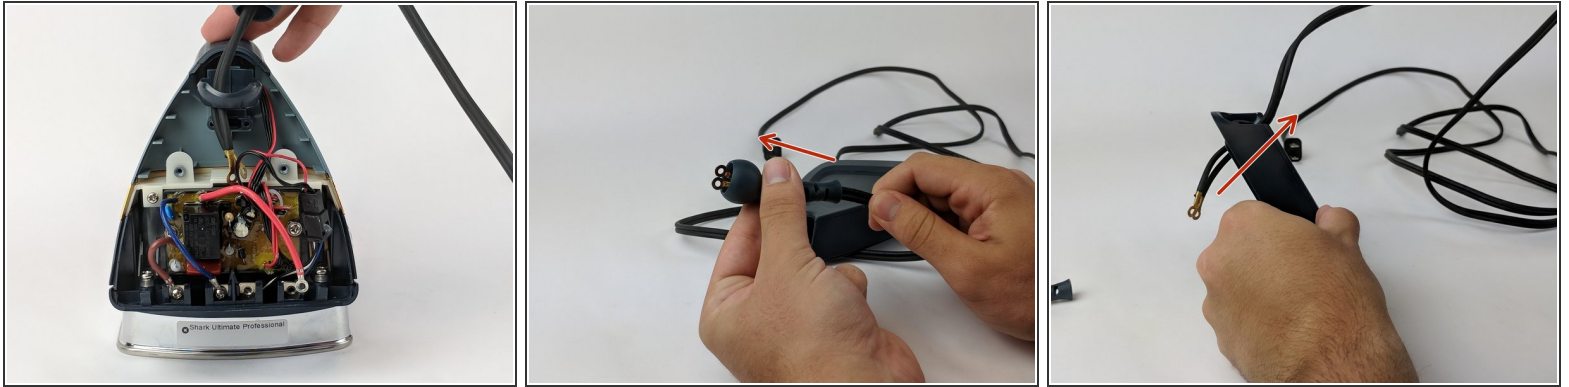

- Pull the split end of the power cord upward through the ball joint of the iron.
- Pull the rubber stopper through the split end of the wire.
- Pull the wire through the plastic cover.

To reassemble your device, follow these instructions in reverse order.