 




Acer Aspire V5-552PG-X469 Key Replacement

Replace the individual keys if some of your laptop's keys are stuck or not functioning.

Written By: Rebecca Aseo

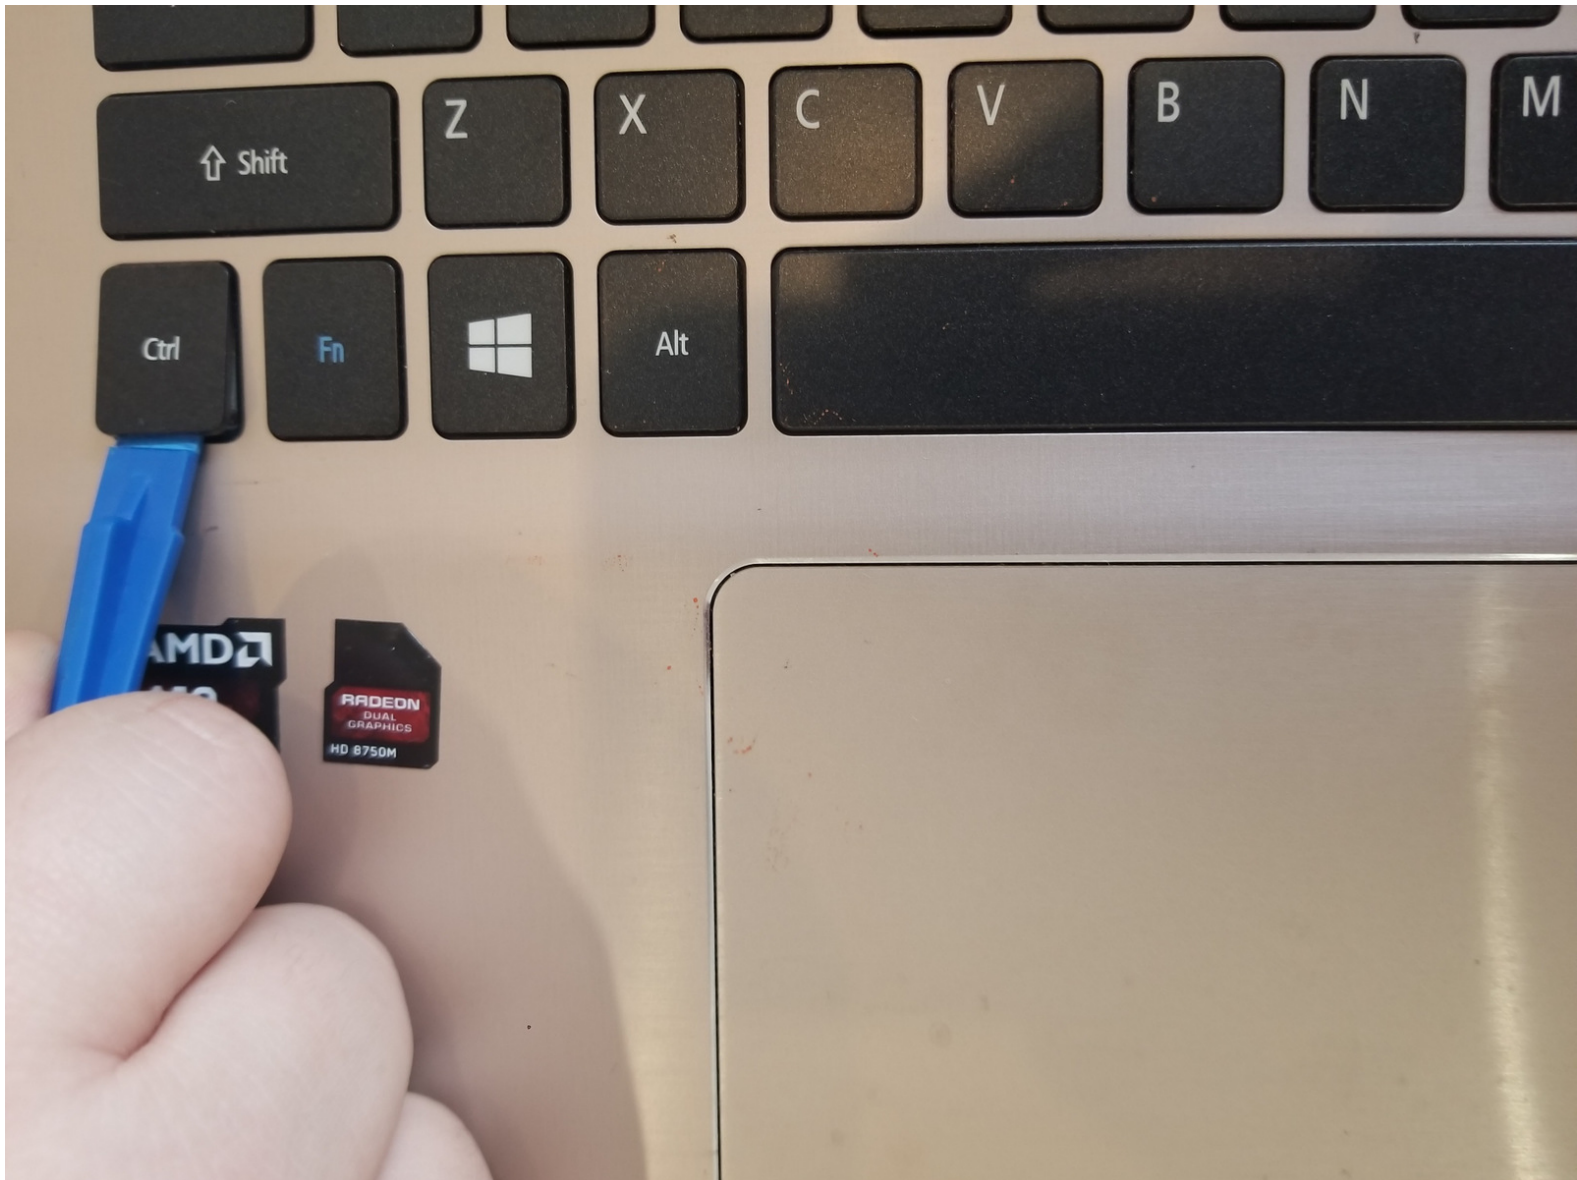

INTRODUCTION

Key replacement is necessary if some of the keys get stuck or aren't working due to the external hardware. Keyboard malfunction may also occur if drivers are outdated, and this issue can be resolved by following [these troubleshooting instructions](#). If you have ruled out this issue, proceed with the key replacement. Be sure to power off and unplug the device before replacing any parts.



TOOLS:

 
- [iFixit Opening Tools](#) (1)
-

Step 1 — Keyboard



- Place the end of a plastic opening tool underneath the edge of the broken key.
 - Gently pry up on the key until it comes loose.
- ⚠** Pry carefully to make sure you do not damage any of the internal hardware while removing the keys.

Step 2

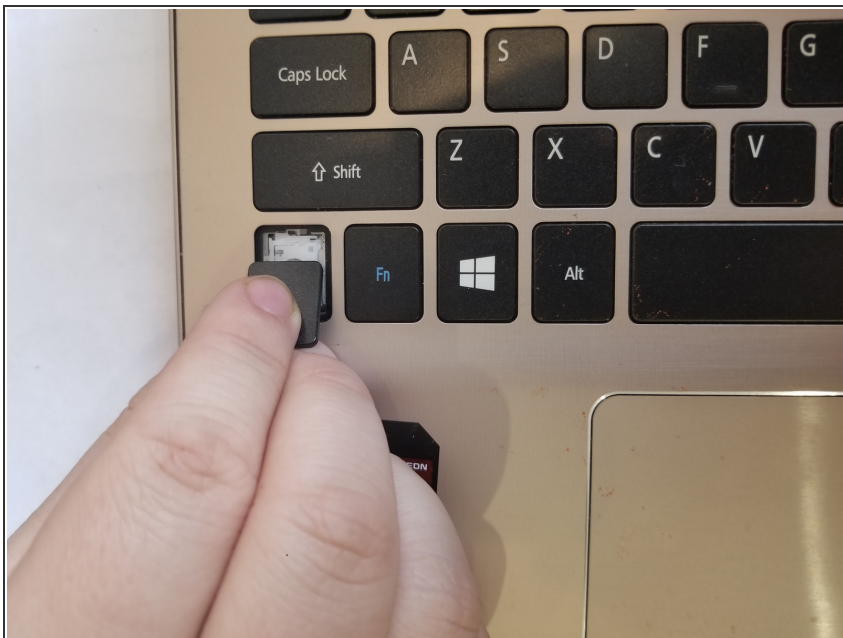

- Pick up the key to remove it.
- ✦** If any debris is found underneath the key, clean it out with an air canister or cotton swab.

To reassemble your device, follow these instructions in reverse order.