



HP Pavilion 15-ab165us Battery and Back Cover Replacement

Remove your HP Pavilion back cover in order to replace or gain access to internal components.

Written By: Dillon Hubble




INTRODUCTION

Most components that need to be replaced are inside the base of the laptop. The computer will need to be disassembled in order to reach the inner components. You will remove the battery before delving into the innards of your computer. If you just came here for a battery guide, simply follow to step two and then reassemble!

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Battery and Back Cover

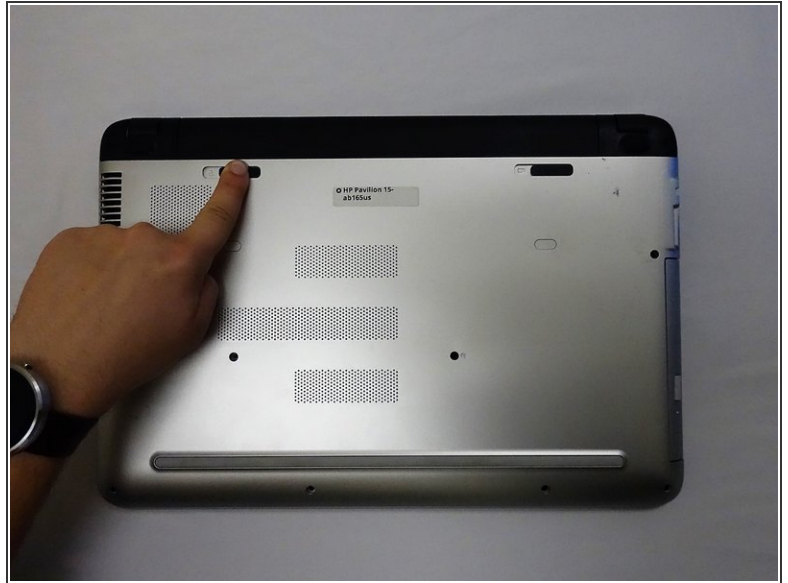


- Flip computer to the underside.
- Slide left tab inward to disengage battery lock.

Step 2

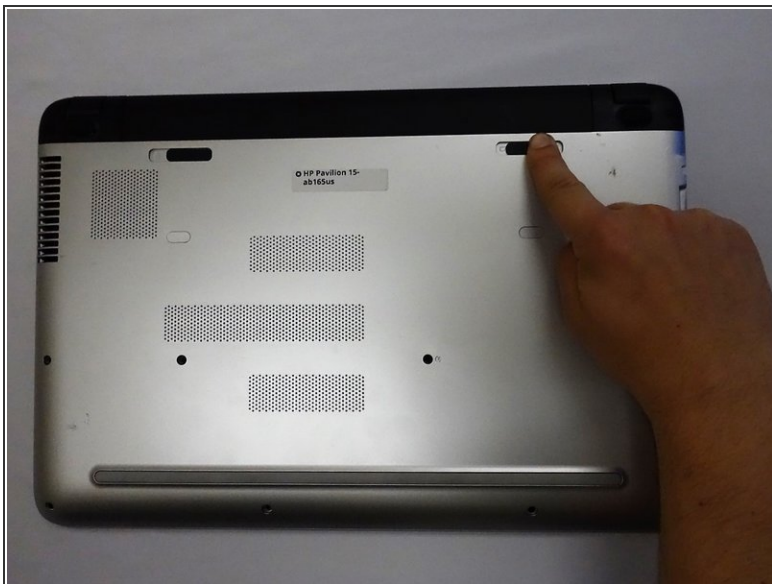


- Slide the left tab inward to eject the battery.

Step 3

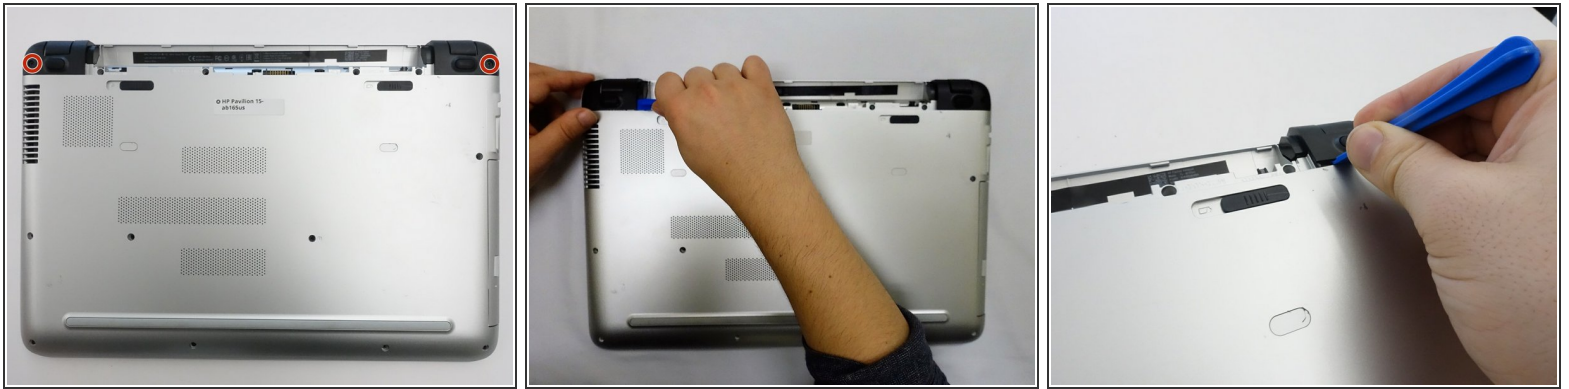


- Remove the 8mm screws underneath with a Phillips #1 screwdriver.
- Use a plastic opening tool to remove the plastic feet.

Step 4

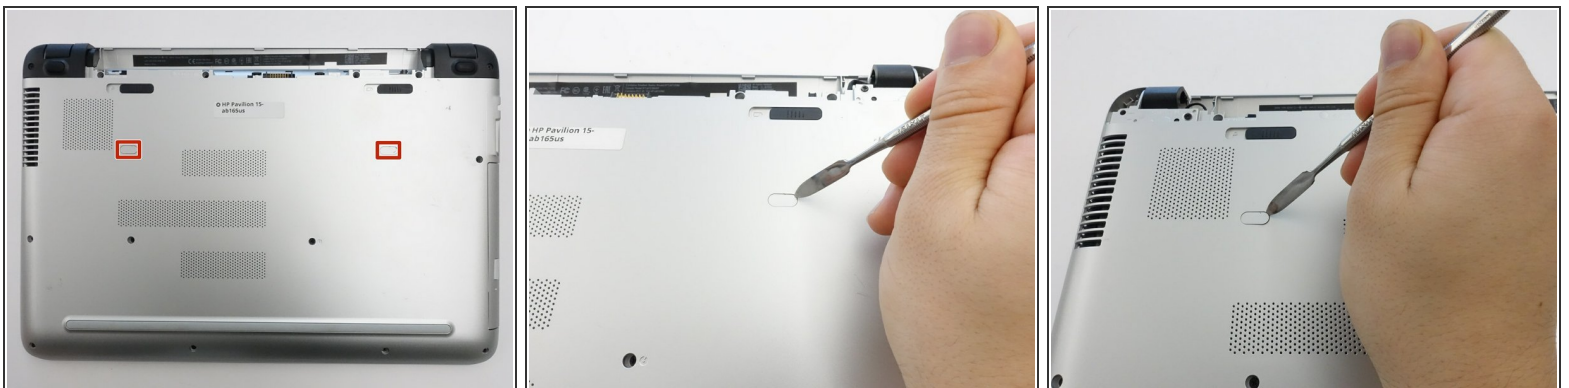


- Remove plastic tabs a with metal spudger.

Step 5

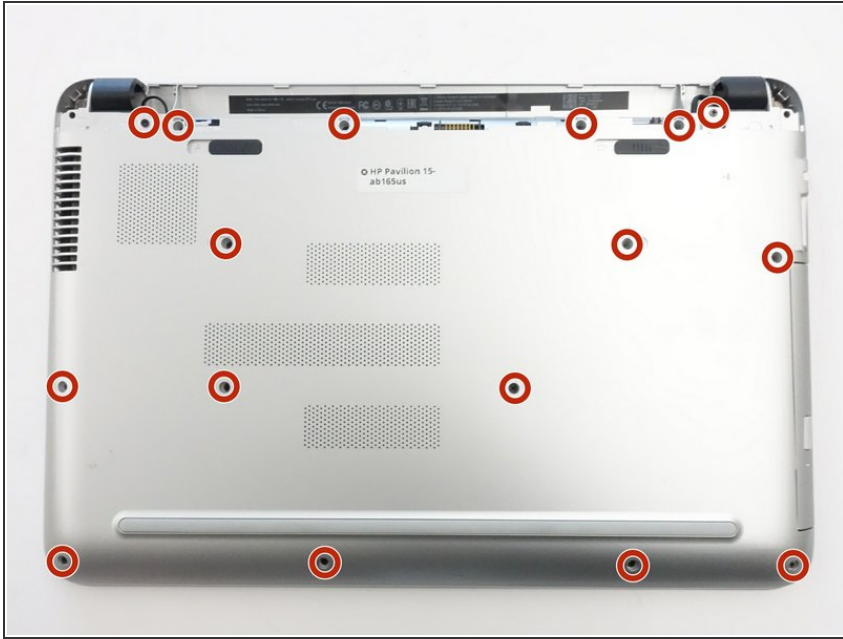

- Remove the 8mm screws that hold the bottom cover with a Phillips #1 screwdriver.

Step 6

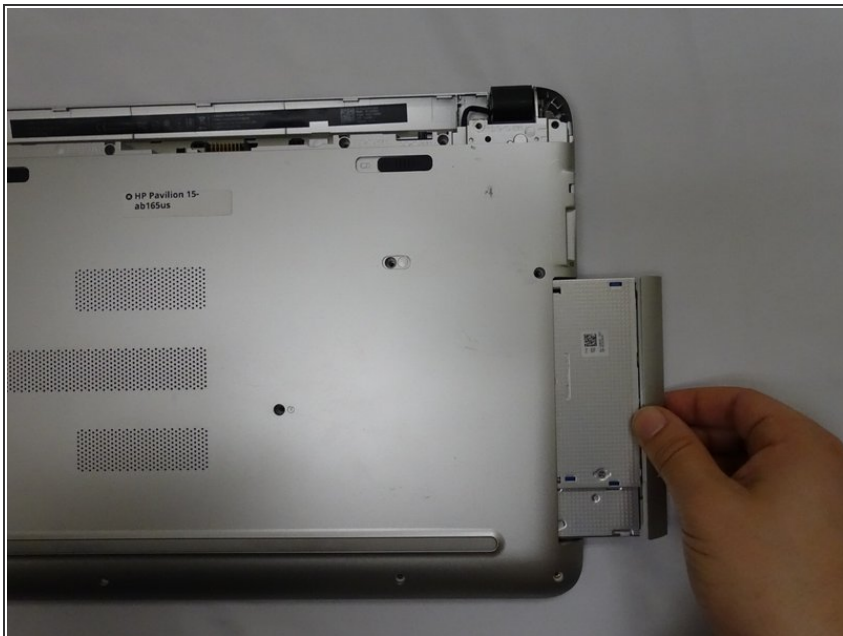


- Pull the Optical Drive out.

Step 7



- Remove the 3mm screws that were hidden under the Optical Drive with a Phillips #00 screwdriver.

Step 8

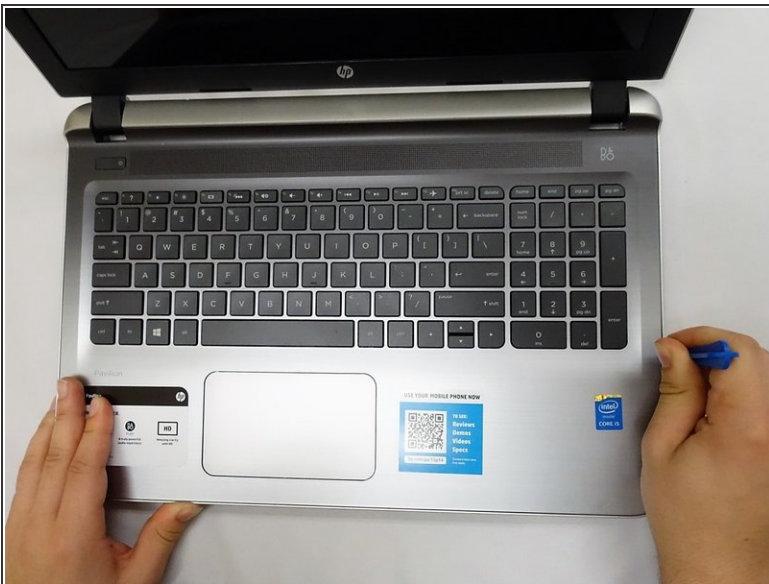

- Flip the computer back over.
- Use a plastic opening tool to release the clips holding the keyboard section in place.

Step 9



- Close the lid and pull the screen and keyboard section up and away from the bottom cover.
- ⚠ The hard drive is NOT screwed into place on the underside of the keyboard section.

To reassemble your device, follow these instructions in reverse order.