



# Lenovo Thinkpad X240 RAM Replacement

How to replace the RAM of the Lenovo Thinkpad X240.

Written By: Joe Edmondson



## INTRODUCTION

RAM giving you any trouble? Follow along while we show you how to get it replaced! All you need is your iFixit Toolkit.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



### PARTS:


- [New RAM for Lenovo X240](#) (1)
-

## Step 1 — RAM




- Flip the laptop up side down as shown in the photo.

## Step 2

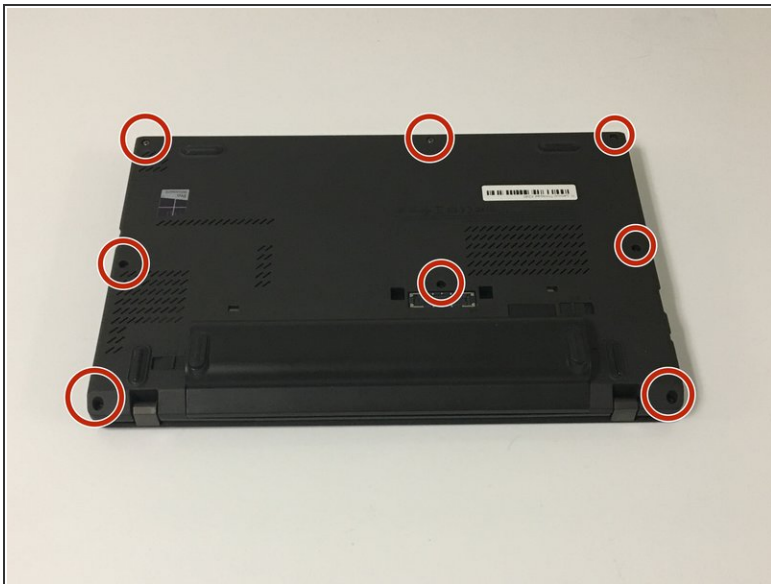



- Remove the 8 0.2mm Phillips screws connecting the back cover to the laptop.

### Step 3

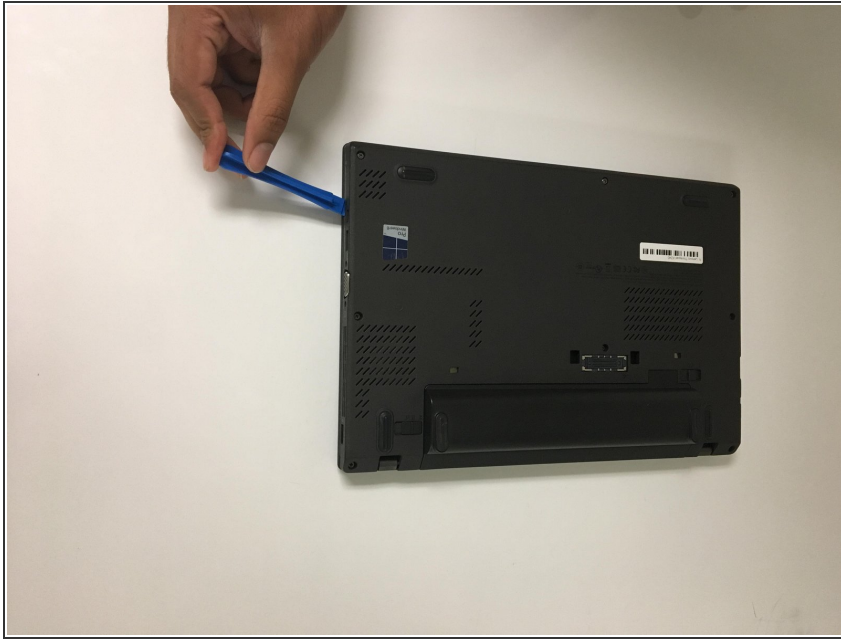

- Remove the back cover using the opening tools.
- ⚠ Gently use the plastic opening tools to prevent scratching your device.

### Step 4

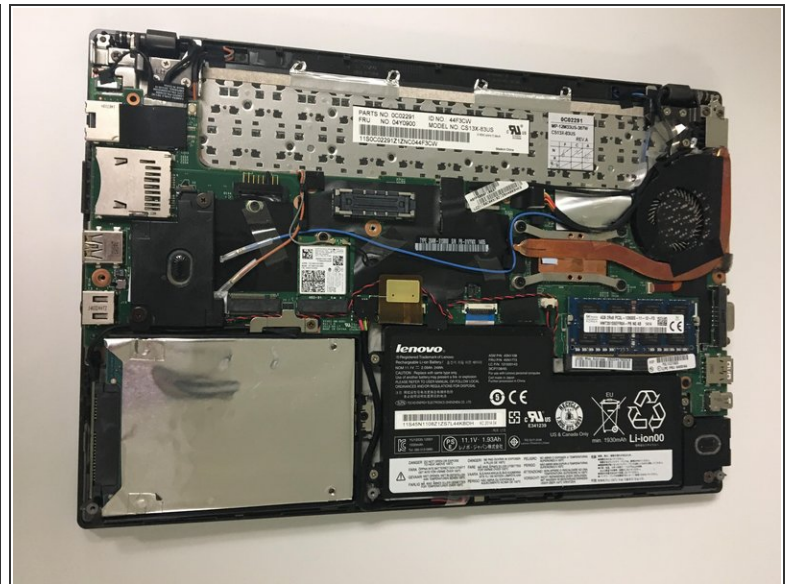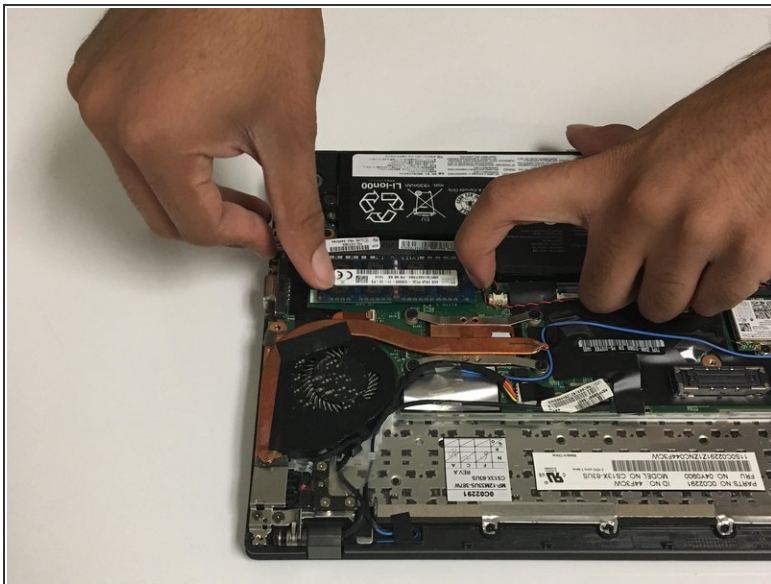

- Remove the RAM stick by carefully popping its holders out of place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-02-18 11:42:51 PM.

