



Acer Aspire 4810TZ-4120 Battery Replacement

This guide is how to replace a faulty battery.

Written By: Sean Howard



INTRODUCTION

This guide is how to replace a faulty battery.

TOOLS:


- [Fingers](#) (1)
-

Step 1 — Battery



- Unlock the battery by pushing and holding the lock button.

Step 2

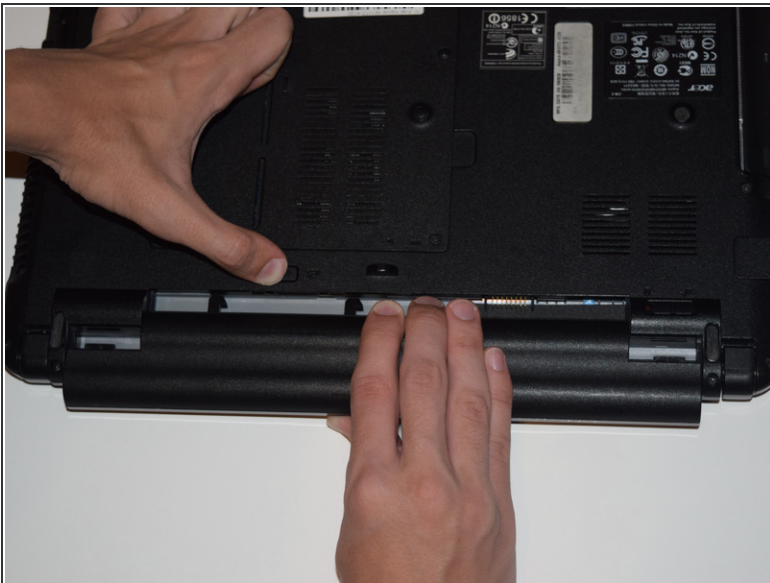

- While holding the lock button, pull out the battery
- The battery is now ready to be replaced with a new one

To reassemble your device, follow these instructions in reverse order.

