



HP Envy TouchSmart m7 k010dx Battery Replacement

Use this guide to replace the battery in your HP Envy TouchSmart m7 k010dx.

Written By: Owen Ou



INTRODUCTION

 
This guide will walk you through the process of replacing a faulty battery in the HP Envy TouchSmart m7 k010dx.



PARTS:

- [Replacement Battery](#) (1)
-

Step 1 — Battery

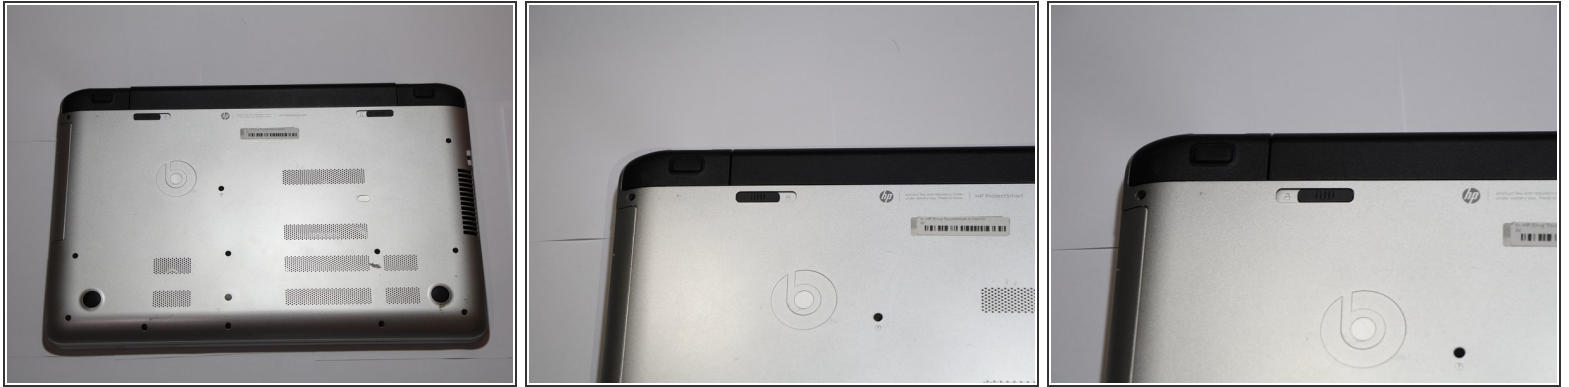


- Turn your computer over so that the bottom is facing up.
- Slide the left black switch towards center.
- You should see an unlock image exposed to the left of switch if done correctly.

Step 2




- Slide the right black switch towards center to release the battery.

 Step 3

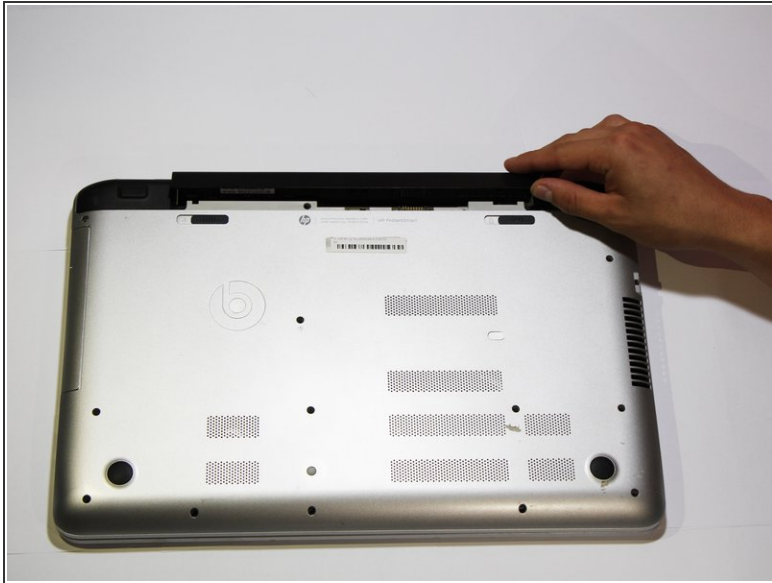

- Pivot the loose edge of the battery closer to you by pushing it toward the back of the computer.
- The battery should slide out freely.

 If battery is not pivoted before sliding out, you risk breaking interlocking tabs on the battery or computer.

To reassemble your device, follow these instructions in reverse order.