




SiriusXM Onyx Button Replacement

How to replace the buttons in the SiriusXM Onyx.

Written By: Christina Tao

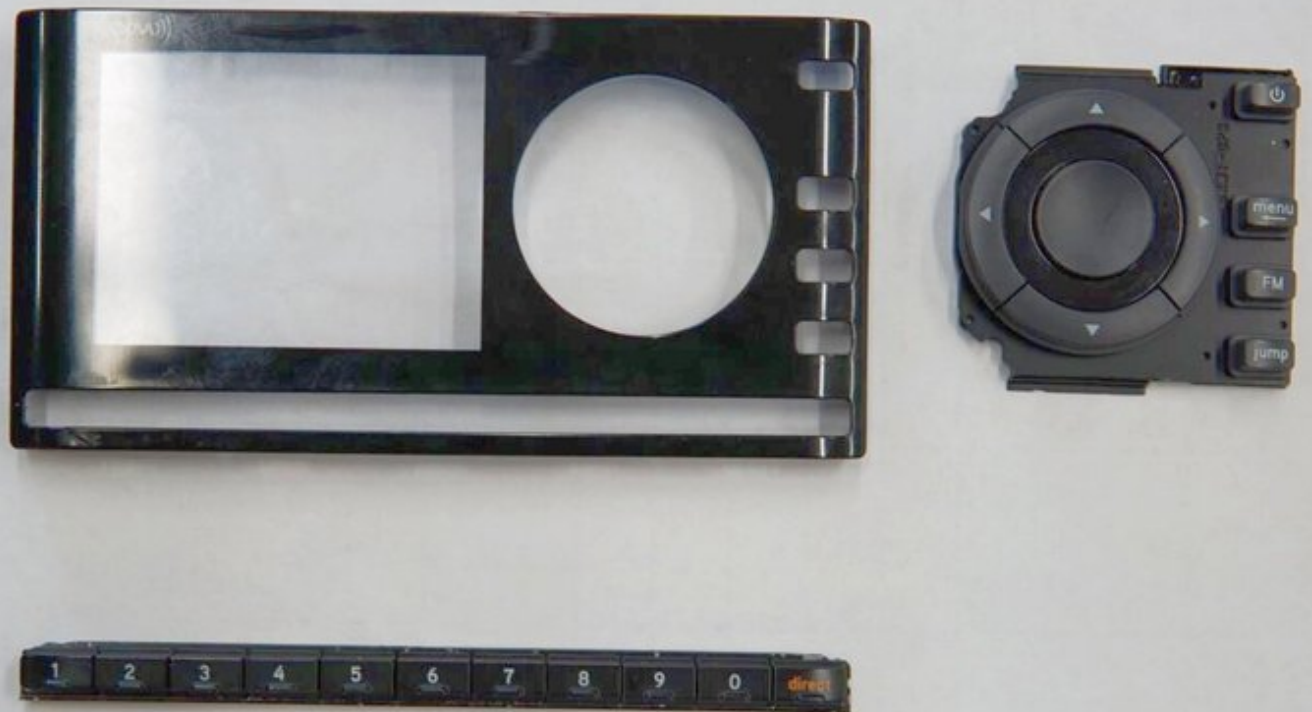

INTRODUCTION

The buttons are the components that allow you to navigate the options on the device screen. If this troubleshooting page failed to fix your device buttons, then this repair guide will show you how to get the buttons working again.

TOOLS:



- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Button





- Take the iFixit opening tool and place it between the crevice as shown.

Step 2

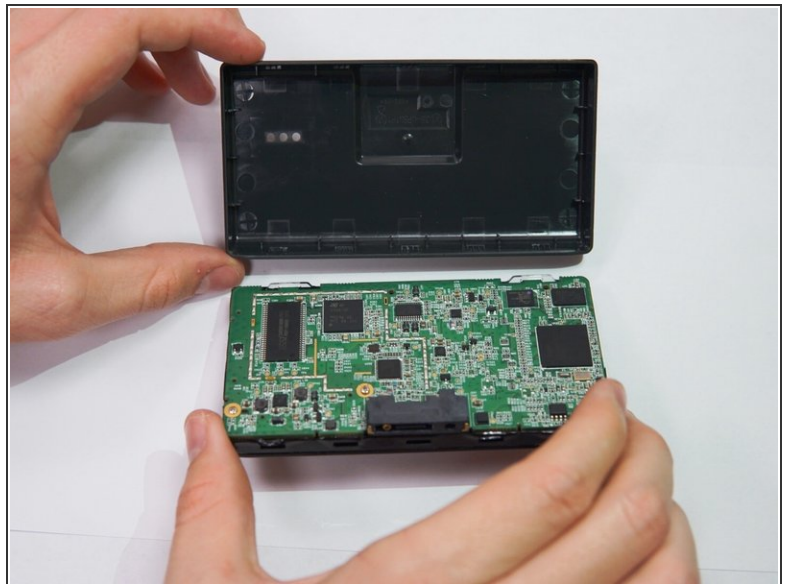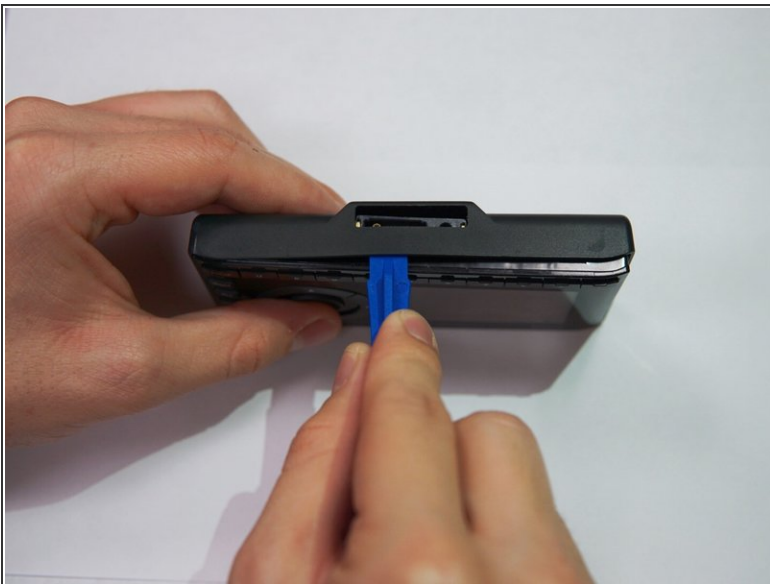


- Apply pressure to the iFixit opening tool, pushing down until the the plastic casing pops off.

Step 3

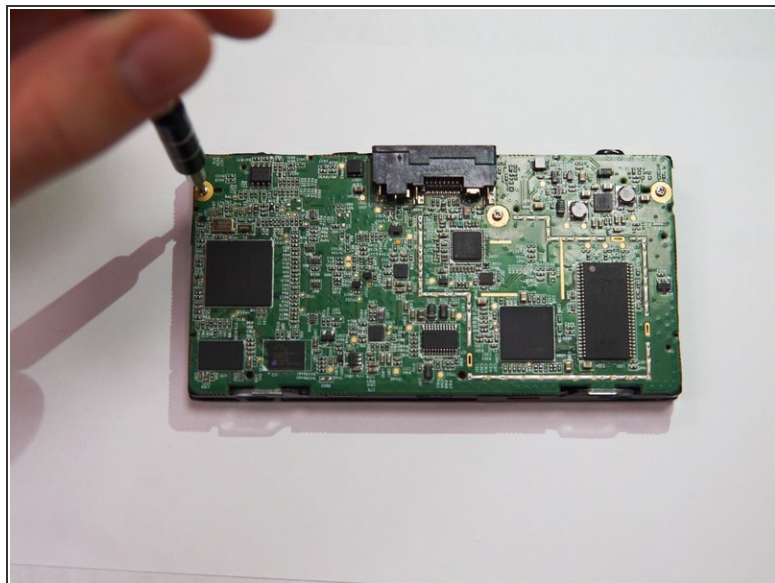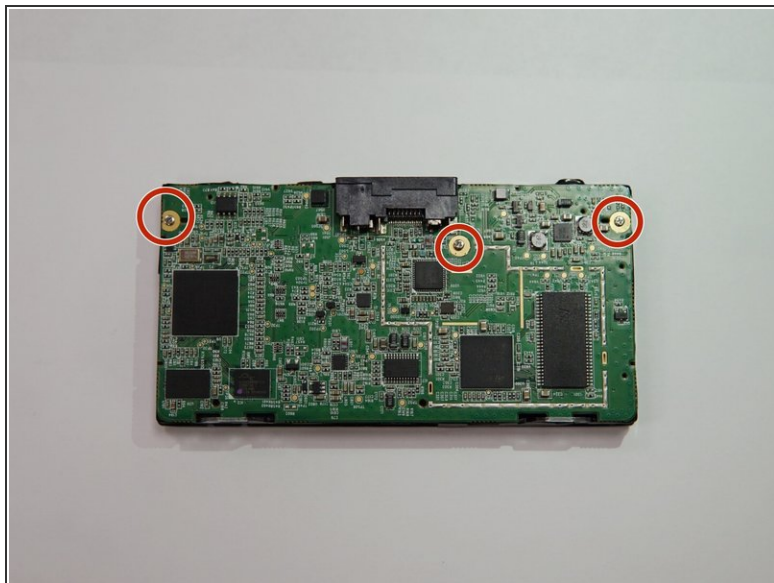

- The buttons are on the opposite side of the motherboard. To remove the motherboard, use a 0.8~0.9 mm Phillips #00 screwdriver to remove the three screws that attach the motherboard to the front part of the plastic casing.

Step 4

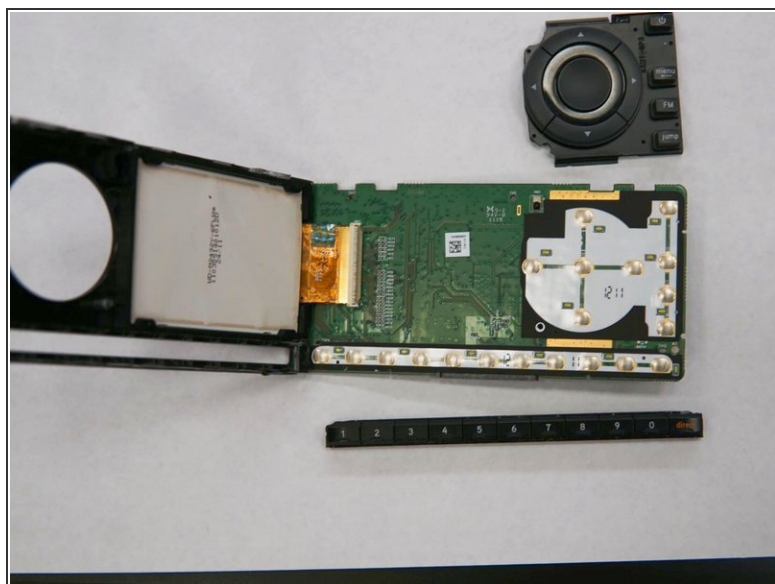

- The buttons are resting in the corresponding sections of the motherboard, so pull them off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-20 02:50:44 AM.