



Trio AXS 3G Speaker Replacement

If your device is emitting distorted audio, then this guide will help you replace your faulty speaker.

Written By: Javoy Ross



INTRODUCTION

The speakers play audio out the device. If your tablet does not emit sound then your speakers may be faulty. This guide will help you remove the speaker.

TOOLS:



- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Back Case



- ⓘ On the back of the device there is a white SD card case that shelters the screws that attach the back panel to the tablet.
- Use your thumbs to slide up and off the small SD card case.

Step 2

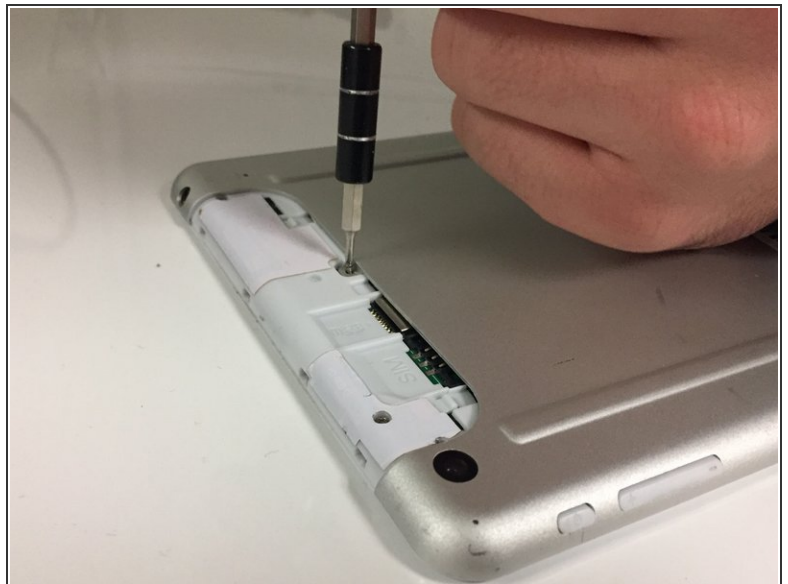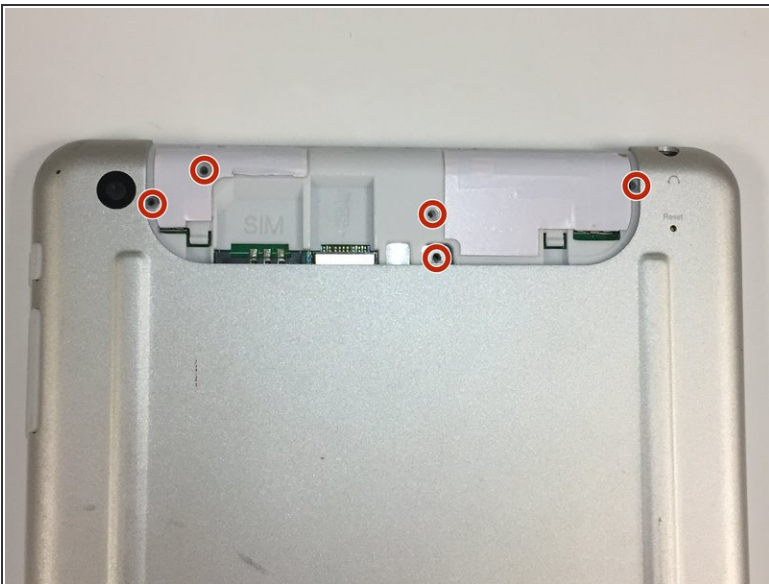

- Using the Phillips Head #000, unscrew the 5 4mm and 3mm screws at the top.

Step 3




- Insert a plastic opening tool between the back panel and the front of the tablet, and gently pry it away from the tablet.
- ⚠ Do not pry too hard as the screen is fragile and might crack.
- ⓘ It is best to start at the bottom of the tablet when prying the back panel off.
- ⓘ The volume piece will also dislodge when the back panel is removed.

Step 4 — Speaker



- Unscrew the two 4 mm #000 screws.

Step 5

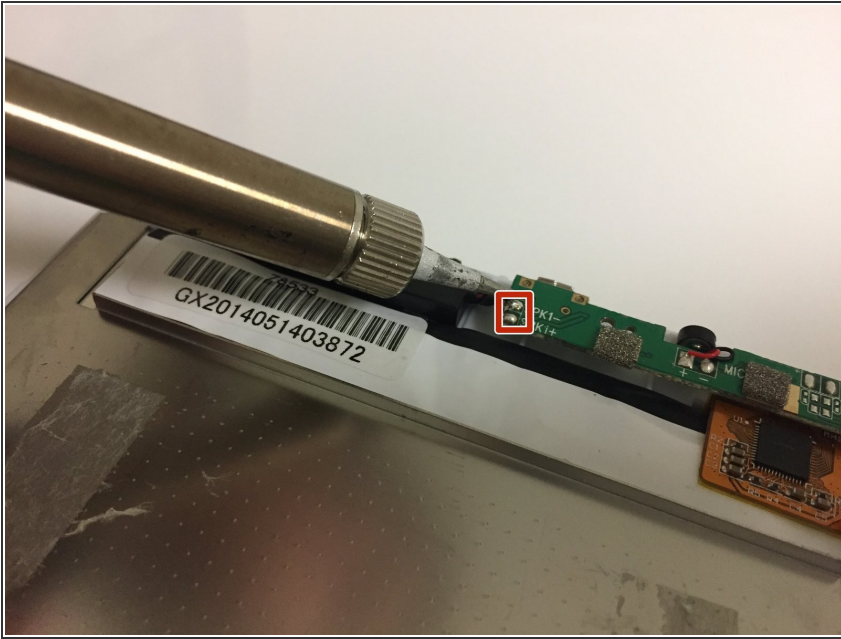

- Use a soldering iron to desolder the speaker connection.

⚠ Be careful not to melt the wires.

Step 6



- Remove the speaker.

To reassemble your device, follow these instructions in reverse order.