


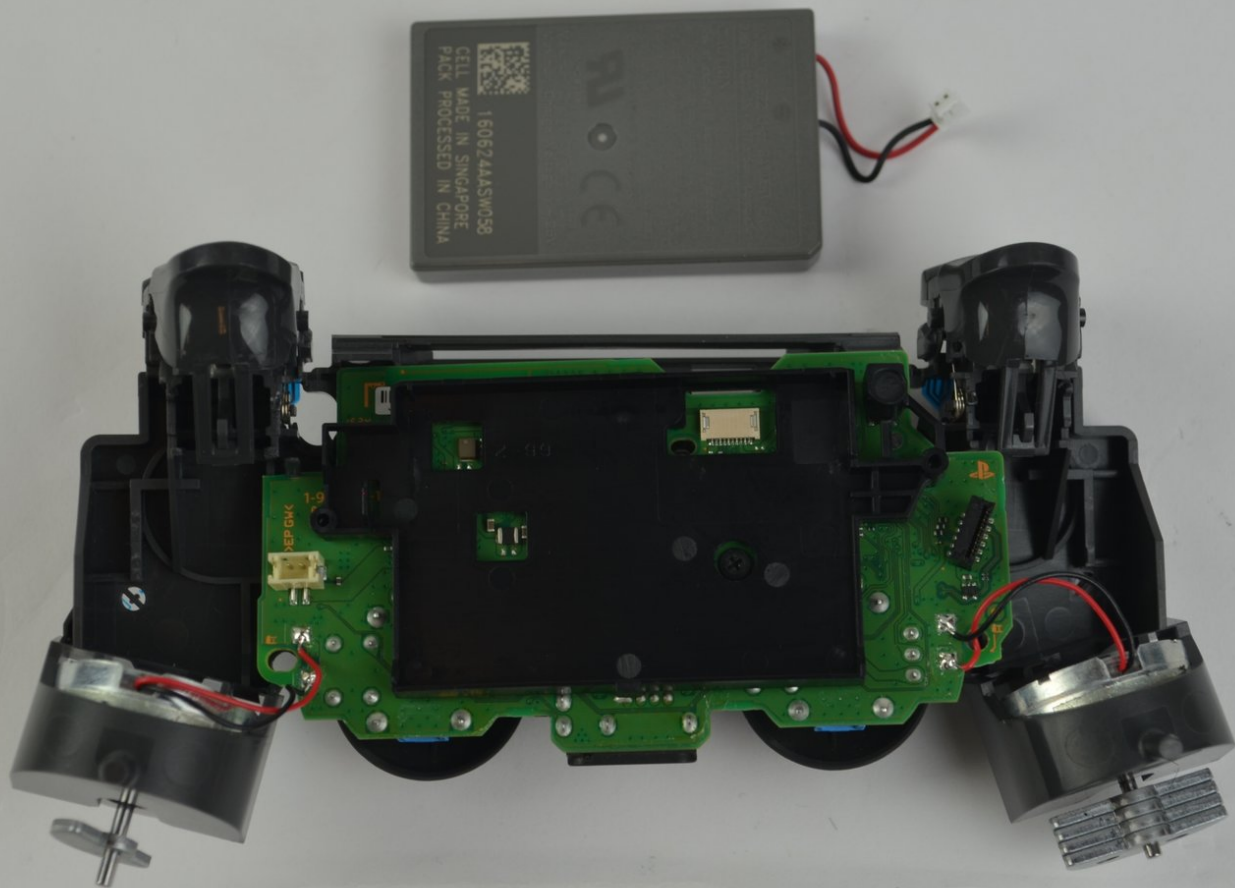

DualShock 4 CHU-ZCT2U Battery Case Replacement

How to replace the battery in a DualShock 4 CHU-ZCT2U.

Written By: Michelle Joseph



 **TOOLS:**

- [Phillips #00 Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

 **PARTS:**


- [PlayStation 4 Controller \(JDM-040\) Battery \(1\)](#)

Step 1 — Outer Shell




- Unscrew the four 6.5mm screws, using a Phillips-Head screwdriver.
 - Pry the two halves of the shell apart using a plastic opening tool.
- i** Be careful, as there will be a ribbon connecting the inner workings of the controller. It will not separate into two parts just by pulling apart the shell.

Step 2

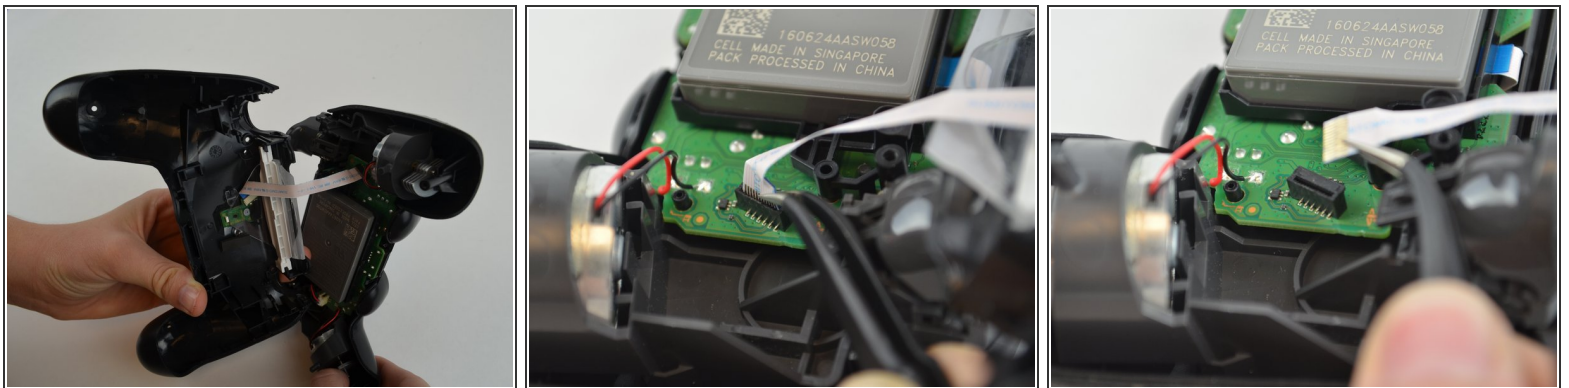


- Pull the ribbon cable out of the motherboard port to fully separate the two halves, using a pair of tweezers.

Step 3 — Battery

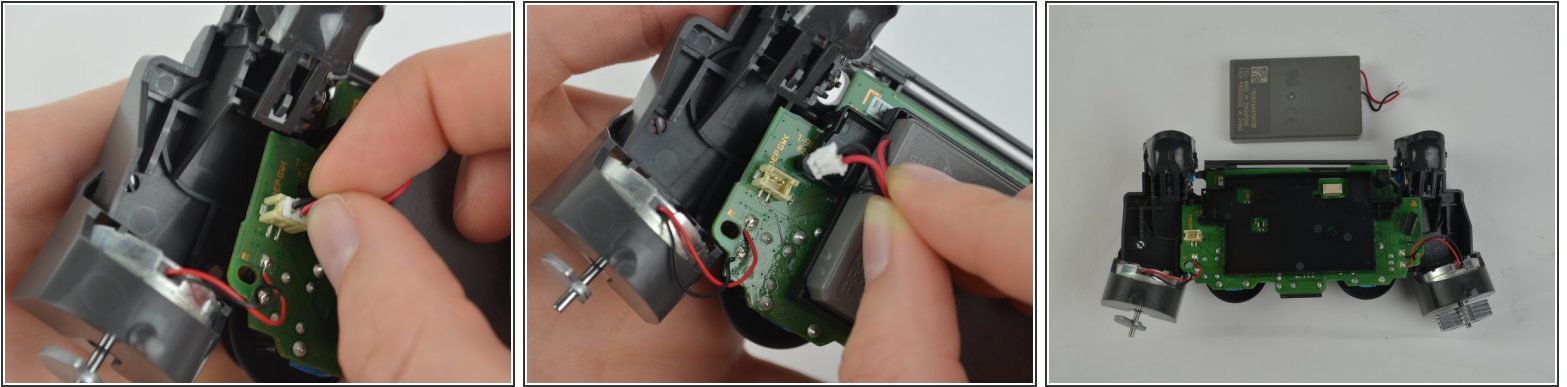


- Unplug the black and red wires from the power port located on the motherboard.
- Remove the old battery from the controller.

Step 4

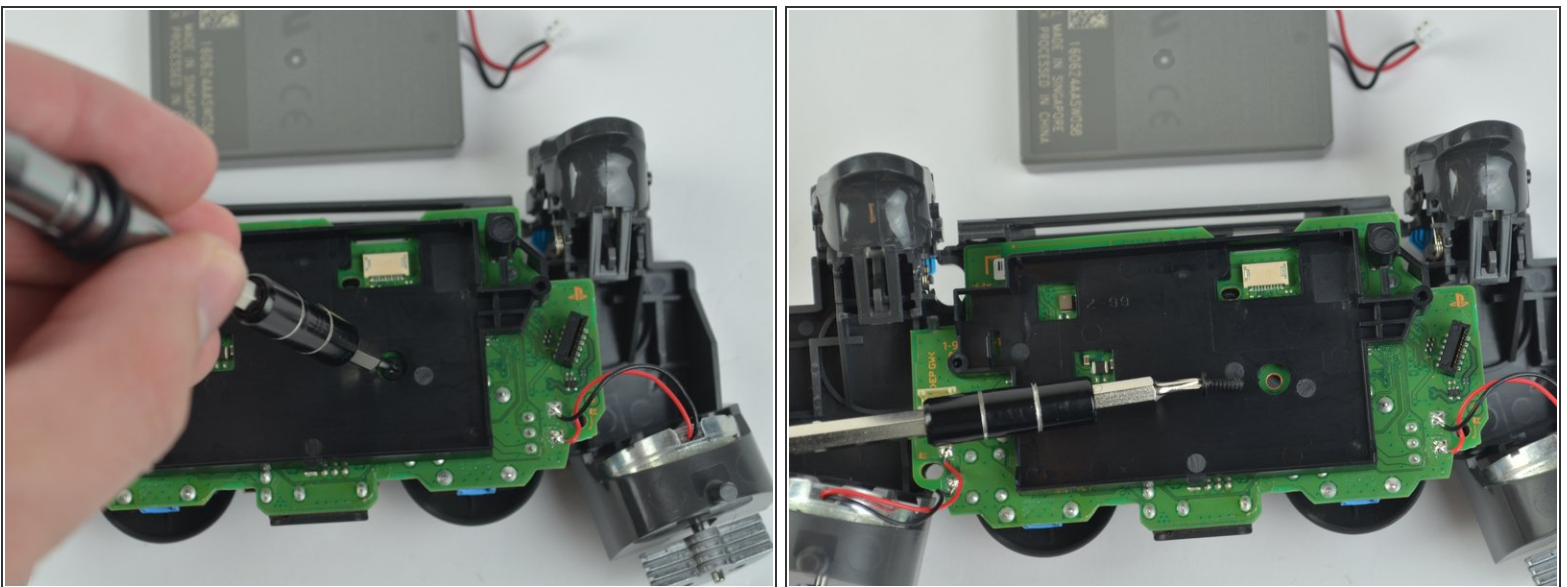

- Remove the 6.43mm screw connecting the motherboard to the inner workings of the controller, using a Phillips-Head screwdriver.

Step 5

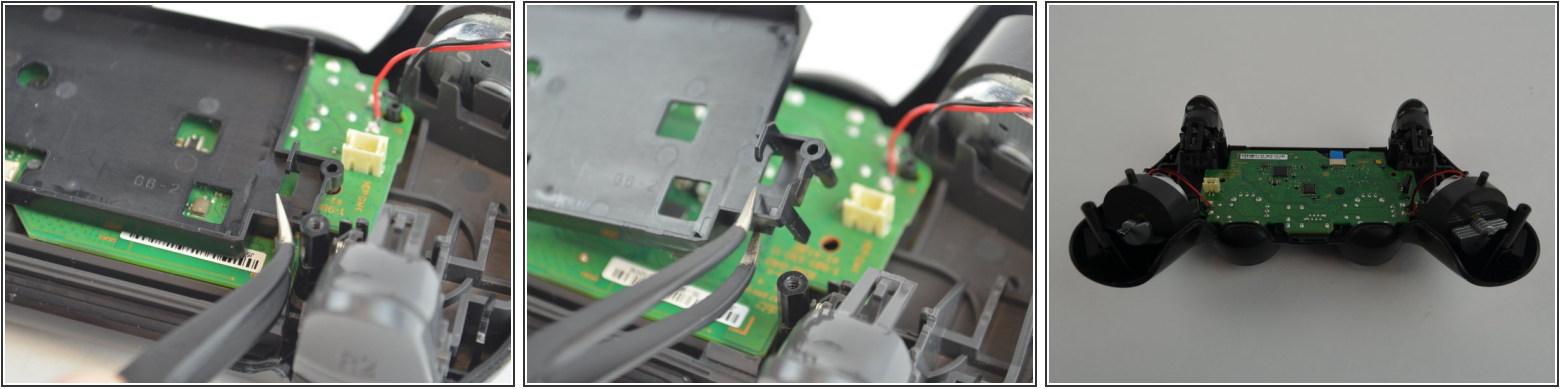

- Unhook the battery case from the motherboard, and pull it off.

To reassemble your device, follow these instructions in reverse order.