 




Replacing a Dell Inspiron 14R (Model N4010) LCD

How to replace a broken/malfunctioning LCD on a Dell Inspiron 14R (Model N4010).

Written By: nicksears

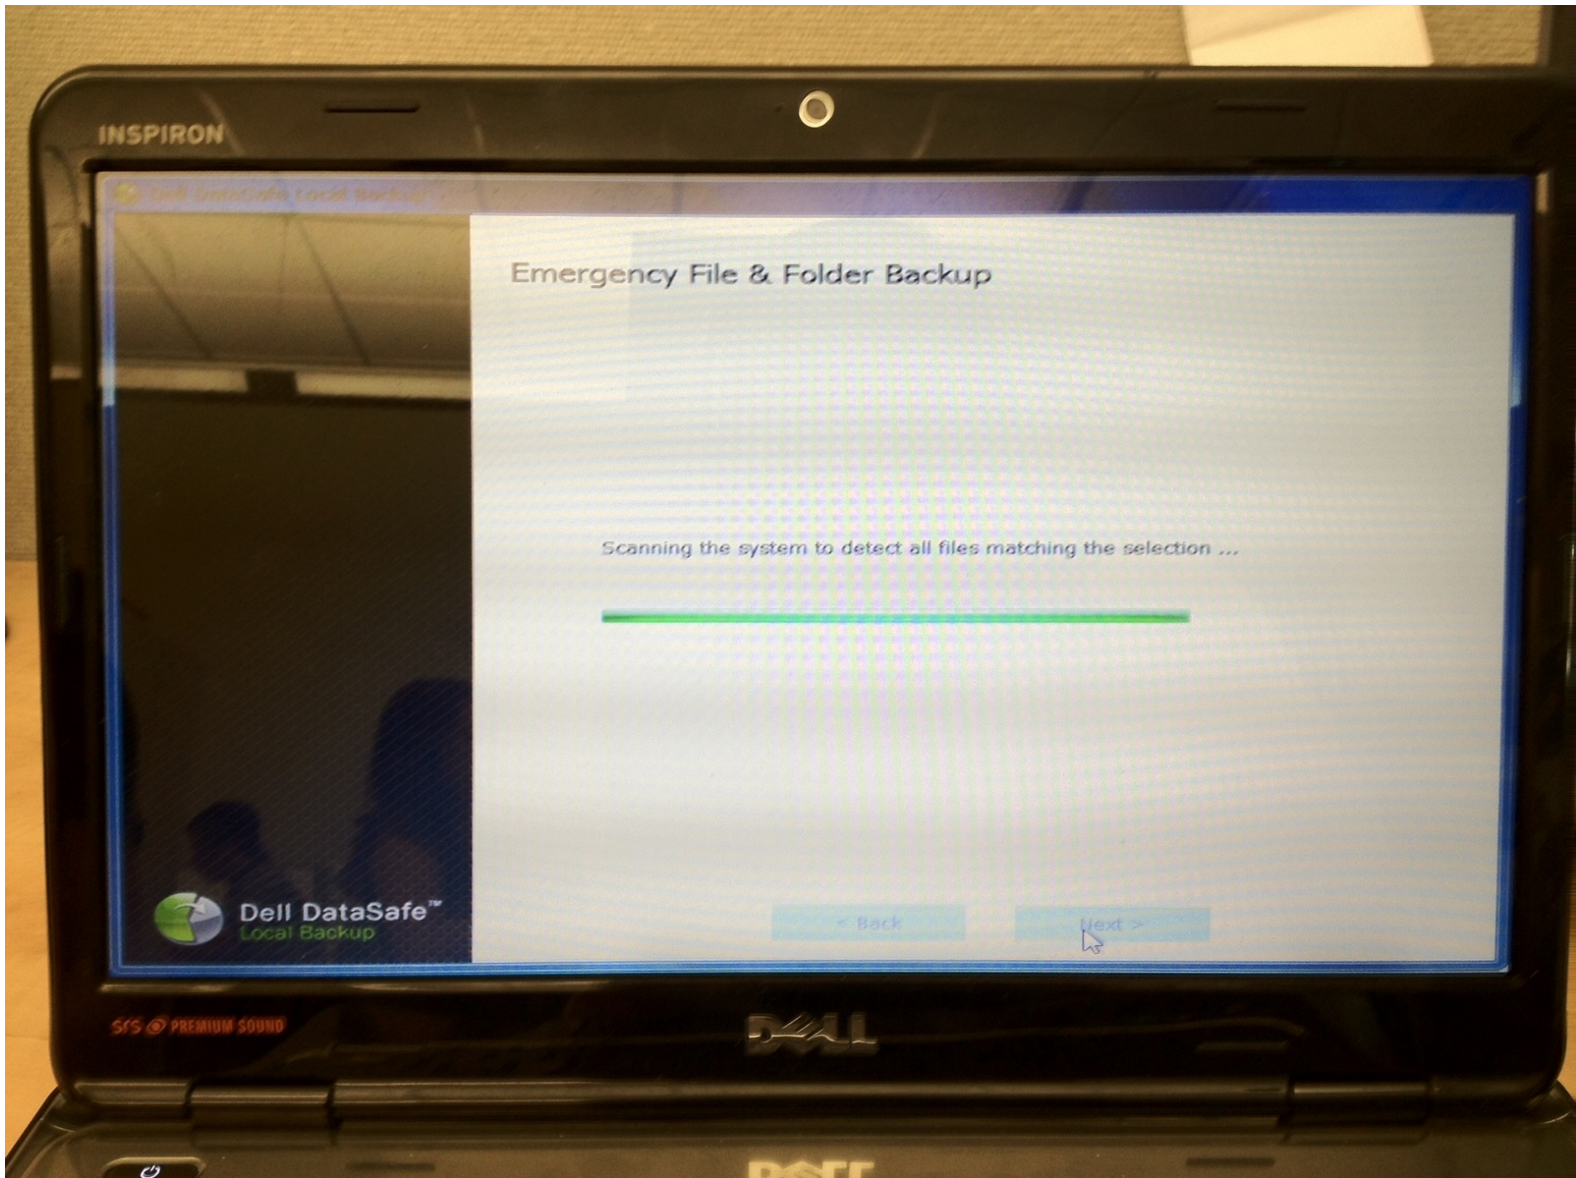


INTRODUCTION

I'll walk through disassembling the laptop display, troubleshooting possible problems, and installing the new display.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — LCD

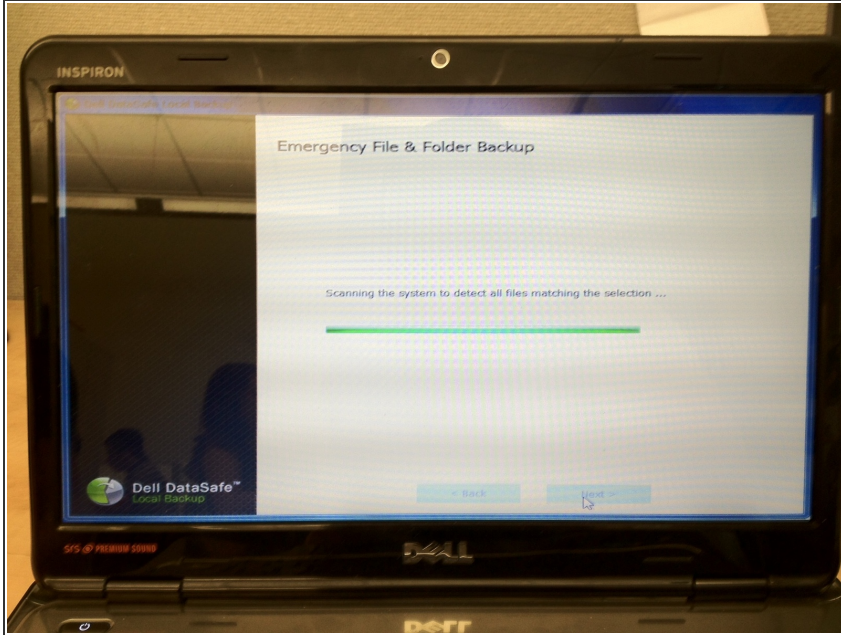

- **BACKUP!** I was able to get the screen to work long enough to back up, but you may have to hook your laptop up to an external display to do so. Always backup before taking apart your laptop, or risk losing everything!

Step 2



- Begin by taking the plastic spudger and wedging apart the plastic bezel around the screen.

Step 3



- Begin by taking the plastic spudger and wedging apart the plastic bezel around the screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 11:09:39 AM.