




# Lenovo ThinkPad X61 Hard Drive Replacement

You can use this guide to replace the hard drive.


Written By: Ryan McCarthy

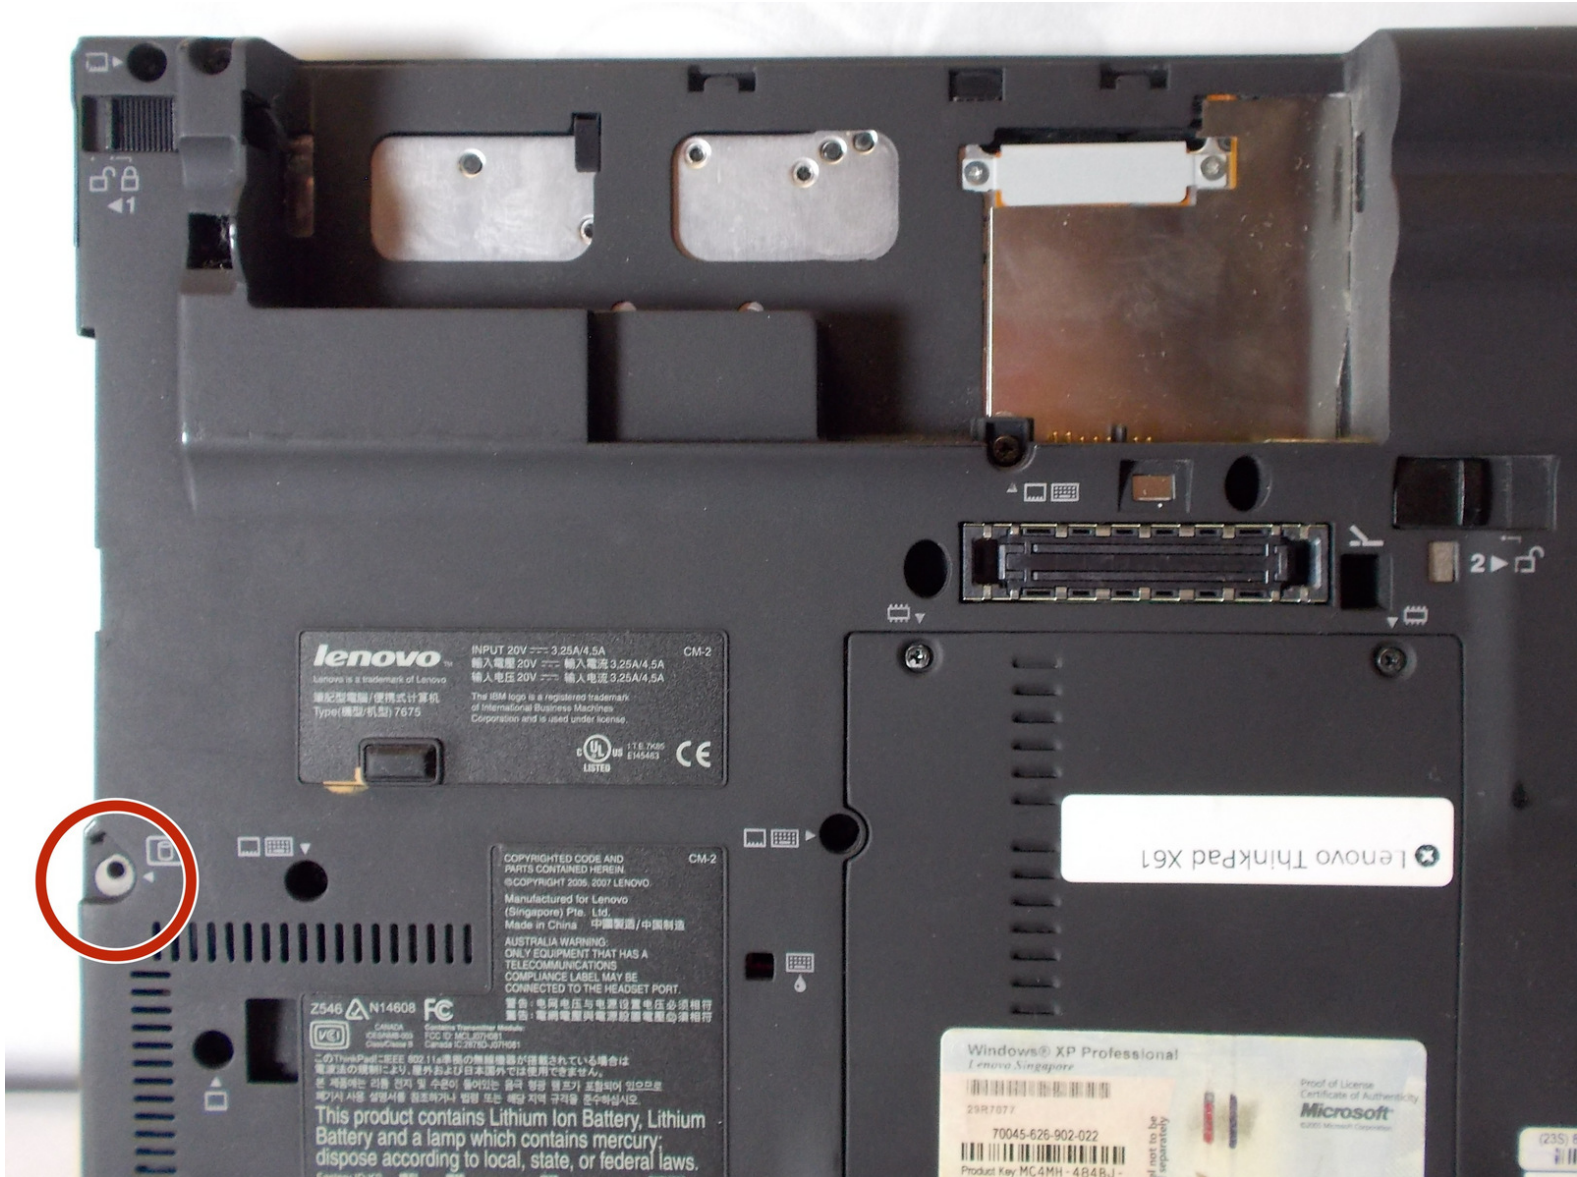

 **TOOLS:**


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Hard Drive

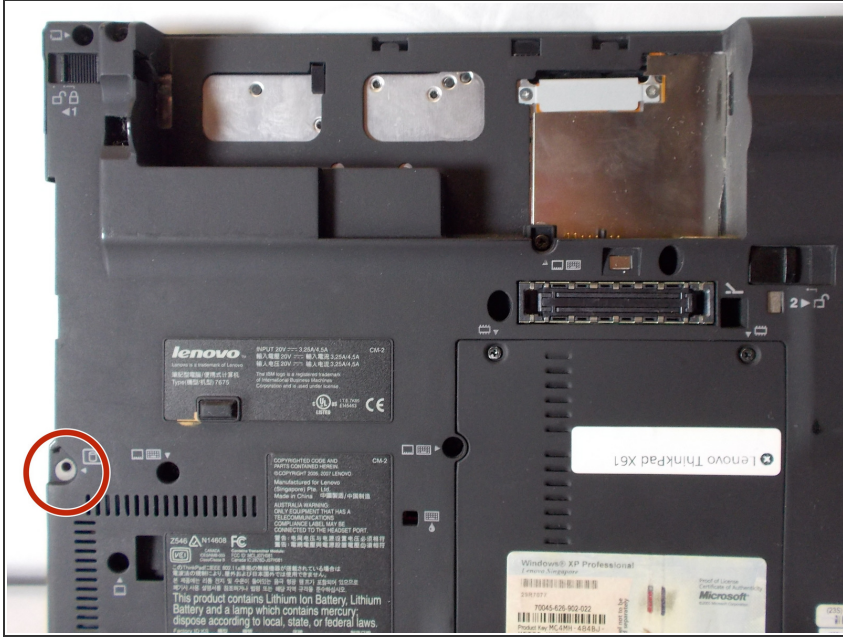

- First flip the device so its bottom side is face up, and locate the Philip #00 screw that is marked in the image.

## Step 2

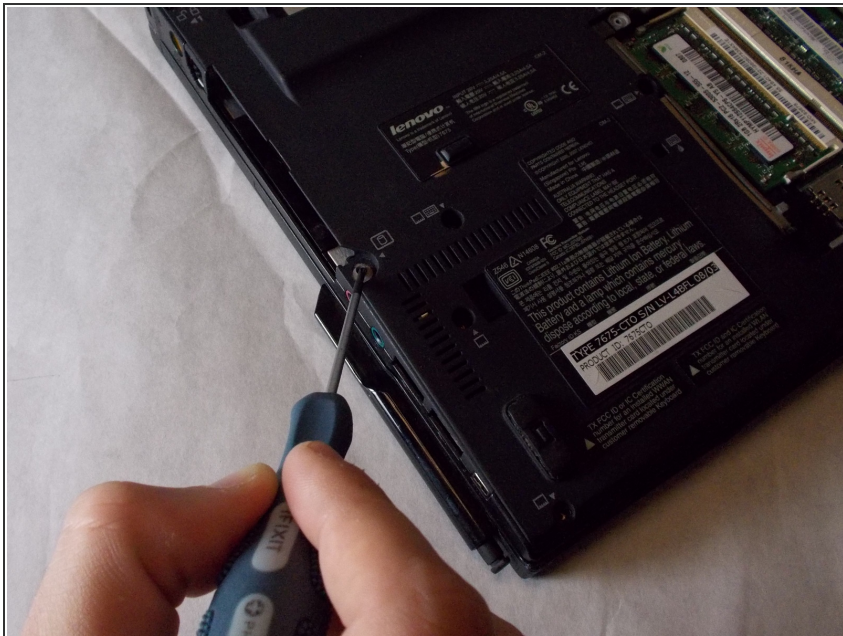

- Take out the screw that you have located in step 1.
- You can now remove the solid state drive and replace it with a new one.

To reassemble your device, follow these instructions in reverse order.