




Skateboard Skateboard Trucks Replacement

This guide will help you correctly install the trucks for your skateboard.

Written By: Cameron Nye

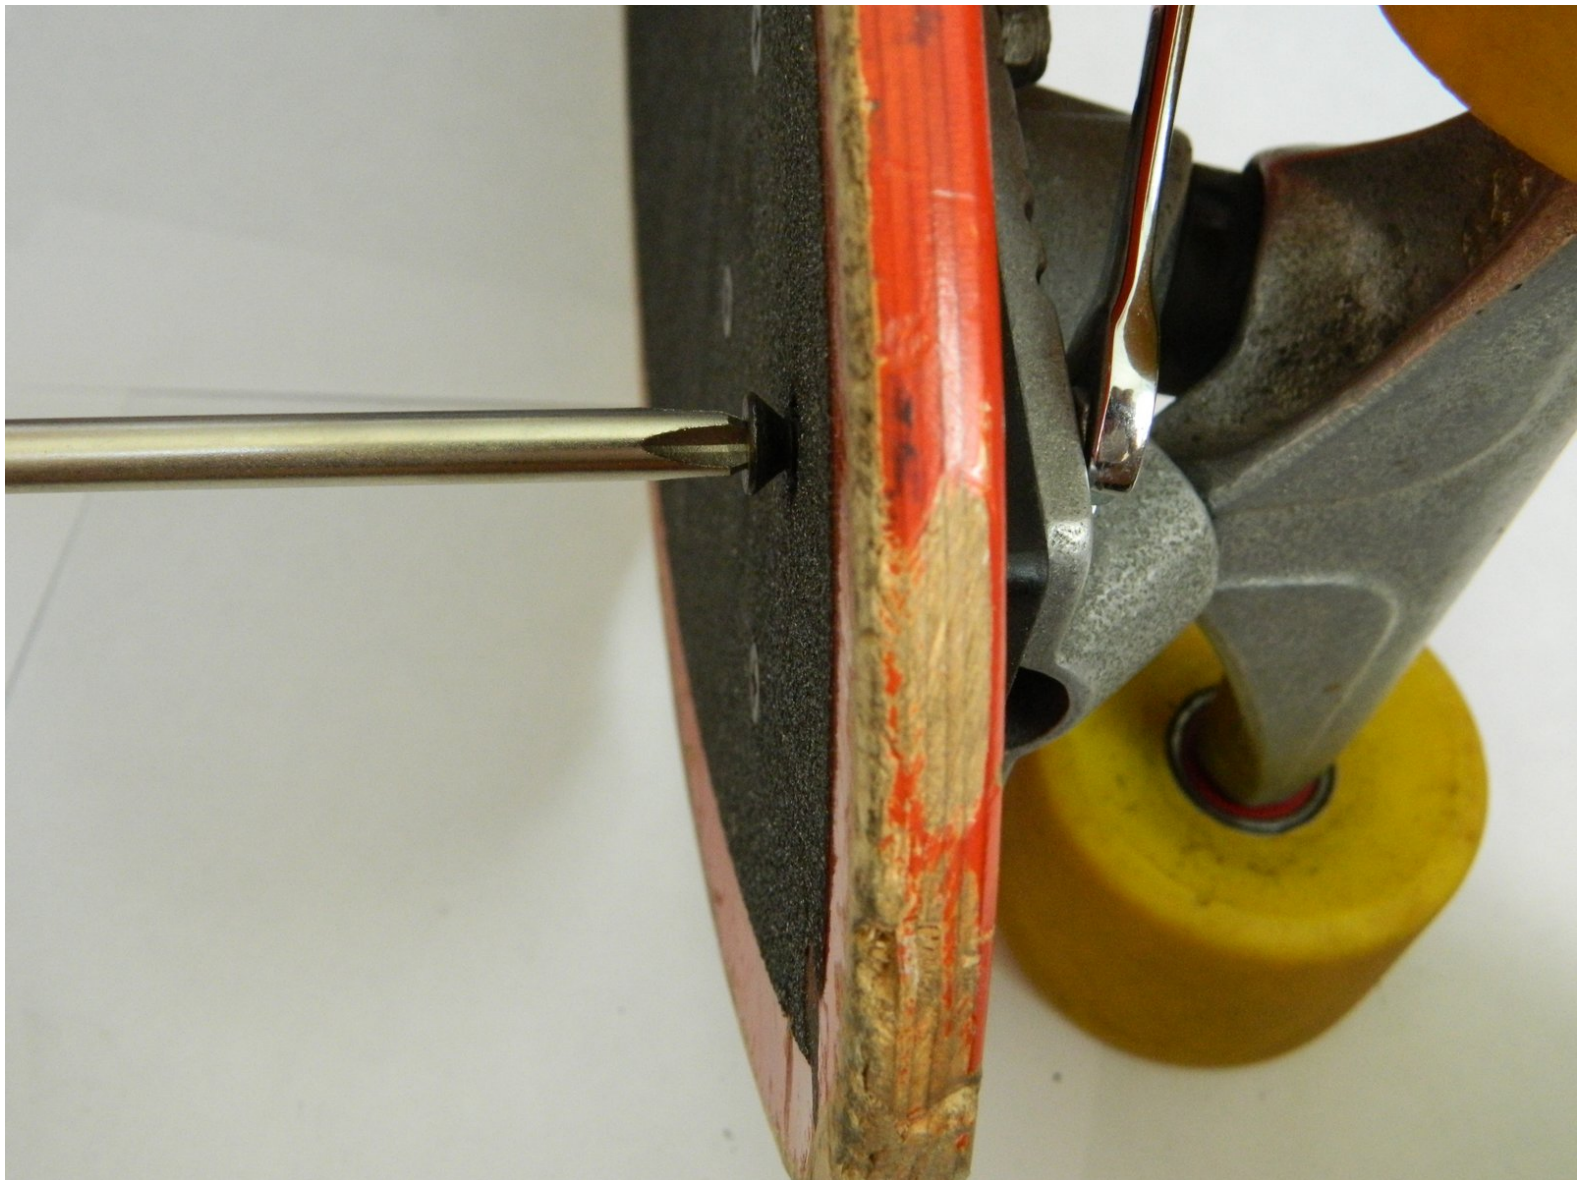

INTRODUCTION

Be sure that you have installed grip tape on your board before installing your skateboard trucks. If you have not, please see the [Grip Tape Application](#) guide. Also be aware of the type of hardware you have. This will decide whether you need an Allen Wrench or a Phillips Head Screwdriver.



TOOLS:

- [3/8" Wrench](#) (1)
- [Hex Key/Allen Wrench](#) (1)
- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Skateboard Truck](#) (2)
- [Set of Hardware](#) (1)

Step 1 — Skateboard Trucks



- Insert bolt hardware through the factory drilled holes from the top side of the skateboard.
- If you have a riser and would like to install it, please reference the [Wheel Bite Prevention](#) guide.

Step 2




- Slide the truck onto the four protruding bolt hardware screws, while using your hand to prevent the screws from popping out the top of the skateboard.

Step 3



- Hand tighten the nut hardware onto all four bolts.

Step 4

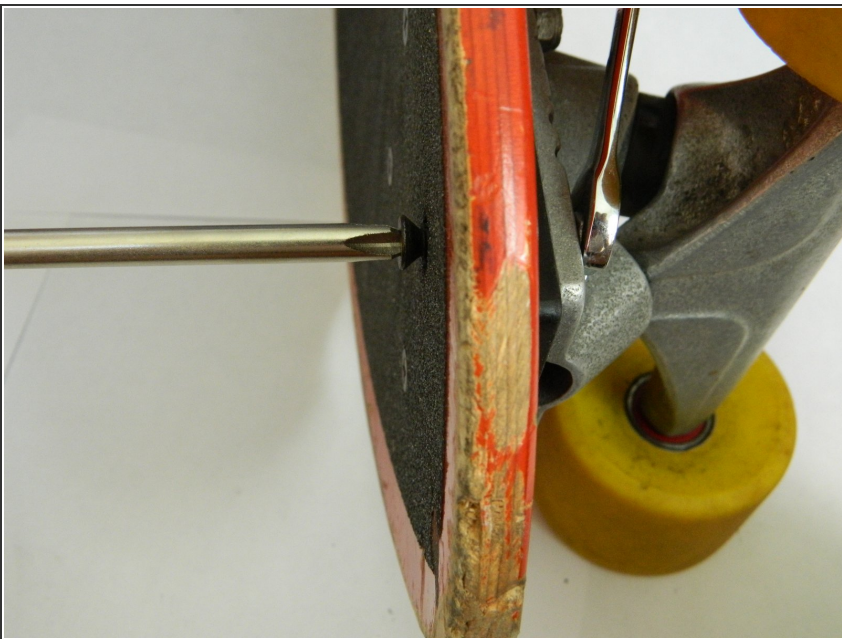

- While holding the nuts on the bottom side of the skateboard in place with the 3/8" wrench, tighten the screws from the top side of the skateboard with a screwdriver. Tighten the screws in a diagonal pattern until the head of the screw sinks slightly into the grip tape.
- Repeat steps 1 - 6 to install the second truck.

To uninstall your trucks, simply follow these steps in reverse order. To continue assembling your skateboard deck, see the [Wheel Installation](#) guide.

This document was last generated on 2019-08-21 05:49:20 PM.